

# Operating Instructions

Breathing Air Compressor

**LW SC-180 E**

**LW SC-250 E**



Sample photo



## SERVICE INFORMATION / WARRANTY

A

### Product information

\_\_\_\_\_

Type designation

\_\_\_\_\_

Serial number

\_\_\_\_\_

Date of construction

### Purchase information

\_\_\_\_\_

Purchase date

\_\_\_\_\_

First commissioned on

\_\_\_\_\_

Warranty period

\_\_\_\_\_

Dealer's stamp

### Warranty

L&W will uphold warranty claims made during a period of 12 months from the invoice date.

If the product was purchased from an official L&W dealer, the date on the dealer's invoice is valid.

Warranty claims can only be made on presentation of the original invoice.

Should verifiably defective parts have been delivered, we will decide to either replace the parts or repair them. The resulting transport and assembly costs will be invoiced.

No reduction of the purchase price or changes to the contract can be made. The parts for which a claim is being made should be kept safe by the purchaser and, when requested, sent to us at their cost. Replaced parts become the property of L&W. If maintenance work is carried out without our knowledge or permission by the purchaser or a third party, we are absolved from any liability for warranty claims. As a matter of principle, warranty claims can only be made by the initial purchaser.



## CHAPTER OVERVIEW

---

**Operating Instructions** .....

**A**

....

**B**

**Spare Parts Lists** .....

**C**

**Options (if equipped)**.....

**D**

**Attachment** .....

**E**

### Manufacturer in terms of 2014/68/EU

The full name and address of the manufacturer is:

Lenhardt & Wagner GmbH

An der Tuchbleiche 39

68623 Hüttenfeld / Germany

Phone: +49 (0) 62 56 - 85 88 0 - 0

Fax: +49 (0) 62 56 - 85 88 0 - 14

E-Mail: [service@lw-compressors.com](mailto:service@lw-compressors.com)

Internet: [www.lw-compressors.com](http://www.lw-compressors.com)





## TABLE OF CONTENTS

A

### General Information and Technical Data

General Information / Description of Warning Symbols .....	6
Scope of Delivery .....	7
Technical Data .....	8
Unit Assembly .....	9
Switchboard .....	10
Flow chart .....	11

### Safety Precautions

Intended Use / Operators .....	13
Safety instructions on the unit .....	14
General Safety Precautions .....	15
Unit customised safety notices .....	16
Maintenance instructions .....	17
Transportation instructions / Safety regulations .....	18

### Installation

Installation in closed rooms .....	20
Dimensions .....	21
Minimum distances .....	22
Ventilation .....	23
Electrical Installation .....	24 - 25

### Operation

Important operation instructions .....	27
First commissioning .....	28 - 30
Daily commissioning .....	31
Filling procedure .....	32
Switch off the compressor .....	33

Remedying faults .....	34 - 38
------------------------	---------

### Maintenance and Service

Service, Repair and Maintenance .....	40
Maintenance Lists / Maintenance Intervals .....	41 - 44
Check V-belt tension / Tension V-belt .....	45
Compressor lubrication / Check oil level .....	46
Oil change .....	47
Final pressure switch .....	48
Automatic condensation dump system .....	49



## TABLE OF CONTENTS

---

### Wartung und Instandhaltung - Fortsetzung

Oil / Water separators 2nd stage - maintenance .....	50
Filter housing / Filter cartridge .....	51
Filter cartridge change.....	52
Filter housing - Maintenance .....	53
Pneumatic condensate valve - maintenance .....	54
Inlet filters / Check or change filter inlet .....	55
Cylinder heads and valves .....	56
Replace inlet and outlet valve 1st stage .....	57 - 58
Replace inlet and outlet valves 2nd and 3rd stage .....	59
Safety valves .....	60
Pressure maintaining / non return valve .....	61
Safety valve test .....	62
Leak test .....	63
Pressure gas vessel test .....	64

### Maintenance records and Storage

Maintenance records .....	66 - 70
De-conservation, commissioning .....	71
Transportation instructions / Disposal .....	72

A

## GENERAL INFORMATION

---

### General Information

We strongly recommend reading this manual thoroughly prior to operation and follow all the safety precautions precisely. Damage resulting from any deviation from these instructions is excluded from warranty and liability for this product. Carry out other commissioning steps only if you have fully understood the following contents.

Before commissioning and using the unit, carry out all the essential preliminary work and measures concerning legal regulations and safety. These are described on the following pages of this operation manual.

A

### Description of marks and warning signs

The following warning signs are used in this document to identify the corresponding warning notes which require particular attention by the user. The warning signs are defined as follows:



#### Caution

Indicates an imminently hazardous situation which, if not avoided, could result in serious injury, physical injury or death.



#### Warning

Indicates a potentially hazardous situation which, if not avoided, could result in physical injury or damage to the product or environment.



#### Note

Indicates additional information on how to use the unit.

## DESCRIPTION

---

### Scope of Delivery

Compressors are provided in different equipped versions.

### Versions

#### Filling pressure versions:

- PN 225 bar
- PN 330 bar
- PN 225 / 330 bar

### Specifications

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>• Elektro motor</li> <li>• Powder coated steel housing (RAL 7016)</li> <li>• Automatic condensate drain</li> <li>• Automatic stop at final pressure</li> <li>• Hour counter</li> <li>• Main-, Start/ Stop– and condensate test buttons, as well as emergency stop switch</li> <li>• 2x Filling hose c/w filling valve</li> <li>• Safety switch</li> <li>• Pressure maintaining and non return valve</li> </ul> | <ul style="list-style-type: none"> <li>• All pistons c/w steel piston rings</li> <li>• Oil- / Water separators after 2nd and 3rd stage</li> <li>• Safety valves after each stage</li> <li>• 3 x concentric suction/pressure valves</li> <li>• Filling pressure to your choice (200 or 300 bar)</li> <li>• Connections to your choice (DIN 200 bar or 300 bar, CGA 200 bar or 300 bar and INT)</li> <li>• Breathing air purification an accordance to EN 12021</li> </ul> |
|---|--|

### Options

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>• Auto start system</li> <li>• Up to 2 additional filling hoses available</li> <li>• 200 and 300 bar parallel filling pressures</li> <li>• Phase monitoring c/w shut down at wrong direction of rotation</li> <li>• Indicator light - service interval</li> <li>• Ambient temperature monitoring</li> <li>• Motor protection switch</li> <li>• Oil pressure gauge</li> <li>• Intermediate pressure gauges</li> <li>• Oil pressure monitoring c/w auto shut down</li> </ul> | <ul style="list-style-type: none"> <li>• Low pressure oil pump and filter</li> <li>• Cylinder head temperature monitoring with auto shut down</li> <li>• Oil temperature display with auto shut down</li> <li>• 1.7l filter housing</li> <li>• Puracon filter monitoring (Auto shut down also available)</li> <li>• Remote Tab Control - RTC</li> <li>• Additional high pressure outlet</li> <li>• CEE plug</li> <li>• Special voltages / frequencies on request</li> </ul> |
|---|---|

## DESCRIPTION

### Technical Data




A

Technical Data	LW SC-180 E	LW SC-250 E
Capacity [l/min]:	180	250
Max. Operating Pressure [bar]:	350	350
RPM [min <sup>-1</sup> ]:	1505	1710
Number of Pressure Stages:	3	3
Cylinder Bore 1st Stage [mm]:	Ø 72	Ø 75,5
Cylinder Bore 2nd Stage [mm]:	Ø 32	Ø 32
Cylinder Bore 3rd Stage [mm]:	Ø 14	Ø 14
Medium:	Compressed Air / Breathing Air	
Intake Pressure:	atmospheric	
Oil Pressure [bar]:	0,6 -0,4	0,6 -0,4
Oil Capacity [l]:	0,8	0,8
Intake Temperature [°C]:	-20 < +45	-20 < +45
Ambient Temperature [°C]:	+5 < +45	+5 < +45
Cooling Air Volume [m <sup>3</sup> /h]:	> 1200	> 1650
Voltage:	400 V / 3-Phasen / 50 Hz	
Protection Class Drive Motor:	IP 54	IP 54
Drive Power [kw] 50 Hz / 60 Hz:	4,0	5,5
RPM Motor [min <sup>-1</sup> ]:	2890	2890
Start:	Star/Delta	
Noise level from a distance of 1 m [dB(A)]:	61	61
Dimensions W x D x H [mm]:	940 x 540 x 1200	
Weight [kg]:	ca. 263	ca. 265
Content Volume Filter housing [l]:	0,69	0,69

## DESCRIPTION

### Unit Assembly

A

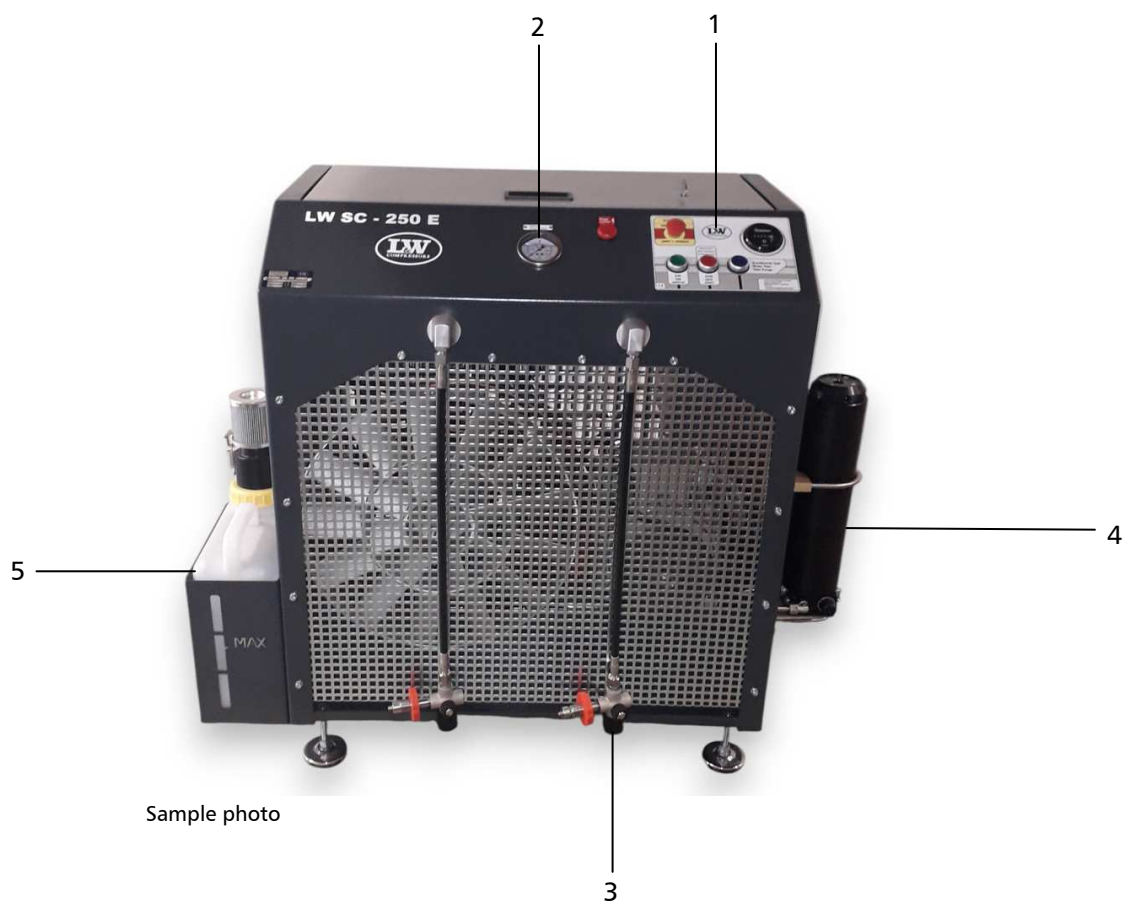


Sample photo

No.	Designation
1	Switchboard
2	Filling pressure gauge
3	Filling valve
4	Filter Housing
5	Condensate container (optional)

## DESCRIPTION

### Switchboard


A

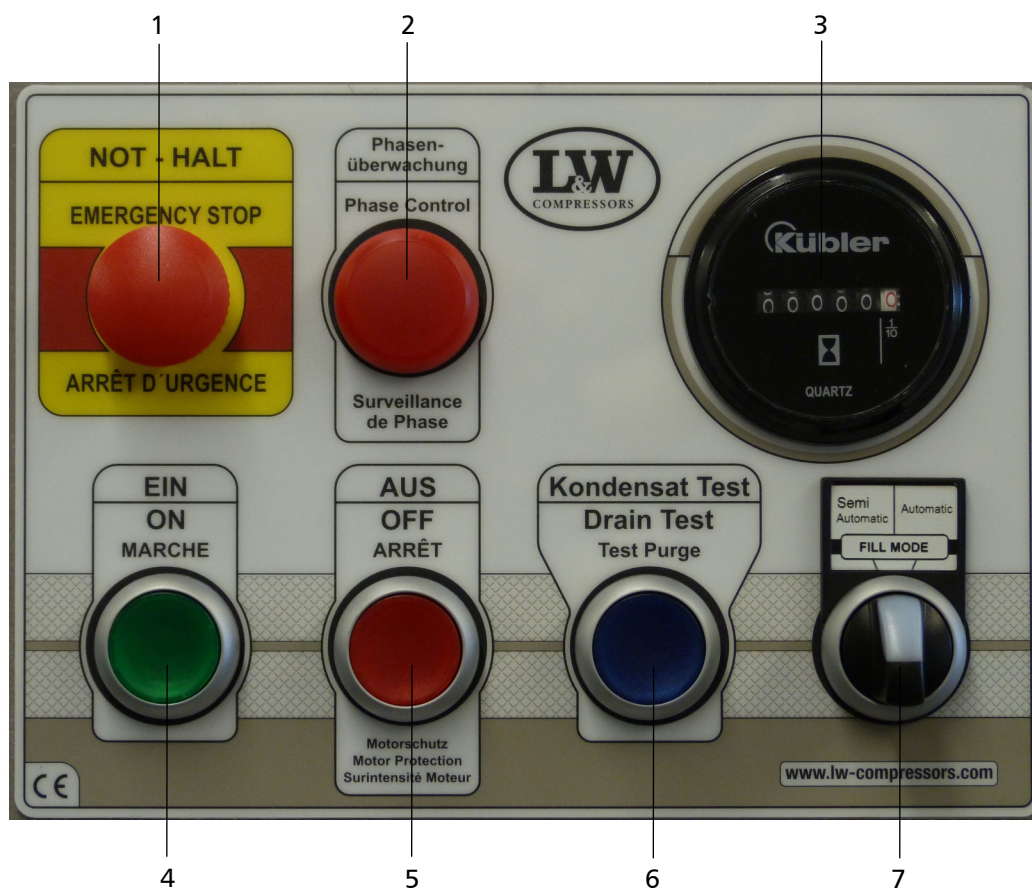

No.	Designation
1	Emergency shut-off switch
2	Phase control
3	Hour counter
4	ON button
5	OFF button
6	Drain test button (Option)
7	Selector switch auto start function (Option)

## DESCRIPTION

### Flow chart

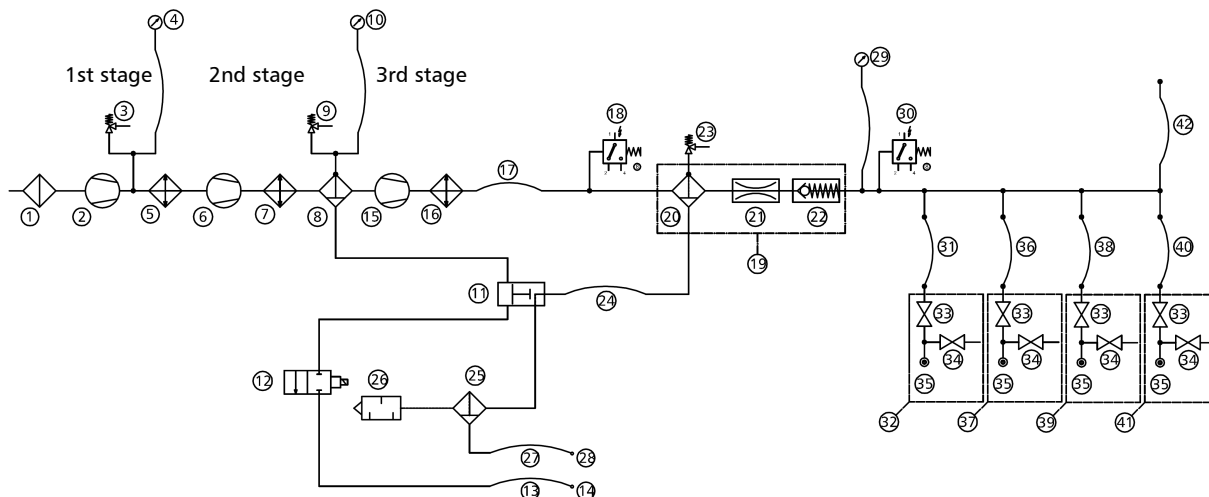

- |  |   |
|--|---|
| 1. Ansaugfilter / Air Intake Filter                                      | 23. Sicherheitsventil 3. Stufe / Safety Valve 3rd Stage   |
| 2. 1. Verdichterstufe / 1st Pressure Stage                               | 24. Hochdruckschlauch / HP-Hose   |
| 3. Sicherheitsventil 1. Stufe / Safety Valve 1st Stage                   | 25. Öl-/Wasserabscheider / Oil/Water Separator  |
| 4. Zwischendruckmanometer (Option) / Interstage Pressure Gauge (Option)  | 26. Schalldämpfer / Silencer  |
| 5. Wärmetauscher / Heat Exchanger  | 27. Kondensatablassschlauch / Condensate Drain Hose   |
| 6. 2. Verdichterstufe / 2nd Pressure Stage                               | 28. Schottverschraubung 8L / Bulkhead Fitting 8L  |
| 7. Wärmetauscher / Heat Exchanger  | 29. Manometer / Gauge   |
| 8. Öl-/Wasserabscheider / Oil/Water Separator                            | 30. Druckschalter „Auto Start“ (Option) / Pressure Switch „Auto Start“ (Option)   |
| 9. Sicherheitsventil 2. Stufe / Safety Valve 2nd Stage                   | 31. Füllschlauch / Filling Hose   |
| 10. Zwischendruckmanometer (Option) / Interstage Pressure Gauge (Option) | 32. Kreuzventil / Filling Valve „Cross Design“  |
| 11. Pneum. Kondensatventil / Pneumatic Condensate Valve                  | 33. Füllspindel / Filling spindle   |
| 12. Magnetventil / Solenoid Valve  | 34. Entlüftungsspindel / Vent spindle   |
| 13. Kondensatablassschlauch / Condensate Drain Hose                      | 35. Flaschenanschluss Flaschenanschluss nach Wahl (DIN 200 oder 300bar, CGA 200bar oder 300bar und INT) / Tank connector (DIN 200bar or 300bar, CGA 200bar or 300bar and INT) |
| 14. Schottverschraubung 8L / Bulkhead Fitting 8L                         | 36. Füllschlauch / Filling Hose   |
| 15. 3. Verdichterstufe / 3rd Pressure Stage                              | 37. Kreuzventil / Filling Valve „Cross Design“  |
| 16. Wärmetauscher / Heat Exchanger                                       | 38. Füllschlauch (Option) / Filling Hose (Option)   |
| 17. Hochdruckschlauch / HP-Hose  | 39. Kreuzventil (Option) / Filling Valve „Cross Design“ (Option)  |
| 18. Druckschalter „Auto Stopp“ / Pressure Switch „Auto Stop“             | 40. Füllschlauch (Option) / Filling Hose (Option)   |
| 19. Filtergehäuse 0,69 l / Filter Housing 0.69 ltr.                      | 41. Kreuzventil (Option) / Filling Valve „Cross Design“ (Option)  |
| 20. Öl-/Wasserabscheider / Oil/Water Separator                           | 42. Hochdruckschlauch (Option) / HP-Hose (Option)   |
| 21. Druckhalteventil / Pressure Maintaining Valve                        |   |
| 22. Rückschlagventil / Non-Return Valve                                  |   |



A

## SICHERHEITSHINWEISE



## **SAFETY PRECAUTIONS**

---

### **Intended Use**

Only use the unit in perfect condition for its intended purpose, safety and intended use and observe the operating instructions! In particular disorders that may affect safety have to be eliminated immediately!

Use the unit exclusively for the determined medium (see "Technical Data"). Any other use that is not specified is not authorized. The manufacturer/supplier shall not be liable for any damages resulting from such use. Such risk lies entirely with the user. Authorization for use is also under the condition that the instruction manual is complied with and inspection and maintenance requirements are enforced.

No change and modification to the unit can be made without the written agreement of the manufacturer. The manufacturer is not liable for damage to persons or property resulting from unauthorised modifications.

### **Operators**

Target groups in these instructions;

#### **Operators**

Operators are persons who are authorized and briefed for the use of the compressor.

#### **Qualified personnel**

Qualified personnel are persons who are entitled to repair, service, modify and maintain the system.



#### **Warning**

Only trained personnel are permitted to work on the unit!



#### **Warning**

Work on the electrical equipment on / with the machine / unit may only be carried out by qualified electricians.


## SAFETY PRECAUTIONS

---

### Safety instructions on the unit

Importance of notes and warning signs that are affixed to the compressor according to the application or its equipment.

A

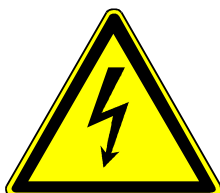

**Warning**

High voltage!



**Note**

Ensure correct direction of rotation!

## **SAFETY PRECAUTIONS**

---

### **General Safety Precautions**

- Read the Operating Instructions of this product carefully prior to use.
- Strictly follow the instructions. The user must fully understand and strictly observe the instructions. Use the product only for the purposes specified in the intended use section of this document.
- Do not dispose the operating instructions. Ensure that they are retained and appropriately used by the product user.
- Only trained and competent personnel are permitted to use this product.
- Comply with all local and national rules and regulations associated with this product.
- Only trained and competent personnel are permitted to inspect, repair and service the product.
- Only authentic L&W parts and accessories may be used for maintenance work. Otherwise, the proper functioning of the product may be impaired.
- Do not use faulty or incomplete products. Do not modify the product.
- Inform L&W in the event of any product or component fault or failure.
- The quality of the air supply must meet EN 12021 specifications for breathing air.
- Do not use the product in areas prone to explosion or in the presence of flammable gases. The product is not designed for these applications. An explosion might be the result if certain conditions apply.

**A**

## **SAFETY PRECAUTIONS**

---

### **Unit customised safety notices**

#### **Organisational measures**

- In addition to the instruction manual, observe and comply with universally valid legal and other obligatory regulations regarding accident prevention and environment protection.
- In addition to the instruction manual, provide supplementary instructions for supervision and monitoring duties taking into consideration exceptional factors e.g. with regard to organisation of work, production, personnel employed.
- Supervise personnel's work in accordance with the instruction manual, taking into account safety and danger factors.
- Observe all safety and danger notices on the compressor and check readability and completeness.

#### **Safety instructions operation**

- Take measures to ensure that the machine is only taken into operation under safe and functional conditions. Only operate the compressor if all protective and safety equipment, e.g. detachable protective equipment, are provided and in good working order.
- Check the compressor at least once per day for obvious damage and defects. Inform the responsible department / person immediately if anything is not as it should be (including operation performance). Shut down the machine immediately if necessary and lock it.
- In case of malfunction, stop the compressor immediately and lock it. Repair malfunctions immediately.
- If there is a failure in the electric energy supply, shut the machine / unit down immediately.
- Ensure safe and environmentally friendly disposal of consumables and old parts.
- The stipulated hearing protectors must be worn.
- Soundproofing equipment on the compressor has to be activated in safety function during operation.
- When handling with fats, oils and other chemical agents, observe the note for the product-related safety.

## **SAFETY PRECAUTIONS**

---

### **Maintenance instructions**

- Hoses have to be checked by the operator (pressure and visual inspection) at reasonable intervals, even if no safety-related defects have been detected.
- Immediately repair any damage. Escaping compressed air can cause injury.
- Depressurise system and pressure lines before beginning repair work.
- Pressurised air lines must be laid and mounted by qualified personnel. Connections must not be mixed up. Fittings, length and quality of the piping must correspond to requirements.
- Adjustment, maintenance and inspection activities and keep appointments, including information on replacement parts / equipment, prescribed in the operating instructions have to be respected.
- If the machine / equipment is completely off during maintenance and repair work, it must be protected against unexpected restart. Turn off main control device and remove the key and/or display a warning sign on the main switch.
- The machine and especially the connections and fittings should be cleaned from oil, fuel and maintenance products at the beginning of the maintenance / repair. Do not use aggressive cleaning agents. Use fibre-free cleaning cloths.
- Switch off compressor and clean with a slightly damp cloth. Remove dirt from cooling pipes by using a brush.
- After cleaning, examine all pipes for leaks, loose connections, chafing and damage. Immediately eliminate any faults.
- Always retighten any screw connections loosened for maintenance or repair work.
- If it is necessary to remove safety devices for maintenance and repair work, these must be replaced and checked immediately after completion of the maintenance or repair work.
- The electrical equipment of the compressor must be regularly checked. Defects, such as loose screw connections or burnt wires, must be immediately rectified by electrically skilled personnel.
- Only personnel with particular knowledge and experience with pneumatics may carry out work on pneumatic equipment.
- Only personnel with particular knowledge and experience in gas equipment may carry out work on gas equipment.

**A**

## **SAFETY PRECAUTIONS**

---

### **Transportation instructions**

- Parts which need to be dismantled for transport purposes must be carefully replaced and secured before taking into operation.
- The transport may only be carried out by trained personnel.
- For transportation, only use lifting devices and equipment with sufficient lifting power.
- Do not stand or work under suspended loads.
- Also separate from minor relocation machinery / system of any external energy supply. Before recommissioning, reconnect the machine to the mains according to regulations.
- When recommissioning, proceed according to the operating instructions..

### **Safety regulations**

- Inspections according to legal and local obligatory regulations regarding accident prevention are carried out by the manufacturer or by authorised expert personnel. No guarantees whatsoever are valid for damage caused or favoured by the non-consideration of these directions for use.

**A**



A

# INSTALLATION

## INSTALLATION

### Installation in closed rooms



#### **Danger**

No operation in explosion-hazard areas.

The unit is not approved for operation in areas prone to explosion.

#### **For installation in closed rooms, observe the following:**

- Install the unit horizontally and level. The floor must be vibration-free and capable of taking the load of the system weight.
- The compressor room must be clean, dry, dust free and as cool as possible. Avoid direct exposure to sunlight. If possible, install unit in such a manner that the compressor fan can intake fresh air from outside. Ensure adequate ventilation and exhaust air opening.
- When locating the compressor in rooms of less than 30 m<sup>3</sup> space where natural ventilation is not ensured or other systems having high radiation are operating in the same room, measures must be taken to provide artificial ventilation.
- Intake air must be free from noxious gas e.g. smoke, solvent vapours, exhaust fumes etc.
- Observe the specified operating temperature (see "Technical Data")!



#### **Hinweis**

- Intake air must be free from noxious gas e.g. smoke, solvent vapours and exhaust fumes. We recommend not to use the intake air inside the compressor housing. An intake hose would be recommendable!

#### **Approximate value - Diameter of intake hose depending on the length of the intake hose**

Pos.	Length of Intake Hose [m]	Diameter of Intake Hose [mm]
1	≤ 03	Ø 30
2	≤ 10	Ø 80
3	≤ 15	Ø 100
4	≤ 20	Ø 120



## INSTALLATION

### Dimensions

A

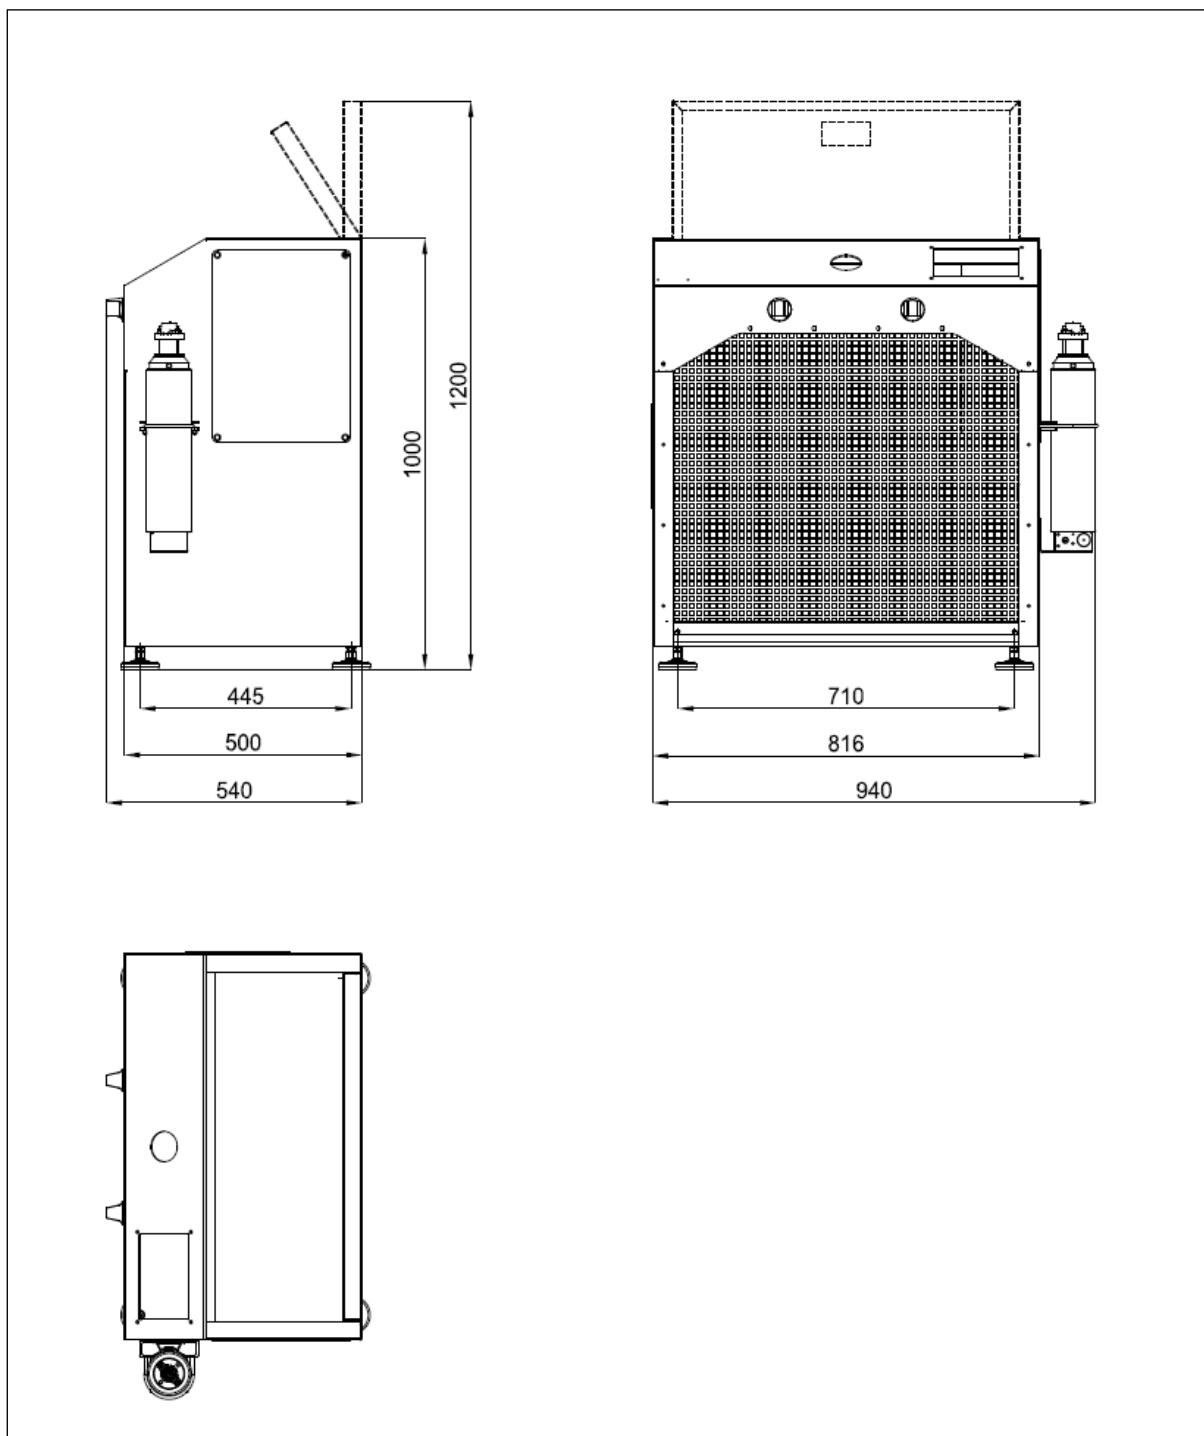


Fig. Dimensions

## INSTALLATION

### Minimum distances



#### Note

Minimum distances must be adhered!

- Make sure that the compressor always has a sufficient amount of fresh air available.
- To prevent serious damage, ensure that the cooling air flow can flow freely.
- The following minimum distances must be adhered:  
Front side min. 1500 mm, sides min. 500 mm, rear side min. 500 mm.  
Avoid anything in this area which can restrict the cooling air flow.

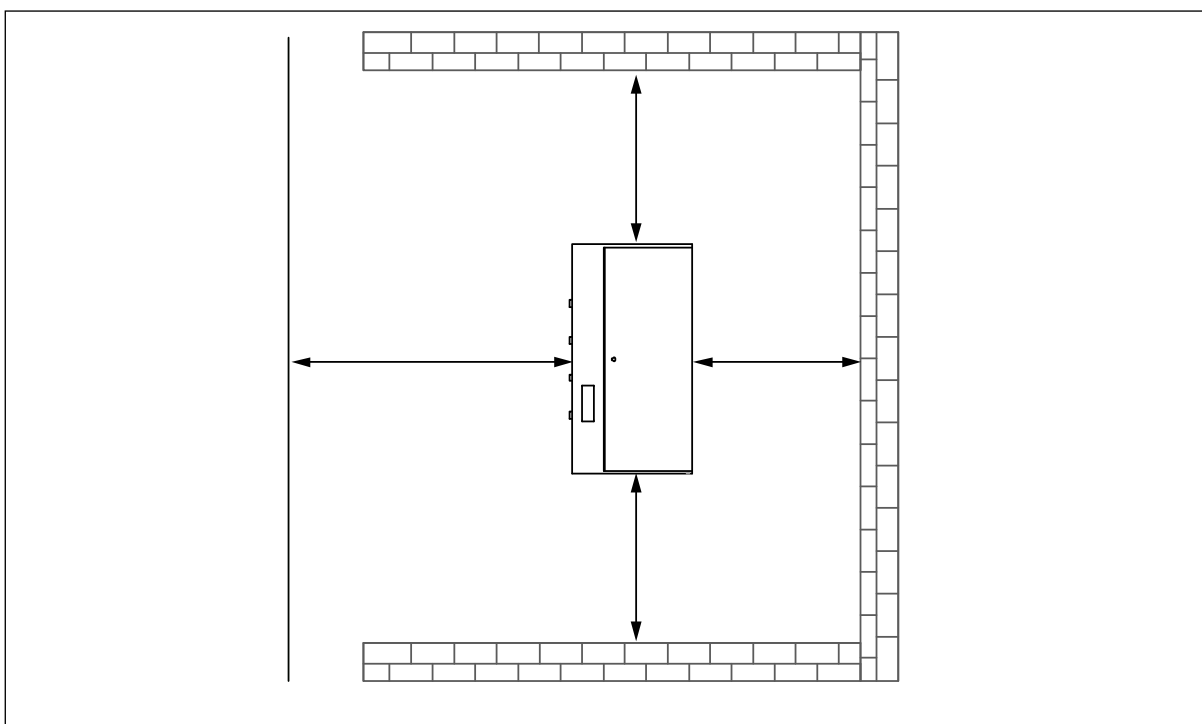


Fig. Minimum distances

## INSTALLATION

### Ventilation

- Make sure that the compressor always has a sufficient amount of fresh air available for cooling.
- To prevent serious damage, ensure that the cooling air flow can flow freely.
- The necessary cooling air flow can be calculated by using the following formula:  
 $300 \times \text{drive power [kW]} = \text{required cooling air flow [m}^3/\text{h]}$   
 Example 11kW motor:  $300 \times 11\text{kW} = 3300 \text{ m}^3/\text{h} = \text{required cooling air flow}.$
- The fan capacity for fresh air and warm air must meet at least the required cooling air flow.  
 The fans must have the same capacity.

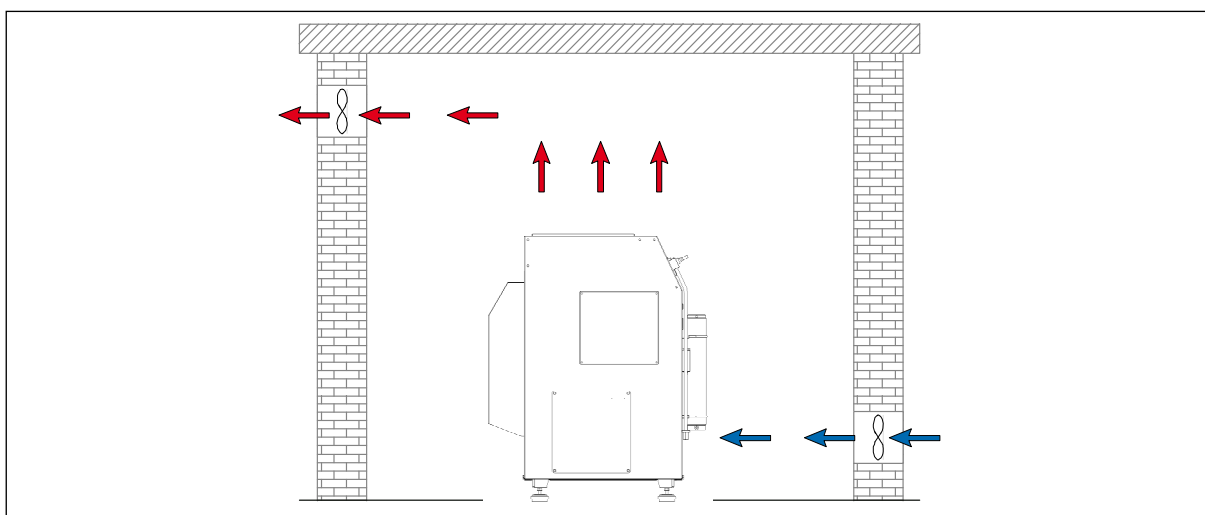


Fig. Ventilation through facade

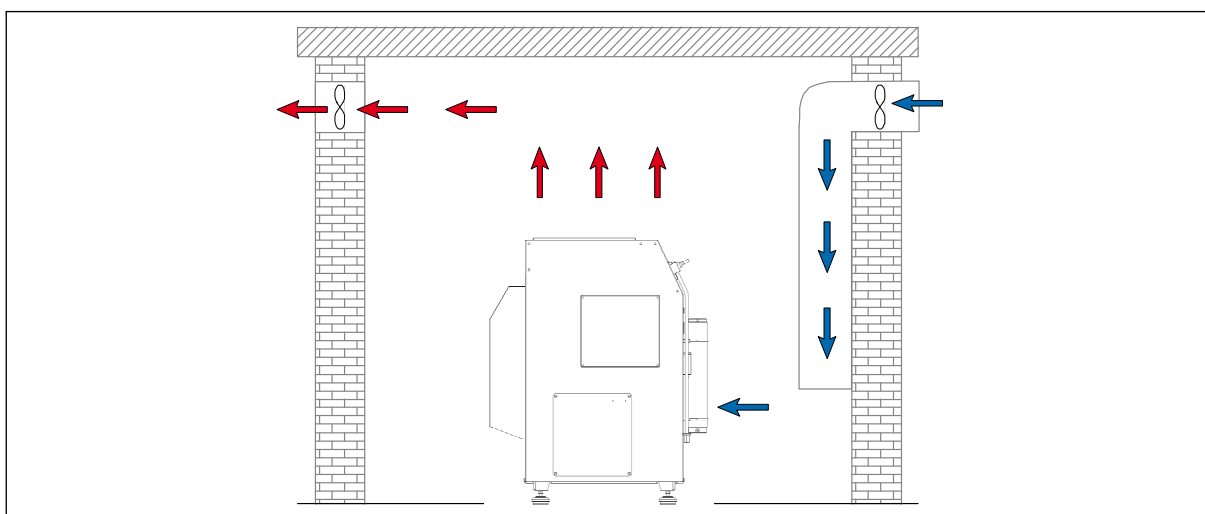


Fig. Ventilation via ventilation stack

## INSTALLATION

### Electrical Installation



#### Warning

Work on the electrical equipment on / with the machine / unit may only be carried out by qualified electricians.

For installation of electrical equipment, observe the following:

- If control devices are delivered by the factory, refer to the appropriate wiring diagram.
- Ensure correct installation of protective conductors.
- Check conformity of motor and control device tension and frequency with those of the electric network (see name plate on the compressor).
- The fusing should be done in accordance with the valid regulations of the responsible electricity supply company.
- When connecting the unit to the electrical supply, check the compressor direction of rotation (see chapter "Maintenance" -> Check turning direction).
- Fuse the motor correctly (see table; use slow-blow fuses).

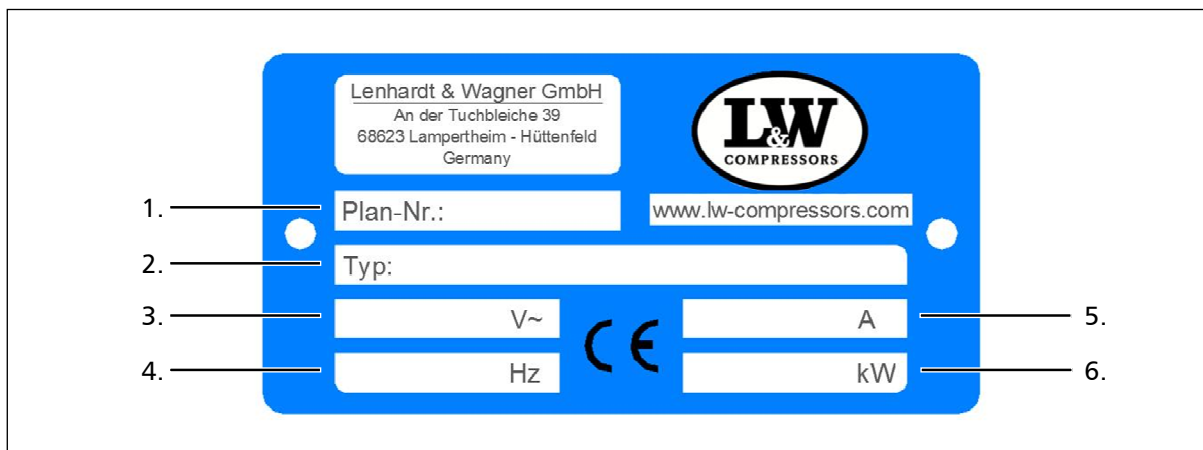


Fig. Compressor name plate


No.	Designation
1.	Circuit diagram number
2.	Compressor type
3.	Power supply
4.	Frequency
5.	Motor current consumption
6.	Nominal motor power

## INSTALLATION

### Electrical Installation

The standard compressor version is prepared for the connection to three phases (brown, black, grey), neutral conductor (blue) and protective earth conductor (green/yellow).

Fig. - Connection to the switch box

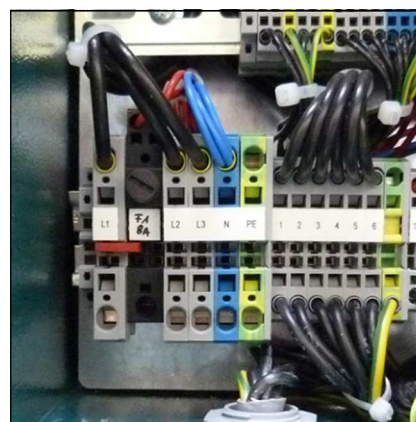

A

### Recommended fuses for 360 - 500 V operating voltage

Nominal motor power		Fusing start A		Connection in mm <sup>2</sup>	
[kw]	[A]	Direct	Star/Delta	Contactor supply	Motor S/D
2.2	5	10	-	1.5	1.5
4	8.5	20	-	2.5	1.5
5.5	11.3	25	20	2.5	1.5
7.5	15.2	30	25	2.5	1.5
11	21.7	-	35	4	2.5
15	29.9	-	35	6	4
18.5	36	-	50	6	4
22	41	-	50	10	4
30	55	-	63	10	6

### Recommended fuses for 220 - 240 V operating voltage

Nominal motor power		Fusing start A		Connection in mm <sup>2</sup>	
[kw]	[A]	Direct	Star/Delta	Contactor supply	Motor S/D
2.2	8.7	20	-	1.5	1.5
4	14.8	25	-	2.5	1.5
5.5	19.6	35	25	4	2.5
7.5	26.4	50	35	6	4
11	38	-	50	6	4
15	51	-	63	10	4
18.5	63	-	80	16	6
22	71	-	80	16	6
30	96	-	125	25	10



A

## OPERATION

## OPERATION

---

### Important operation instructions

A



#### Note

Ensure that all persons handling the compressor are familiar with function and operation of the unit.



#### Wear hearing protection

When working on a running machine, always wear hearing protection.

## FIRST COMMISSIONING

---

### Prior to first commissioning, observe the following:

Necessary steps are described on the next page.

- Ensure that cooling air can flow freely.
- Check compressor oil level with the oil dipstick (see next page).
- Check all connections and retighten if necessary.
- Check if the filter cartridge is in place (see "Service and Maintenance").
- Check the V-belt tension (see next page).
- Check if all filling valves are closed. Open one filling valve and hold tight manually!

### Start the compressor

1. Start the compressor by pushing the ON button.
2. Check turning direction - see the rotary direction arrow on the housing of the electric motor (see next pages). If the turning direction is wrong, immediately stop the compressor by pushing the OFF button and contact an authorised electrician.



#### Warning

Wrong impeller rotation direction!

Immediately after switching the compressor on, check the rotation direction. Depending on the place of installation, the phase sequence can influence the rotation direction.

3. Check oil pressure (if oil pressure gauge is installed).
4. Run the compressor for about 2 minutes.
5. Close the open filling valve carefully.
6. Run the compressor up to maximum pressure and check if the final pressure switch shuts off the compressor. If the final pressure switch does not shut off, switch off the compressor with the OFF button (see chapter "REMEDYING FAULTS").
7. Check the compressor unit for leaks (see "SERVICE AND MAINTENANCE")
8. Now check the condensate drain valves:
  - Fix the black condensate hoses
  - Drain test - press the test button
  - If correct, air escapes
9. Stop the compressor by pushing the OFF button.
10. Open all filling valves carefully to vent.



## FIRST COMMISSIONING

---


### Check oil level

**Warning**

Check oil level daily. Never start the compressor with a too low oil level. Risk of accidental loss, destruction or deterioration.

The oil level should be between the middle and upper end of the oil sight glass. Never start the compressor with a too low oil level.

Refill new compressor oil at least when the oil level reached the middle of the indicated area.

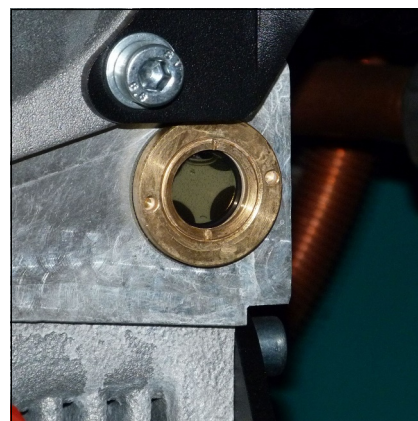

Oil sight glass

**Warning**

- First oil change after 25 operating hours.

## FIRST COMMISSIONING

### Check turning direction



#### Warning

Wrong impeller rotation direction!

Immediately after switching the compressor on, check rotation direction. Depending on the place of installation, the phase sequence can influence the rotation direction.

Before starting the compressor for the first time, check rotation direction (see the rotary direction arrow on the housing of the electric motor).

If the direction of rotation is wrong, the guide pistons of the 2nd and 3rd stages can not be sufficiently lubricated, with the consequence that the pistons will be damaged. Furthermore, cooling air flow will not be sufficient.



Rotation direction arrow

A



## DAILY COMMISSIONING

---

### **Prior to daily operation observe the following:**

- Ensure cooling air can flow freely.
- Check compressor oil level by the oil sight glass.
- Check if filter cartridge is in place / observe filter cartridge life!
- Ensure toxic-free, pure intake air.

**A**

## OPERATION

---

### Filling procedure



**Caution! Fill only cylinders which:**

- are marked with the test mark and the test stamp of the expert.
- have been hydrostatic tested (check last test date).
- are rated for the final pressure.
- are free from humidity.



**Note**

The unit shuts down when final pressure is reached. Thus, the unit always has to be restarted manually.

1. Close all filling valves.
2. Connect the closed compressed air cylinders.
3. Open cylinder valves.
4. Start compressor by pushing the ON button.
5. When the filling pressure gauge increases, open the filling valves slowly.
6. Fill compressed air cylinders to the desired pressure, subsequently close the filling valves slowly.
7. Close and vent all filling valves.
8. Disconnect all compressed air cylinders from filling valves.

## OPERATION

---

### Switch off the compressor

The compressor unit is equipped as standard with a pressure switch which automatically shuts down the system when the corresponding final pressure is reached.

During filling process, you can shut down the system at any time by pushing the red button (OFF) or the emergency stop (only in case of emergency!).



#### Note

After automatic or manual switching off, all pressure vessels and filter housings of the compressor will be automatically vented.

A



A

## REMEDYING FAULTS

## REMEDYING FAULTS

### Final pressure can not be reached

Cause of fault	Remedy
Connections leaky	Retighten or clean/replace if necessary
Final pressure safety valve leaky	Replace
Pipes / heat exchanger broken	Replace
Condensate drain valves leaky	Unscrew valves, check sealing surfaces, clean, replace if necessary
Final pressure switch stop unit	Verify settings, replace if necessary
Piston of pneumatic condensate valve sticks	Clean pneumatic condensate valve and restore function, check/replace o-rings, replace valve completely if necessary

### Strong compressor vibration

Cause of fault	Remedy
V-belt tension too loose	Tension V-belt
Drive motor / Compressor unit loosely	Retighten mounting screws
Anti vibration mounts used up	Replace
Ground not levelled	Ensure a solid and level ground

### Air supply too low

Cause of fault	Remedy
Inlet and outlet valves contaminated / defective	Clean, replace if necessary
Cylinder(s), piston(s) or piston ring(s) used up	Replace
V-belt slips	Tension V-belt
See chapter "Final pressure can not be reached"	See chapter "Final pressure can not be reached"

## REMEDYING FAULTS

### Compressor overheated

Cause of fault	Remedy
Inlet filter cartridge contaminated	Replace
Ambient temperature too high	Improve room ventilation / Reduce operation times
Cooling air inlet and outlet insufficient	Observe minimum distances (see Installation Instructions)
Air intake hose too long	Reduce length of the air intake hose
Air intake hose diameter too small	Use a larger diameter
Wrong compressor rotation direction	Ensure correct phase rotation, observe rotation direction arrow!
Inlet and outlet valves contaminated / defective	Clean, replace if necessary

### Safety valve leaks

Cause of fault	Remedy
Inlet and outlet valves of the following pressure stage defective	Clean, replace if necessary
Sinter filter of the following water separator blocked	Replace
Safety valve leaky	Replace

### Oil taste in the air

Cause of fault	Remedy
Mole carbon filter cartridge saturated	Replace
Compressor oil unsuitable	Use prescribed oil quality
Filter cartridge unsuitable	Use prescribed filter type
Cylinder(s), piston(s) or piston ring(s) defective	Replace



## REMEDYING FAULTS

### Automatic condensate drain defective

Cause of fault	Remedy
Solenoid coils defective	Replace
Cable / supply cable defective	Repair, replace if necessary
Timer / relais defective	Replace
Sinter filter of pneumatic condensate valve blocked	Replace
Piston of pneumatic condensate valve sticks	Clean pneumatic condensate valve and restore function, check/replace o-rings, replace valve complete if necessary

### Condensate drain starts before reaching final pressure

Cause of fault	Remedy
Pressure stages are not as prescribed, control pressure of pneumatic condensate valve too low	Check corresponding inlet and outlet valve, replace if necessary.
Piston sealing of pneumatic condensate valve contaminated / used up	Clean, replace if necessary
Timer / relais settings not correct	Adjust as prescribed
Timer / relais defective	Replace

### Compressor stops before final pressure

Cause of fault	Remedy
Final pressure switch settings not correct	Correct settings
Opening pressure of the pressure maintaining valve too high	Correct settings
Fuse / circuit breaker has tripped Valid only for E models	Check fusing of the power supply / observe regulations
Emergency stop switch has tripped	Unlock emergency stop switch, close compressor housing door correctly

## REMEDYING FAULTS

### Filter life not sufficient

Cause of fault	Remedy
Pressure maintaining valve settings not correct	Adjust as prescribed
Filter cartridge unsuitable	Replace by a prescribed filter cartridge type
Filter cartridge too old	Observe expiration date
Filter cartridge packaging incorrect / damaged / already opened. Filter cartridge already partly saturated before change	Store filter cartridges properly, dispose defective cartridges
Operating temperature too high	Ensure sufficient ventilation
Cylinder(s), piston(s) or piston ring(s) defective	Replace

### Oil consumption too high

Cause of fault	Remedy
Cylinder(s), piston(s) or piston ring(s) defective	Replace
Compressor oil unsuitable	Use prescribed oil quality
Operating temperature too high	Observe prescribed operating temperatures
Oil leak at the compressor block	Tighten corresponding mounting screws, if necessary replace corresponding paper sealing / o-ring / shaft seal



A

## MAINTENANCE AND SERVICE

## MAINTENANCE AND SERVICE

---

### Service, Repair and Maintenance

Carry out service and maintenance work exclusively when the compressor is stopped and depressurised. The unit should be leak-checked regularly. Leaks can be preferably localised by using a leak detector spray (if necessary, brush pipes with soapy water).

We recommend that only authorised L&W service technicians carry out service work on the bearing of the compressor (crankshaft and connecting rods).

We urgently recommend that all maintenance, repair and installation work must only be carried out by trained personnel. This is necessary because all maintenance work can not be explained exactly and detailed in this manual.

Only use authentic spare parts for service work.



#### **Danger**

Components under pressure, such as hose ends, can quickly come loose when manipulated and can cause potentially fatal injuries due to the pressure surge. Any work on system parts may only be performed in a pressure-compensated state.



#### **Warning**

The use of accessories that have not been tested can lead to death or serious injury or damage to the unit. Only use authentic spare parts for service work.



#### **Warning**

Carry out maintenance or service work when the unit is switched off and protected against unexpected restart.



#### **Warning**

Risk of burns!

Carry out maintenance or service work when the unit has cooled down.



## MAINTENANCE AND SERVICE

### Daily before taking unit into operation

Maintenance work	Type	Quantity	Order No.
Check oil level	-	-	000001
Check condition of all filling hoses	-	-	-
Check filter cartridge lifetime	-	-	-
Operate unit to final pressure and check function of final pressure switch	-	-	-

### At 25 operation hours

Maintenance work	Type	Quantity	Order No.
Oil change	-	0.8	000001

### Every 3 months or as required

Maintenance work	Type	Quantity	Order No.
Check automatic condensate drain, open manual condensate taps	-	-	-
Check/Retorque all connections and bolts	-	-	-
Check V-belt tension and condition	LW SC-180 E (50Hz) SPA 1457	1	001684
	LW SC-250 E (50Hz) SPA 1457	1	001684



## MAINTENANCE AND SERVICE

### Annually

Maintenance work	Type	Quantity	Order No.
Oil change, if less than 1000 operating hours	-	0,8	000001
Check V-belt tension and condition	LW SC-180 E (50Hz) SPA 1457	1	001684
	LW SC-250 E (50Hz) SPA 1457	1	001684
Check opening pressure of final safety valve	-	-	-
Clean coolers	-	-	-
Clean all oil/water separators, if less than 500 operating hours	-	-	-
Service intake filter (depends on condition - if less than 500 operating hours)	-	-	-
Check all connections for leakage	-	-	-

### Every 500 operating hours

Maintenance work	Type	Quantity	Order No.
Check V-belt tension and condition	see above	see above	see above
Change intake filter	-	1	001708
Check pressure maintaining/non-return valve	-	-	-
Check all connections for leaks	-	-	-
Clean oil/water separators	-	-	-



## MAINTENANCE AND SERVICE

Every 1000 operating hours (latest in 5 years)

A

Maintenance work	Type	Quantity	Order No.
Replace o-ring of the DIN filling connector	-	2	001237
Replace o-ring of the revolvable filling hose	-	2	001224
Replace sintered metal filter of oil separator	2nd Stage	1	002123
Replace o-ring of the water separator	2. Stufe	1	001255
Replace sintered metal filter of condensate stop valve housing	-	1	000188
Replace o-rings of the filter housing	-	2	001769
Oil change (at least once a year!)	-	0,8 l	000001

## MAINTENANCE AND SERVICE

**Every 2000 operating hours (latest in 10 years)**

**A**

Maintenance work	Type	Quantity	Order No.
Replace o-rings and gaskets of 1st, 2nd and 3rd stage	O-Ring (1st stage)	1	011104
	O-Ring (2nd + 3rd stage)	2	011105
Replace all inlet and outlet valves incl. Gaskets	1st stage	1	003652
	2nd stage	1	000551
	3rd stage	1	011123
	Upper gasket 1st	1	003651
	Lower gasket 1st	1	011103



### Note

All stated quantities are parts of our 2000h service kits. You can find an overview on page Service Kits.



## MAINTENANCE AND SERVICE

### Check V-belt tension

The V-belts could lose tension during transportation. Please check the V-belt tension before starting the compressor.

### Tension V-belts

To tighten V-belt tension, loosen 4 mounting nuts of the drive motor. Use the tensioning screw to move the electric motor until the V-belt tension is sufficient. Then, tighten mounting nuts and check V-belt tension.

We recommend using a V-belt tension gauge.

### Correct V-belt tension

Do not tension V-belts too tight. This damages bearings of compressor and motor. The V-belts should only be tensioned until there is no noise caused by slipping during start.

### Settings

Motor Type	Initial Installation	Operation after running in
Electric motors 50Hz	500 N	400 N
Electric motors 60Hz	400 N	300 N

## MAINTENANCE AND SERVICE

### Compressor Lubrication

Pistons, cylinders, crankshaft and connecting rods are provided with oil by splash lubrication.

A

### Check oil level




#### Warning

Check oil level daily. Never start the compressor with a too low oil level. Risk of accidental loss, destruction or deterioration.

Check oil before each operation of the system!

The oil level should be between the middle and upper end of the oil sight glass. Never start the compressor with a too low oil level.

Refill new compressor oil at least when the oil level reached the middle of the indicated area.

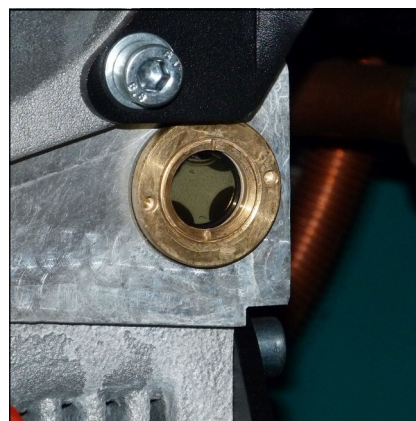

Oil sight glass



#### Warning

- First oil change after 25 operating hours.

## MAINTENANCE AND SERVICE

---

### Oil change



#### Note

We recommend oil change at least once a year - depending on total operating hours.

#### Oil change as follows:

- Run compressor warm for approx. 2 min.
- Switch off and vent compressor.
- Place a suitable oil drain tray under the oil release valve.
- Screw off oil drain plug carefully and remove oil fill port.
- Drain oil completely.
- Close oil drain valve.
- Fill oil by using a funnel.
- Check oil level. The oil level should be between the middle and upper end of the oil sight glass.
- Screw oil fill port manually in and tighten by hand.

The oil change is now completed.

#### Maintenance intervals

- First oil change after 25 operating hours (total hours).
- Second oil change at 1000 hours (total hours)
- All further changes after each 1,000 operating hours.

#### Oil and oil capacity

Approx. 800 ml synthetic compressor oil is necessary for one oil change. Only use synthetic compressor oil which is recommended as suitable from L&W (L&W Article no.: 000001).

## MAINTENANCE AND SERVICE

### Final pressure switch



#### Note

Do not adjust the final pressure switch to the safety valve pressure. The final pressure switch has to be adjusted to min. 10 bar below the safety valve pressure. Otherwise, the safety valve can open during operation. This considerably reduces the life of the safety valve.

The pressure switch shuts off the compressor automatically when the selected final pressure is reached. The final pressure switch is already adjusted to the corresponding cut-out pressure.

The pressure can be adjusted with the upper adjusting screw as follows:


#### Increasing cut-out pressure:

Turn the adjusting screw clockwise

#### Reducing cut-out pressure:

Turn the adjusting screw anti-clockwise

Adjust the pressure switch in steps of a quarter turn. Restart the compressor after every adjustment step to verify the actual cut-out pressure.

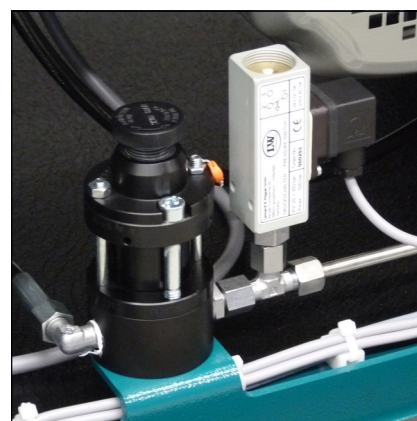

Final pressure switch

### Example settings:

Safety valve	Max. Operating Pressure
225 bar	215 bar
250 bar	240 bar
330 bar	320 bar

## MAINTENANCE AND SERVICE

### Automatic condensation dump system




#### Note

The collected condensate can contain oil and has to be disposed according to regulations.

The compressor comes as standard with an automatic condensation dump system. Solenoids drain all condensate separators every 15 minutes.

To test the system, press the blue condensate test drain button on the operating panel.

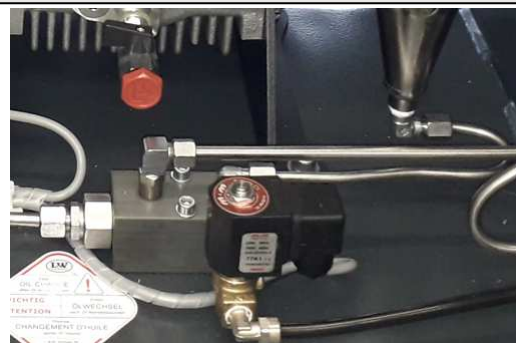

Oil / water separator 2nd stage

### Oil / water separators

Condensate is separated after the 2nd and 3rd stage of compression. All two oil / water separators are equipped with electronic timer controlled solenoids. The timer is located in the switch box and activates the dump valves about every 15 minutes.

To release the complete condensate through the black plastic hoses, we recommend using an 10 l container at least.

The drain noise can be kept to a minimum by using a silencer.

### Maintenance intervals

We recommend to clean oil and water separators every 500 operating hours or at least once a year, to check for corrosion damage and to replace o-rings if necessary.

All oil / water separators have an integrated sinter filter which has to be replaced every 1,000 operating hours.



Oil / water separators final stage

## MAINTENANCE AND SERVICE

### Oil / Water separator 2nd stage - Maintenance



#### Note

Clean all parts thoroughly before assembly.

#### Maintain oil / water separator 2nd stage as follows:

- Loosen pipe connections (Fig. 1)
- Loosen screw connection at the water separator (sinter filter holder)
- Remove sinter filter holder (Fig. 2).
- Change sinter filter (Fig. 3), screw-in new sinter filter by using a suitable screwdriver.
- Change o-ring, previously grease new o-ring (Fig. 4)
- Place sinter filter holder into the water separator and tighten
- Connect pipe connections and tighten.

The oil / water separator maintenance is now completed.

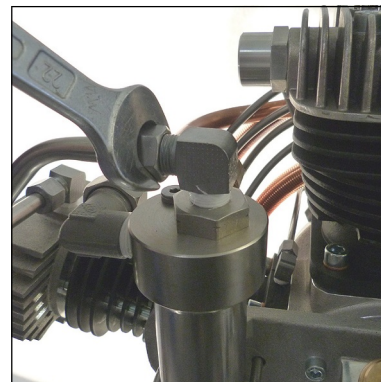


Fig. 1 - Loosen pipe connections

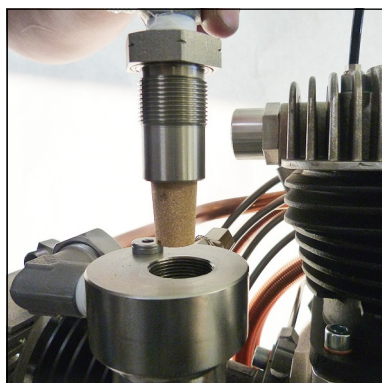


Fig. 2 - Remove sinter filter holder



Fig. 3 - Change sinter filter



Fig. 4 - Change o-ring

## MAINTENANCE AND SERVICE

### Filter housing

The mole carbon filter housing is installed on the right hand side of the compressor housing.

Inside the filter housing a jet blows air on to the housing wall. Condensation water and oil are led by centrifugal force to the bottom of the housing. Air flows through the mole carbon filter cartridge, which purifies the air from residual moisture and odours.



Filter housing



#### Caution

Do not run the compressor with empty unfilled cartridges.  
Only use genuine L&W cartridges.

### Filter cartridge

P/N	Filtering	Models	Filter Volumen
011174	LW SC-180 E	DIN EN 12021 (Breathing Air)	0,69 l
011174	LW SC-250 E	DIN EN 12021 (Breathing Air)	0,69 l

The high-pressure compressor is equipped with an integrated breathing air purification system. Air is compressed up to 330 bar, dried and odour- and tasteless purified. Oil residues are bounded. The breathing air filter cartridge consists of a molecular sieve and activated-carbon filter.

All breathing air filter cartridges are factory vacuum sealed.

We recommend unpacking the filter cartridges just before installation. Filter cartridges which are exposed too long could be saturated with moisture and become unusable.

### Maintenance intervals

Breathing air filter cartridges should be changed at the following intervals, at +20°C or more often, depending on humidity and ambient temperature:

- 46.3 hours for LW SC-180 ES
- 33.3 hours for LW SC-250 ES



## MAINTENANCE AND SERVICE



### Caution

Do not run the compressor with empty unfilled cartridges.  
Only use genuine L&W cartridges.

A

### Filter cartridge change LW SC-180 E / LW SC-250 E

Change filter cartridge as follows:

- Stop the compressor and carefully open the drain valves. Wait till the filter housing is completely vented; this procedure takes approx. 1 - 2 minutes
- When no air discharges from the condensate release hoses, the pressure vessels are depressurized.
- Remove the end filter topcap (Fig. 1). Remove the filter cover by using the filter tool. The housing can not be opened if still under pressure.

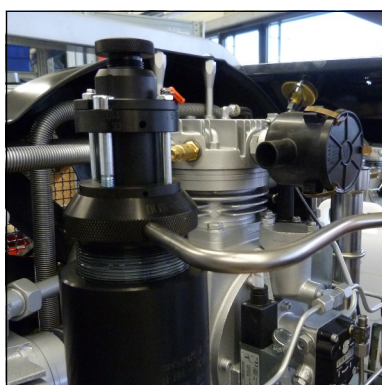


Fig. 1 - Loosen filter housing topcap by using the filter tool

- After opening the housing, pull out the filter cartridge by using the filter tool (Fig. 2).
- Remove adapter from used cartridge.
- Open the vacuum sealed packet of the new filter cartridge and carefully place it into the filter housing (press slightly).
- Put on filter adapter (Fig. 3) on new cartridge. Use spanner to make sure adapter is sealing to cartridge bottom. Insert filter cartridge (incl. Installed filler adapter).
- Fully turn in filter housing topcap in by using the filter tool and turn it back 1/4 turn. This avoids tightening of the topcap due to vibration.
- **The filter cartridge change is now completed.**



Fig. 2 - Pull out the filter cartridge by the catch and insert a new cartridge



Fig. 3 - Filter adapter

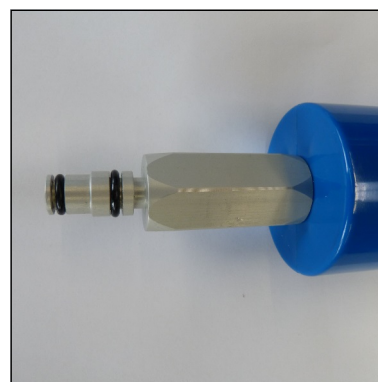


Fig. 4 - Installed filler adapter



### Note

Ensure that the old filter cartridge is disposed correctly at an approved waste point.



## MAINTENANCE AND SERVICE

### Filter housing - maintenance



#### Note

Clean all parts thoroughly before assembly.

#### Filter housing maintenance as follows:

- Unscrew filter housing cover by using the filter tool (Fig. 1).
- Change o-ring, previously grease new o-ring (Fig. 2)
- Screw the filter housing cover in by using the filter tool and turn it back  $\frac{1}{4}$  turn. This avoids tightening of the cover due to vibration (Fig. 1).
- Remove the bracket (Fig. 3).
- Remove the filter housing.
- Change lower o-ring, previously grease new o-ring.
- Mount the filter housing.
- Mount the bracket (Abb. 3).

The filter housing maintenance is now completed.



Fig. 1 - Remove/screw in filter cover



Fig. 2 - Change o-ring



Fig. 3 - Mounting bracket

## MAINTENANCE AND SERVICE

### Pneumatic condensate valve - maintenance




#### Note

Clean all parts thoroughly before assembly.

#### Pneumatic condensate valve change as follows:

- Loosen pipe connections and mounting screws.
- Remove pneumatic condensate valve.
- Loosen connection (Fig. 2).
- Change sinter filter (Fig. 3).
- Tighten horizontal screw.
- Mount pneumatic condensate valve.
- Tighten pipe connections and mounting screws.

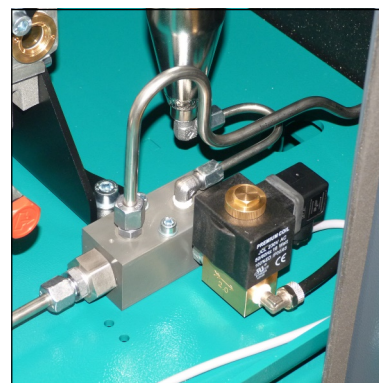

Pneumatic Condensate Valve

Pneumatic condensate valve maintenance is now completed.

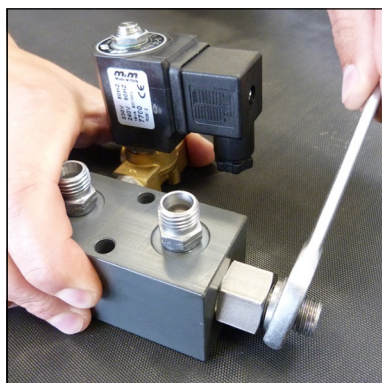


Fig. 2 - Loosen connection

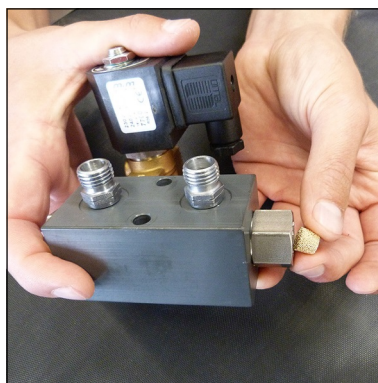


Fig. 3 - Change sinter filter

## MAINTENANCE AND SERVICE

### Check or change filter inlet



#### Note

Clean all parts thoroughly before assembly.

To properly change the filter inlet, proceed as follows:

- Disconnect the crankcase housing at the ventilation hose (Fig. 1).
- Remove mounting screw and pull out filter housing carefully (Fig. 2).
- Clean filter housing and o-rings and check if defective (fissures).
- Place o-ring into the housing (Fig. 3).
- Insert the new cartridge and assemble the housing. Place o-ring into the groove (Fig. 4).
- Place and align the filter housing carefully, inlet port up, hose connector 90° turned to the left (Fig. 5).
- Tighten mounting screw and connect the crankcase housing ventilation hose to the oil fill port (Fig. 6).

The filter inlet change is now completed.



Fig. 1 - Pull off ventilation hose at the oil fill port



Fig. 2 - Pull out filter housing carefully



Fig. 3 - Place o-ring into the filter housing



Fig. 4 - Place o-ring into the groove

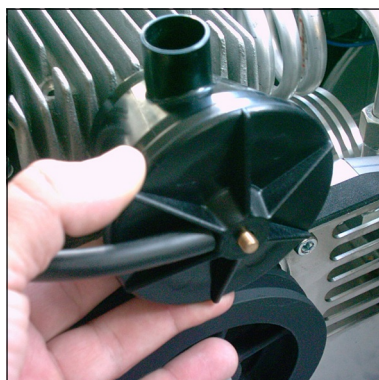


Fig. 5 - Place and align filter housing carefully

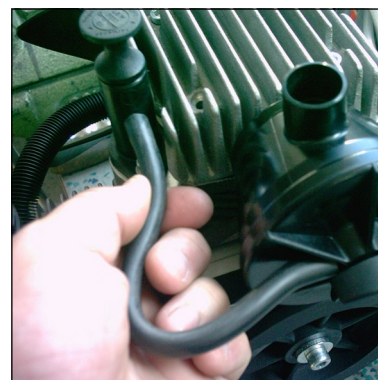


Fig. 6 - Connect ventilation hose at the oil fill port

## MAINTENANCE AND SERVICE

### Cylinder heads and valves

Inlet and outlet valves of the specific compressor stages are located between valve head and cylinder. Outlet valves open while piston upstroke or compression stroke, inlet valves open while downstroke.

Valves are subject to normal wear and tear and have to be replaced at certain intervals (depending on specific operating conditions). Dismount valve heads to change valves. The three valves are combined inlet and outlet valves. The first stage is a plate valve. The stages two and three are made of a spring operated piston which acts inside a bronze cylinder.



Inlet and outlet valve incl. gaskets of the 3rd stage

### Maintenance intervals

All valves should be replaced after 2000 working hours due to normal wear and tear. To replace valves the cylinder heads have to be removed. There are no special tools required to replace these valves.

### Available special tools

Special tools are not necessary for dismounting inlet and outlet valves but make work easier.

Order number: 006847



Special tool



## MAINTENANCE AND SERVICE

### Replace in- and outlet valve 1st stage



#### Note

The figures of the parts can differ due to the different stages.

Replace the inlet and outlet valve 1st stage as follows:

#### Remove inlet / outlet valve

- Remove spring wire clamps of the crankcase ventilation hose (Fig. 1).
- Remove hose.
- Loosen pipe connections.
- Loosen valve head screws.
- Remove valve head and check if defective.
- Remove upper valve head gasket and inlet / outlet valve.

Install inlet / outlet valve - see following page

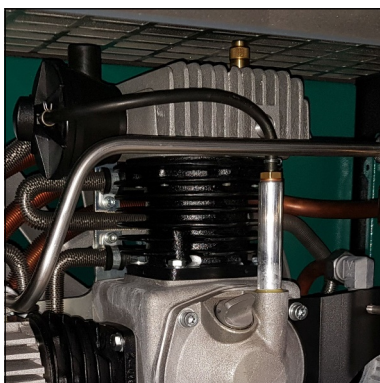


Fig. 1 - Remove spring wire clamps



Fig. 2 - Remove in- and outlet valve

## MAINTENANCE AND SERVICE

### Replace in- and outlet valve 1st stage



#### Note

The figures can differ from the delivered parts.

#### Replace the inlet and outlet valve 1st stage as follows:

- Insert lower valve gasket (Fig.1).
- Insert upper valve gasket (Fig.2).
- Insert in- and outlet valve. CAUTION: Observe correct position between valve centre hole and valve head locating pin (Fig. 2+3).
- Place valve head carefully on top of the cylinder (take care to keep valve in place) (Fig.4)
- Tighten valve head screws crosswise.
- Set tight connecting nut and fix vent hose to air intake housing. Don't forget to fix spring wire clamp.

Inlet and outlet valves change 1st stage is now completed.



Fig. 1 - Lower valve gasket



Fig. 2 - Correct position of inand outlet valve



Fig. 3 - Correct position of in-and outlet valve

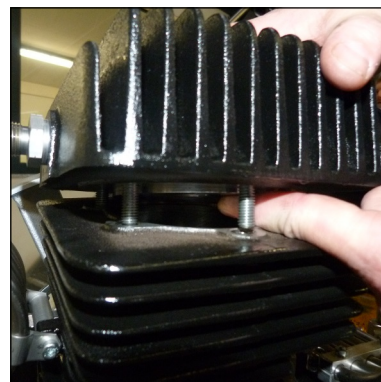


Fig. 4 - Take care to kkeep valve in place

## MAINTENANCE AND SERVICE

### Replace inlet and outlet valve 2nd stage / 3rd stage



#### Note

The figures of the parts can differ due to the different stages.

#### Replace the inlet and outlet valve 2nd stage as follows:

- Loosen pipe connections.
- Loosen valve head screws.
- Remove valve head Observe that the lower valve gasket is also pulled out. It can still stick inside the cylinder head.
- Remove inlet / outlet valve.
- Check valve head if defective (check locating pin).
- Change upper valve gasket.
- Change lower valve gasket (aluminium gasket).
- Insert new inlet and outlet valve into the valve head (Fig. 1). CAUTION: Observe correct position between valve centre hole and valve head locating pin.
- Place the valve head with the new inlet and outlet valve.
- Place pipe connections.
- Tighten valve head screws crosswise.
- Tighten pipe connections.

Inlet and outlet valves change 2nd stage / 3rd stage is now completed.



Fig. 1 - Ensure correct valve position  
(centre pin)

## MAINTENANCE AND SERVICE

### Safety valves

Every pressure stage is equipped with a separate over pressure safety valve. Safety Valves avoid a non permissible high pressure at the specific pressure stages and limit maximum operation pressure of the compressor.

Safety valves are adjusted to:

- 1st Stage: 8 bar
- 2nd Stage: 70 bar
- 3rd Stage: max. final pressure

The adjusted blow-off pressure [bar] of the safety valves is indicated on their housings.

All safety valves are factory sealed with special L&W safety seals to avoid manipulation of the limit value settings.

Safety valves with removed seals have to be immediately checked for the prescribed settings and replaced if necessary.

The safety valve of the final stage is furthermore equipped with a knurled screw to be activated once.

Turning the knurled screw clockwise could vent the valve completely and therefore the final filter housing.

During normal operation conditions, the knurled screw has to be turned anti-clockwise up to the upper stop. An integrated circlip avoids complete unscrewing.

If a safety valve blows off, it indicates problems with either inlet or outlet valve of the following stage.



#### Note

Replace defective safety valves immediately!



Safety valve 1st stage



Safety valve 2nd stage



Safety valve 3rd stage



## MAINTENANCE AND SERVICE

### Pressure maintaining / non return valve

The pressure maintaining / non return valve combination is placed in the flow direction after the final filter housing.

### Pressure maintaining valve

The pressure maintaining valve drains a large part of the water content of the compressed air mechanically by ensuring the minimum outlet pressure. This guarantees optimal drying and purification of the breathing air.

After starting the compressor, the pressure inside the final filter housing constantly increases. The pressure maintaining valve prevents the compressed air from blowing off (final pressure gauge = 0 bar).

When the adjusted opening pressure is reached (160 bar), the purified compressed air flows via pressure maintaining and non return valve to the filling valve.


The value of the opening pressure of the pressure maintaining valve can be read at the final pressure gauge. When opening pressure is reached, the pressure gauge value increases within a few seconds.

**Adjust pressure maintaining valve see next page.**

### Non return valve

The non return valve which is placed after the pressure maintaining valve, prevents the purified breathing air from flowing back into the filter housing / condensate drain valves.

After compressor stop, the indicated filling pressure remains constant, if the non return valve is working correctly.

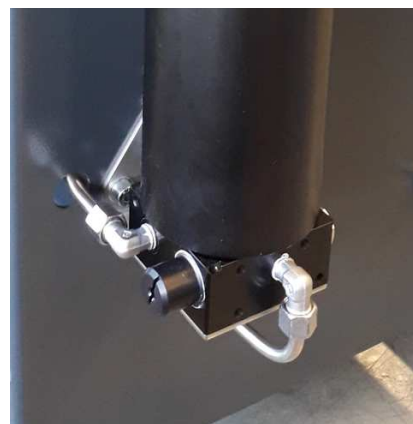

Pressure maintaining valve in filter base with high-pressure outlet

A

## MAINTENANCE AND SERVICE

### Safety valve test



#### Note

Do not fill any tank during test phase!

#### Safety valve test as follows:

- Depressurise the system.
- Turn the adjusting screw of the final pressure switch one turn clockwise (please see chapter "Final pressure switch", page A-46).
- Start the compressor.
- Watch the final pressure gauge. The safety valve should open when reaching working pressure of the compressor. If not, switch off the unit and take out of service until the safety valve has been replaced.
- Switch off the compressor.
- Turn the adjusting screw of the final pressure switch back (one turn counterclockwise).
- Check the cut-out pressure. Adjust if necessary!

The safety valve test is now completed.



Pressure switch

## MAINTENANCE AND SERVICE

### Leak test

**Note**

Do not fill any tank during test phase!

**Note**

Two person are recommended for the test!

#### Leak test as follows:

- Close filling valves.
- Start the compressor.
- Press the OFF-switch and hold on the button.
- Verify the compressor for release noises. (A slight hiss of the air inlet filter nozzle can be ignored). If release noises occur, localise blow off position(s).
- Release the OFF-switch.

The leak test is now completed.



OFF-switch

A

## MAINTENANCE AND SERVICE

### Test of Pressure Equipment

According to the Pressure Equipment Directive 2014/68/EU and TÜV Darmstadt (German supervising authorities).

Subject: pressure equipment with a product permissible operating pressure [bar] x content volume [litres] from 200 up to 1000.

#### Example: Filter housing 0.69 l

Maximum operating pressure: 350 bar

Content volume: 0.69 litres

$350 \text{ bar} \times 0.69 \text{ litres} = 241.5$

241.5 is bigger than the minimum of 200 -> therefore a test by a licensed expert is required.

#### 1. Examination after 5 years by a qualified person or authorized organisations.

Visual inspection, inside and outside.

#### 2. Examination after 10 years by a qualified person or authorized organisations.

Visual inspection, inside and outside.

In addition, a water pressure test is carried out at 1.5 times of the permissible vessel operating pressure.

Max. numbers of load cycles for operation with max. allowable pressure variation		
Final pressure [bar]	Load cycles	Operating hours [h]
350	35.000	8.750



#### Caution

The filter container (P/N: 011281) has to be replaced after 15 years!



A

# **MAINTENANCE RECORDS AND STORAGE**



## MAINTENANCE RECORDS

### Introduction form for the Operator

A

No.	Surname, Name	Date	Place	Signature	Instructor

By adding themselves to this list, the person that signs it confirms having been given a yearly introduction/instruction about the function and operation of the compressor unit. Furthermore, they have been informed about the relevant safety rules and regulations (TRG, DGRL, BetrSichV, GSG, GSGV).



MAINTENANCE RECORDS

Top up oil, oil change

A

Date	Operating hours	Oil quantity [l]	Name



MAINTENANCE RECORDS

Cartridge change

A

Date	Operating hours	Difference	Name





## A

LW SC-180 E / LW SC-250 E - UK  
Version: 05.09.2025



## A

LW SC-180 E / LW SC-250 E - UK  
Version: 05.09.2025

## LAGERUNG

---

### Conservation / storage of the compressor

**If the compressor unit is not to be used for an extended period of time, we recommend to carry out the following work before storage time:**

- Run the compressor at 200 bar filling pressure for approximately ten minutes (control the flow with the filling valve to maintain constant pressure).
- Replace compressor oil, open filling valve(s) and run compressor for a few minutes.
- Stop compressor and open drain valves (depending on the compressor type, this may happens automatically). Remove top cap of final filter housing: clean threat, grease o-ring. and threat with a food grade grease or silicone grease. Close filter housing.
- Remove intake filter cartridge and undo intake pipes on all valve heads.
- Start compressor unit. Spray a few drops of compressor oil into intake connectors.
- Stop compressor unit and insert intake filter cartridge. Bring intake pipes back in position and fix connections and nuts. Close filling- and drain valves.
- Store the compressor in a cool dry place free from dust and contamination. A dust cover is recommended as long as condensation can be avoided.
- If compressor unit should be stored for a period of more than one year, an oil change is strongly recommended before it's been re-used.
- Fuel driven units only: fill up fuel tank to top level to avoid corrosion.

### De-conservation, commissioning

**After the compressor has been stored, the following steps are to be taken:**

- If compressor hasn't been used for longer than 12 months, we strongly recommend an oil change before any use.
- Replace intake filter cartridge and check oil level.
- Clean compressor unit, check for foreign objects. Check condition and tension of V-belts, replace if necessary. Check condition of filling hoses, replace if necessary.
- Secure hoses against whipping and open filling valves and run compressor for approximately 10 minutes.
- Check condition of final filter cartridge, replace if necessary.
- Close filling valves and run compressor up to final pressure.
- Check safety valve relief pressure of final stage and/or pressure switch setting.
- Check all connections and pipe work for leaks.

Once all above steps are completed, compressor unit is now ready for use.

## LAGERUNG

---

 
### Transportation instructions

- Parts which need to be dismantled for transport purposes must be carefully replaced and secured before taking into operation.
- The transport may only be carried out by trained personnel.
- For transportation, only use lifting devices and equipment with sufficient lifting power.
- Do not stand or work under suspended loads.
- Also separate from minor relocation machinery / system of any external energy supply. Before recommissioning, reconnect the machine to the mains according to regulations.
- When recommissioning, proceed according to the operating instructions..

### Disposal

The product must be disposed in accordance with national waste disposal regulations and by an appropriate waste disposal company.

### Electric and electronic components



EU-wide regulations for the disposal of electric and electronic appliances which have been defined in the EU Directive 2002/96/EC and in national laws are effective from August 2005 and apply to this device.

Common household appliances can be disposed by using special collecting and recycling facilities. However, as this device has not been registered for household usage, it must not be disposed of through these means.

The device can be returned to L&W. Please do not hesitate to contact us if you have any further questions on this issue.



**ERSATZTEILLISTEN / SPARE PARTS LISTS  
DETAILANSICHTEN / DETAILED VIEWS**

C



## INHALTSVERZEICHNIS / CONTENTS


---

Gesamtansicht / General View .....	3
Gehäuse / Housing .....	4
Schalttafel / Control Board .....	6
Kompressorblock / Compressor Block .....	8
Kurbelgehäuse mit Kurbelwelle / Crankcase with crankshaft .....	11
Lagerdeckel schwungradseitig / Bearing Cover flywheel side .....	13
Kolben 1. Stufe / Piston 1st Stage .....	24
Kolben 2. Stufe / Piston 2nd Stage .....	15
Kolben 3. Stufe / Piston 3rd Stage .....	16
Saug- und Druckventil 2. & 3. Stufe / In & Outlet Valve 2nd & 3rd Stage .....	17
Öl- Wasserabscheider / Oil- Water Separator .....	19
Filtergehäuse 0,69 + 0,98 l / Filter Housing 0.69 + 0.98 ltr .....	21
Abscheider Kondensatautomatik / Automatic condensate separator .....	25
Kühler / Cooler .....	26
Pneumatisches Kondensatventil / Pneumatic Condensate Valve .....	28
Druckschalter / Pressure Switch .....	30
Sicherheitsventil / Safety Valve .....	31
Ansaugfilter / Intake Filter .....	32
Motor / Motor .....	33
Lüfterrad / Cooling Fan .....	35
Fülleinrichtung und Füllventil / Filling Device and Filling Valve .....	36

C

## DETAILANSICHT / DETAILED VIEW

### Gesamtansicht / General View

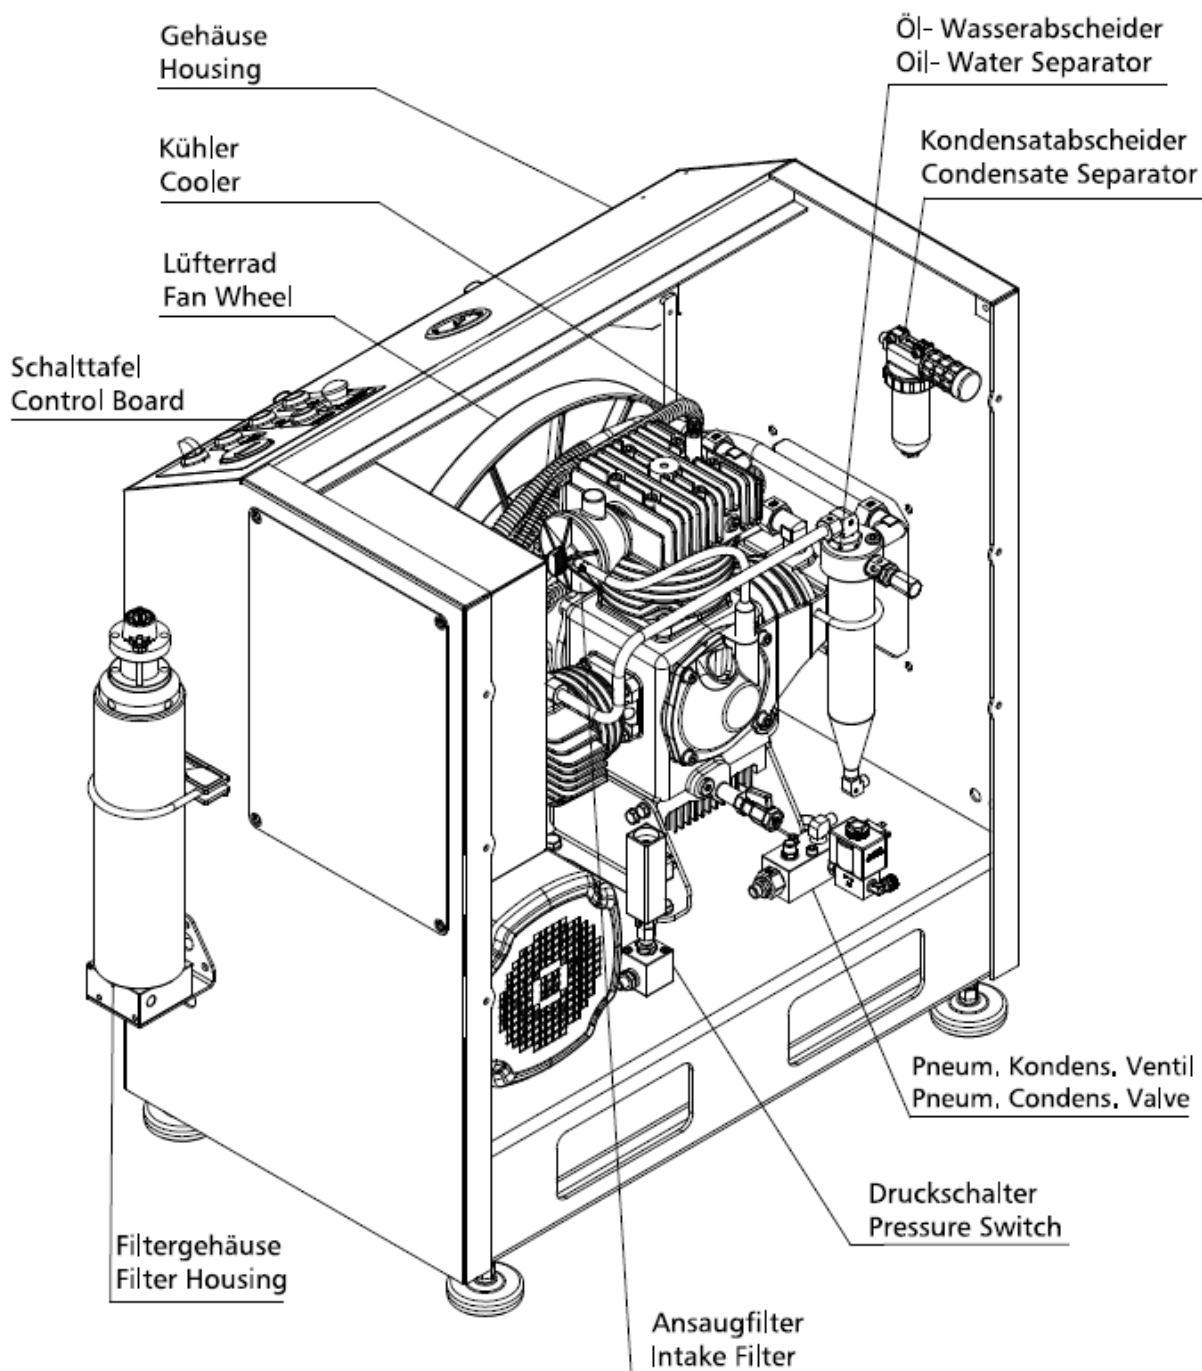

## ERSATZTEILLISTE / SPARE PART LIST

### Gehäuse / Housing


Best.-Nr. / Order No.	Benennung	Description
000498	U-Scheibe A6	Washer A6
000948	Flachkopfschraube M6x16mm DIN6912	Pan Head Bolt
001029	Zylinderschraube M6x20mm DIN912	Allen Bolt
001042	Zylinderschraube M8x30mm DIN912	Allen Screw
001047	Zylinderschraube M6x12mm DIN912	Allen Bolt
001105	6-kant Schraube M10x60mm DIN933	Hexagon Bolt
001108	6-kant Schraube M10x80mm DIN933	Hexagon Bolt
001156	Stopfmutter M6, verzinkt	Lock Nut M6, zinc plated
001163	Mutter M10 DIN934	Nut M10
001178	U-Scheibe A6	Washer A6
001186	U-Scheibe A10	Washer A10
001194	Federscheibe (Klappdeckel E-Gehäuse)	Wave Spring Washer A12
001677	Griffschale PVC-Schwarz	Plastic Snatch, PVC, black
001683	Schlauchanschlussstück, Alu	Alloy Hose Connector G1/4"
003218	Buchsen Deckelbefestigung	Fixing kit for casing cover
005437	Standfuß, Höhenverstell. mit Gummieinl.	Foot, Height adjustable Ø80 mm
006164	Befestigungsklammer Griffschale	Clip for Moulded Recess
009902	Steckschlüssel Personenschutzschalter	Key safety switch

C



## DETAILANSICHT / DETAILED VIEW

## Gehäuse / Housing

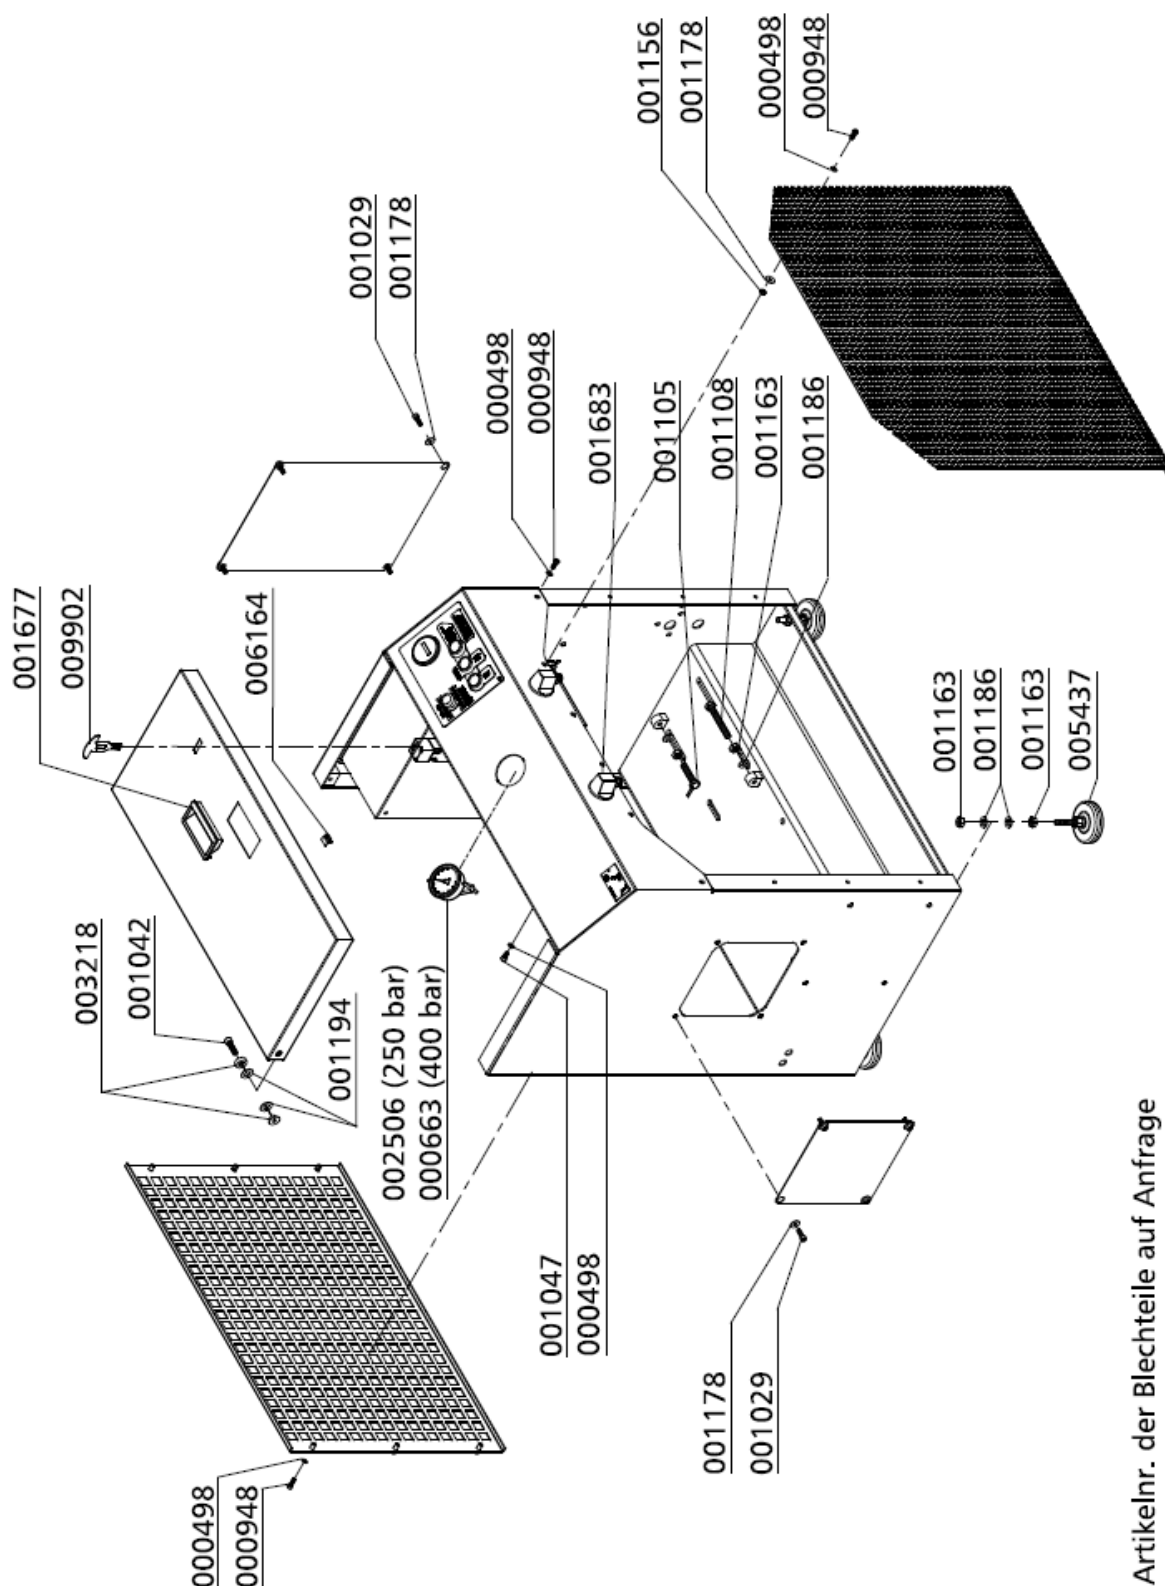

Artikelnr. der Blechteile auf Anfrage  
Article No. of sheet metal parts on request

## ERSATZTEILLISTE / SPARE PART LIST


### Schalttafel / Control Board

Best.-Nr. / Order No.	Benennung	Description
002089	Betriebsstundenzähler 230 Volt	Hour counter 230 V
002502	Leuchtdrucktaste, flach, blau	indicator switch, blue
002503	Taster, kompl. Farbe: rot	Button, colour: red
002504	Taster, kompl., Farbe: grün	Start Button, colour green
003121	Not-Halt Schalter komplett	Emergency switch compl.
004691	Kontaktelement, Front, Schließer	Contact NO
004692	LED Element, Front, weiß	LED element, white, 230V
004701	Leuchtmeldervorsatz, flach, rot	Indicator light, red
005663	Einlegeschild — Wahlschalter Halbautomatik/Automatik	Insert Label
006859	Klemmrahmen (Schildträger)	Label holder
008153	Taster rot, komplett, inkl. LED Leuchte	Button, colour: red, c/w LED
012802	Aufkleber LW Standard Steuerung	Sticker LW Standard Control

C

## DETAILANSICHT / DETAILED VIEW

### Schalttafel / Control Board

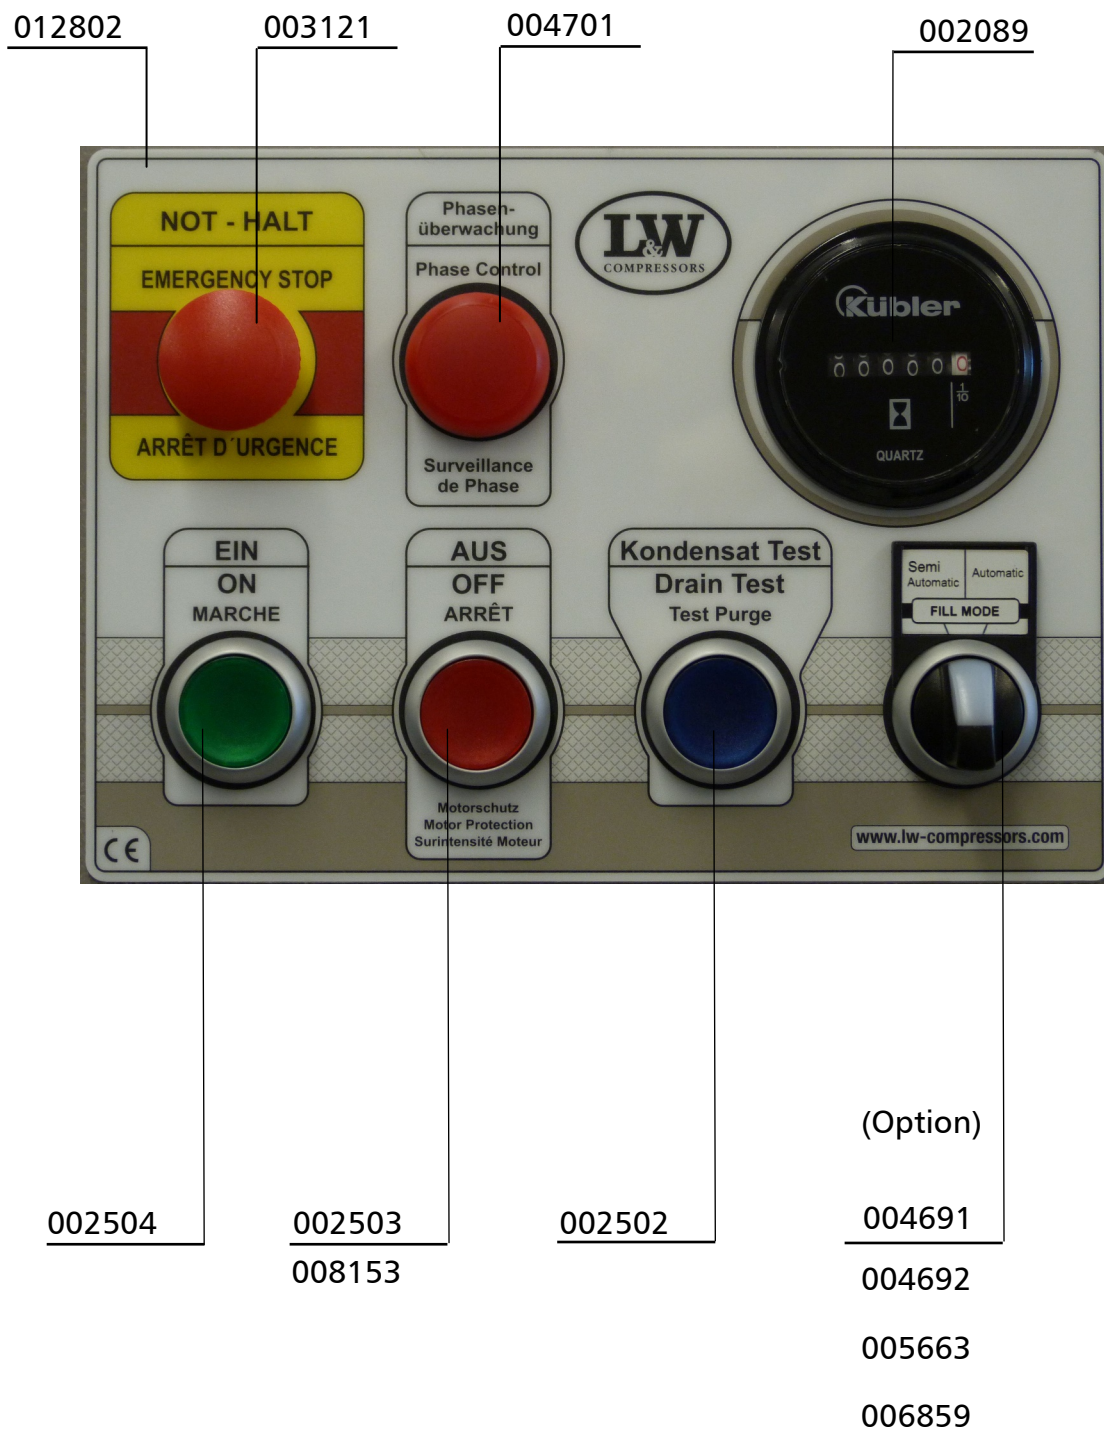

## ERSATZTEILLISTE / SPARE PART LIST

### Kompressorblock / Compressor Block

Best.-Nr. / Order No.	Benennung	Description
000220	Sicherheitsventil G3/8, 8 bar	Safety Valve
000738	Gerade Verschraubung GE 08 L	Straight Connection
000811	Winkelverschraubung WE 12L G3/8	Elbow Connection
000837	Verschlussstopfen G1/8	Plug
000838	Verschlussstopfen G1/4	Plug
000863	Winkelverschraubung WE 18L R1/2	Elbow Connection
001041	Zylinderschraube M8x25mm	Allen Screw
001056	Zylinderschraube M8x60mm	Allen Screw
001060	Zylinderschraube M8x80mm	Allen Screw
001081	6-kant Schraube M8x20mm	Hexagon Screw
001082	6-kant Schraube M8x25mm	Hexagon Screw
001164	Stopfmutter M10	Lock Nut
001181	U-Scheibe A8	Washer
001186	U-Scheibe A10	Washer
002124	Ventilkopf 3. Stufe	Valve Head 3rd Stage
003651	Obere Dichtung Ventil 1.Stufe	Gasket, Valve 1st Stage (up)
003652	Saug- & Druckventil 1. Stufe	Valve 1st stage
003766	Aludichtring für G3/8 Gewinde	Alloy Seal Ring for G3/8
005856	Winkelverschraubung Ø8mm R1/8	Elbow Hose Connection
006846	Schlauchschelle	Hose Clamp
007043	Kondensatschlauch Ø5,4xØ9,4mm	Condensate Hose
008696	6kt-Schraube M10x30mm	Hexagon Screw
010451	Ventilkopf 1. Stufe	Valve Head 1st Stage
010785	O-Ring Ø128 x 2mm	O-Ring
010810	Zylinder 1.Stufe	Cylinder 1st Stage
010811	Zylinder 1.Stufe	Cylinder 1st Stage
010812	Zylinder 2.Stufe	Cylinder 2nd Stage
010813	Zylinder 3.Stufe	Cylinder 3rd Stage
010819	Lagerdeckel	Bearing Cover
010833	Kugelhahn 2 x G3/8 IG	Ball Valve

## ERSATZTEILLISTE / SPARE PART LIST


### Kompressorblock / Compressor Block

Best.-Nr. / Order No.	Benennung	Description
010834	Doppelnippel R3/8, Länge 40mm	Double Nipple
011092	Ölschauglas mit Dichtung G3/4	Oil Level Indicator c/w gasket
011103	O-Ring Ø81x2mm	O-ring
011104	O-Ring Ø84x2mm	O-ring
011105	O-Ring Ø50x2mm	O-ring
011106	Anschlussadapter Kurbelgehäuseentlüftung	Adapter Crankcase Vent
011109	Verschlusschraube GN 740 G3/8	Plug
011110	Verschlusschraube GN 441 G3/4	Plug
011115	Konsole Kompressorblock	Console Compressor Block
011280	Ventilkopf 2. Stufe	Valve Head 2nd Stage

C

## DETAILANSICHT / DETAILED VIEW

### Kompressorblock / Compressor Block

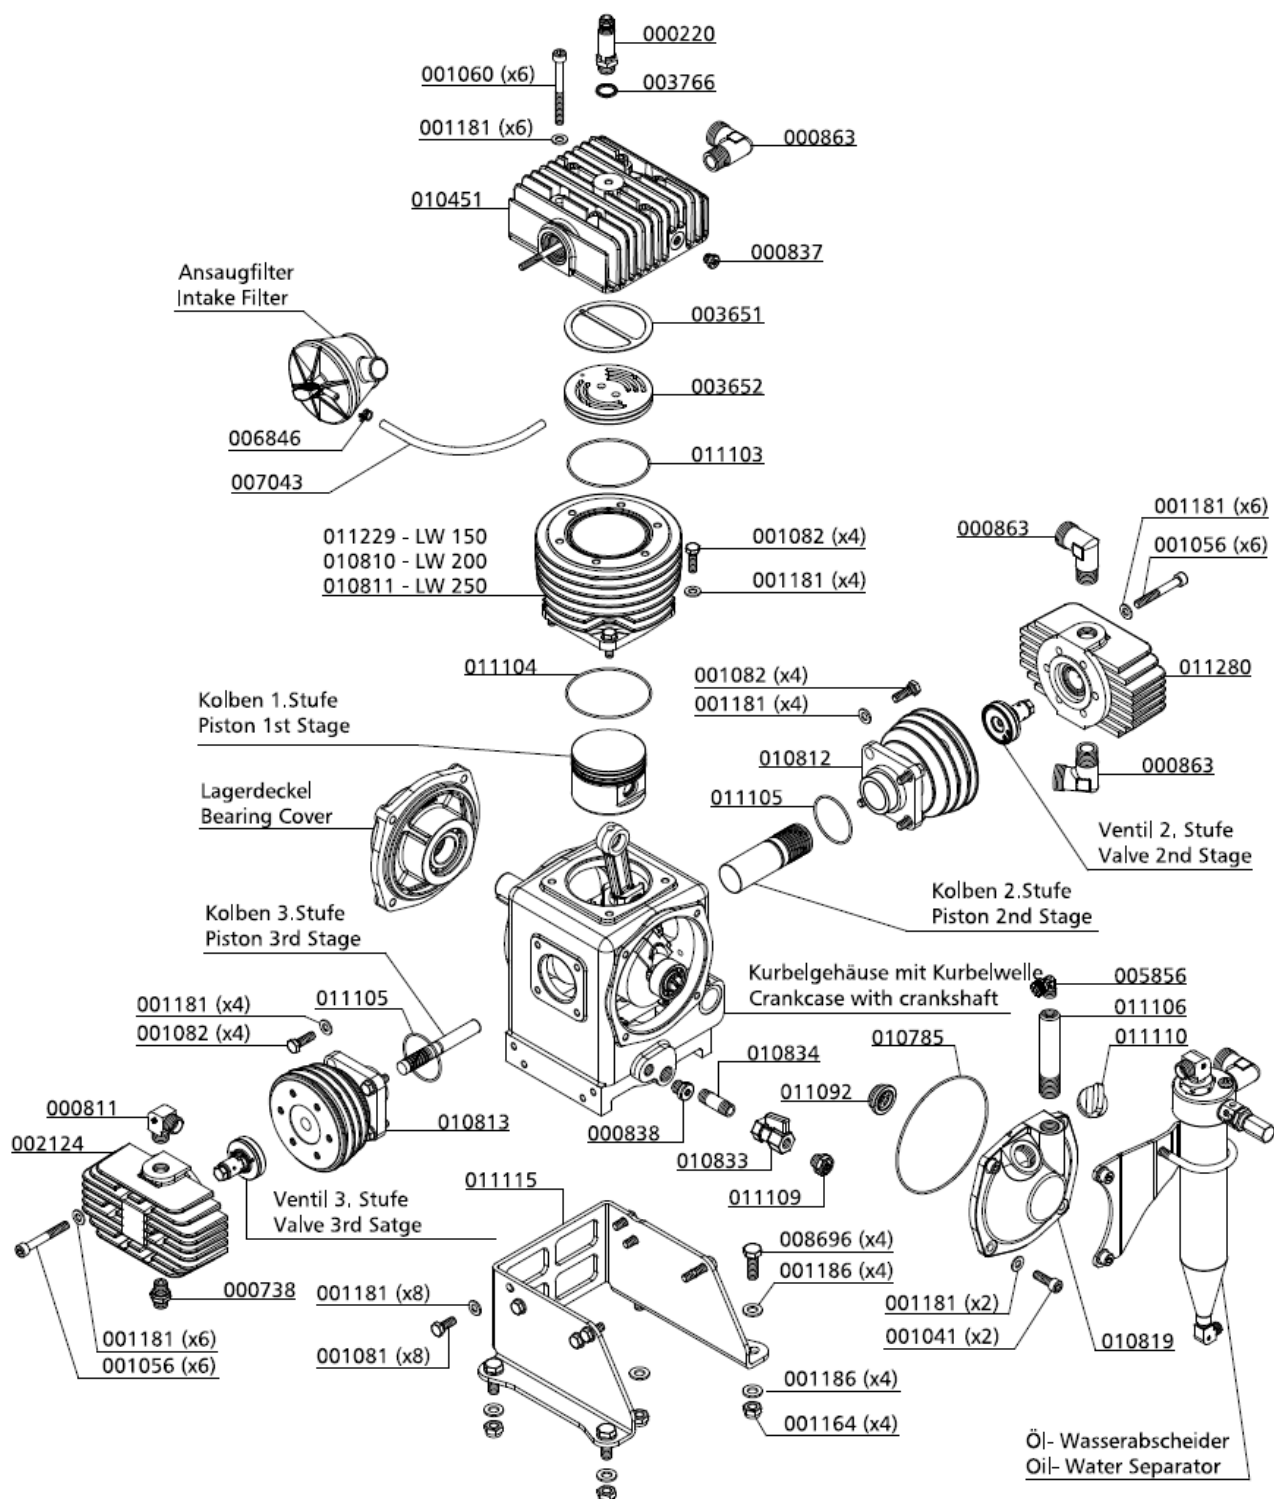

## ERSATZTEILLISTE / SPARE PART LIST

### Kurbelgehäuse mit Kurbelwelle / Crankcase with crankshaft

Best.-Nr. / Order No.	Benennung	Description
000839	Verschlussstopfen VSTI R3/8" ED A3C	Plug
000969	Zylinderschraube M10x40mm DIN912	Allen Bolt
001010	Zylinderschraube M6x65mm DIN912	Allen Screw
001323	CU-Ring Ø10 x 16 x 2mm DIN7603A	Copper Seal Ring
001336	Sicherungsring A16 DIN471	Circlip A16
001342	Sicherungsring A30 DIN471	Circlip A30
001365	Sicherungsring I35 DIN472	Circlip I35
010112	Passfeder A4x4x14 mm DIN 6885 ST	Woodruff Key
010809	Kurbelgehäuse	Crankcase
010818	Pleuel 1.Stufe	Con Rod
010823	Kurbelwelle	Crankshaft
010824	Gegengewicht-Unterteil	Counterweight lower Part
010829	Kreuzkopf	Crosshead
010830	Kreuzkopfbolzen	Crosshead Pin
011099	Flachkopfschraube	Pan Head Bolt
011100	Passfeder A8x7x25 DIN 6885	Woodruff Key
011121	Zylinderrollenlager 17x40x16 mm	Bearing
011122	Nadellager 22x34x20 mm	Bearing
011352	Sockel	Base
011353	Kulisse komplett	Motion Link complete


C



## DETAILANSICHT / DETAILED VIEW

### Kurbelgehäuse mit Kurbelwelle / Crankcase with crankshaft

Ab Blocknummer 14  
From Block Number 14

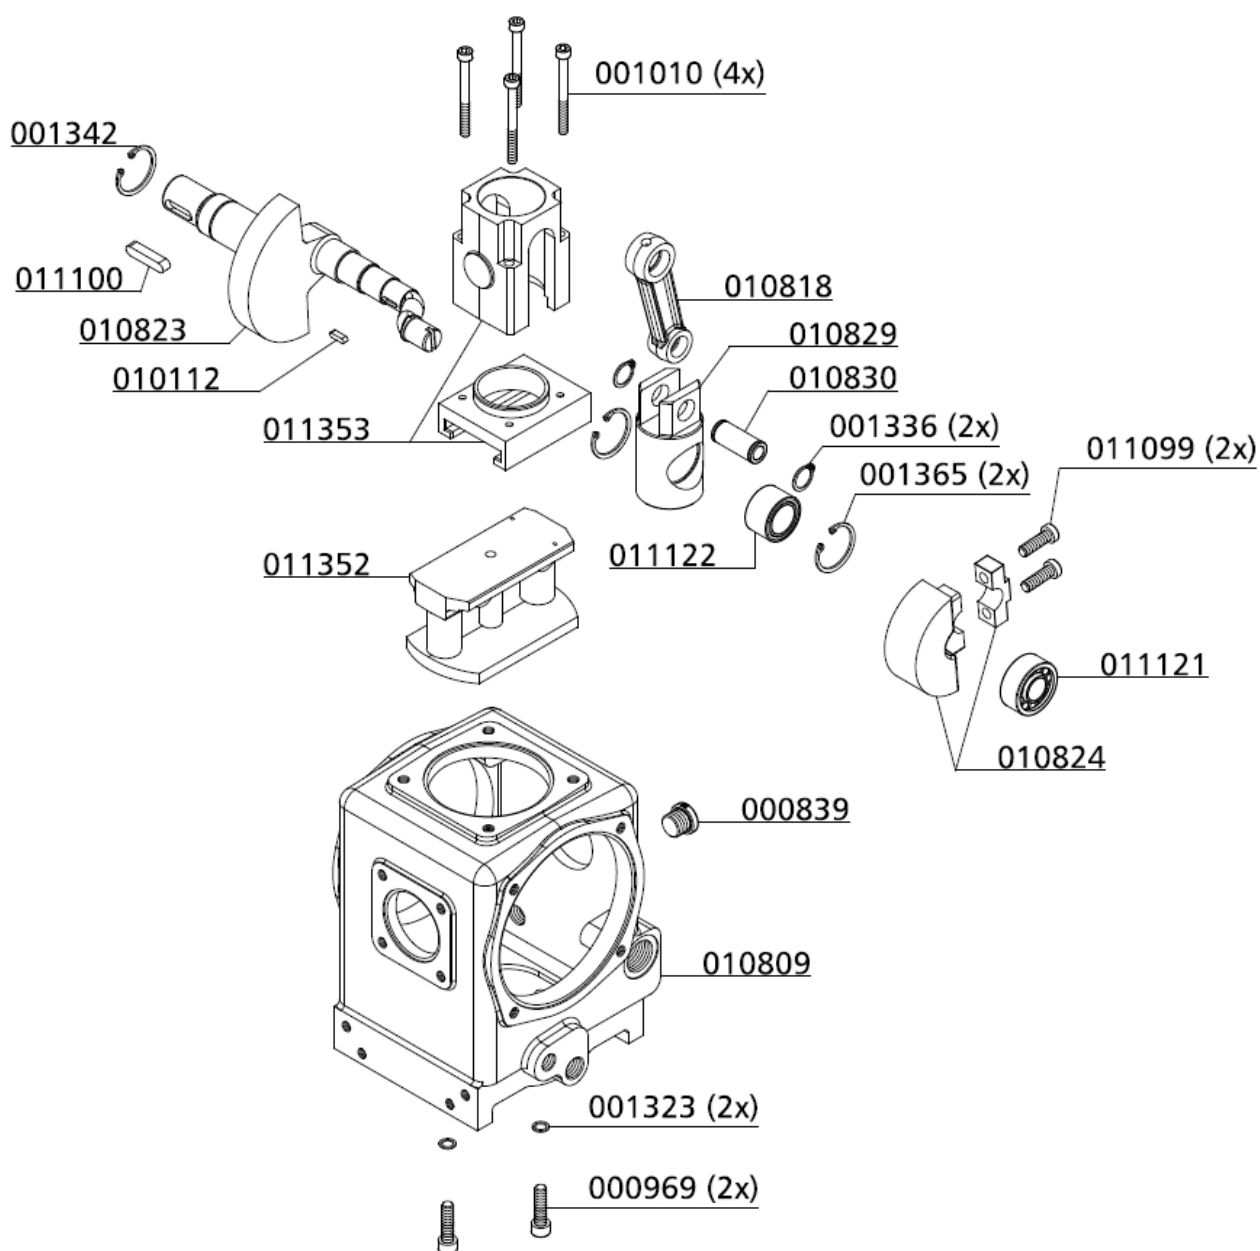




## ERSATZTEILLISTE / SPARE PART LIST

### Lagerdeckel schwungradseitig / Bearing Cover Flywheel Side

Best.-Nr. / Order No.	Benennung	Description
001361	Sicherungsring I70	Circlip
010279	Sicherungsring I62	Circlip
010785	O-Ring Ø128x2mm	O-Ring
010821	Lagerdeckel	Bearing Cover Flywheel Side
010831	Wellendichtring 30x72x10RST	Shaft Seal
011119	Rillenkugellager 30x72x19mm	Bearing
011120	Zylinderrollenlager 30x62x16mm	Bearing

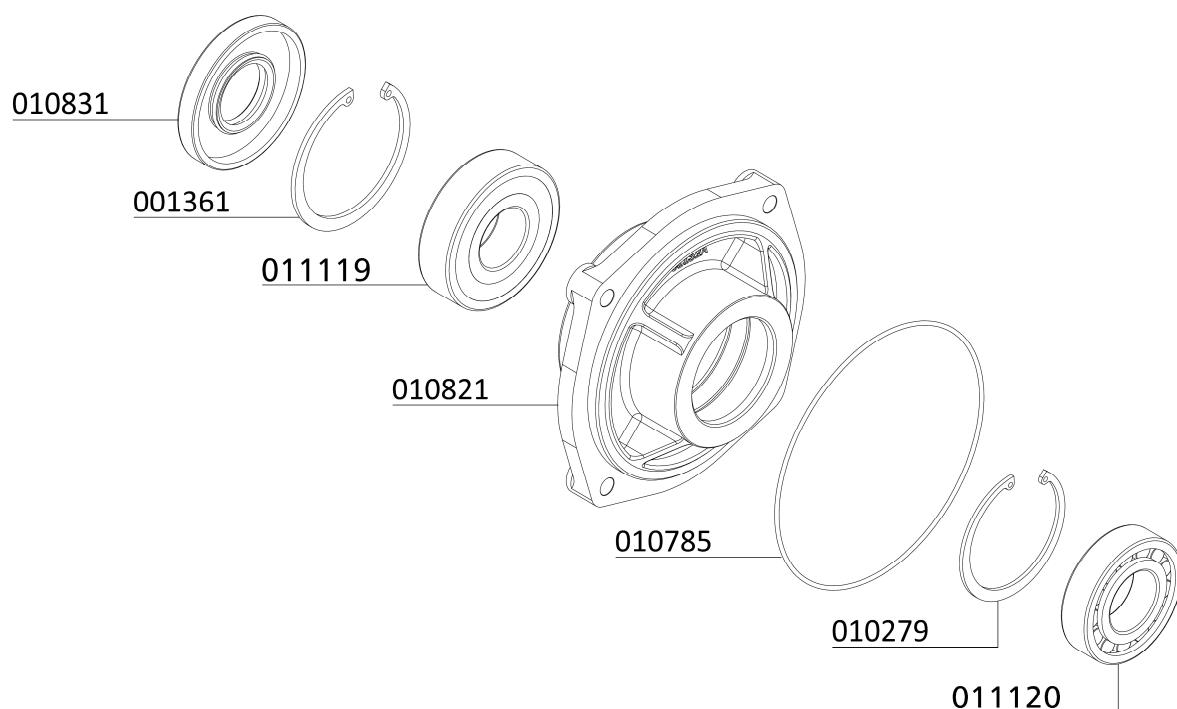


## ERSATZTEILLISTE / SPARE PART LIST

### Kolben 1. Stufe / Piston 1st Stage

Best.-Nr. / Order No.	Benennung	Description
010815	Kolben 1.Stufe Ø80mm, komplett	Piston 1st Stage, complete
011116	Satz Kolbenringe Ø80mm 1. Stufe	Set Piston Rings 1st Stage

..... - LW SC-180 E / ES  
010815 - LW SC-250 E / ES

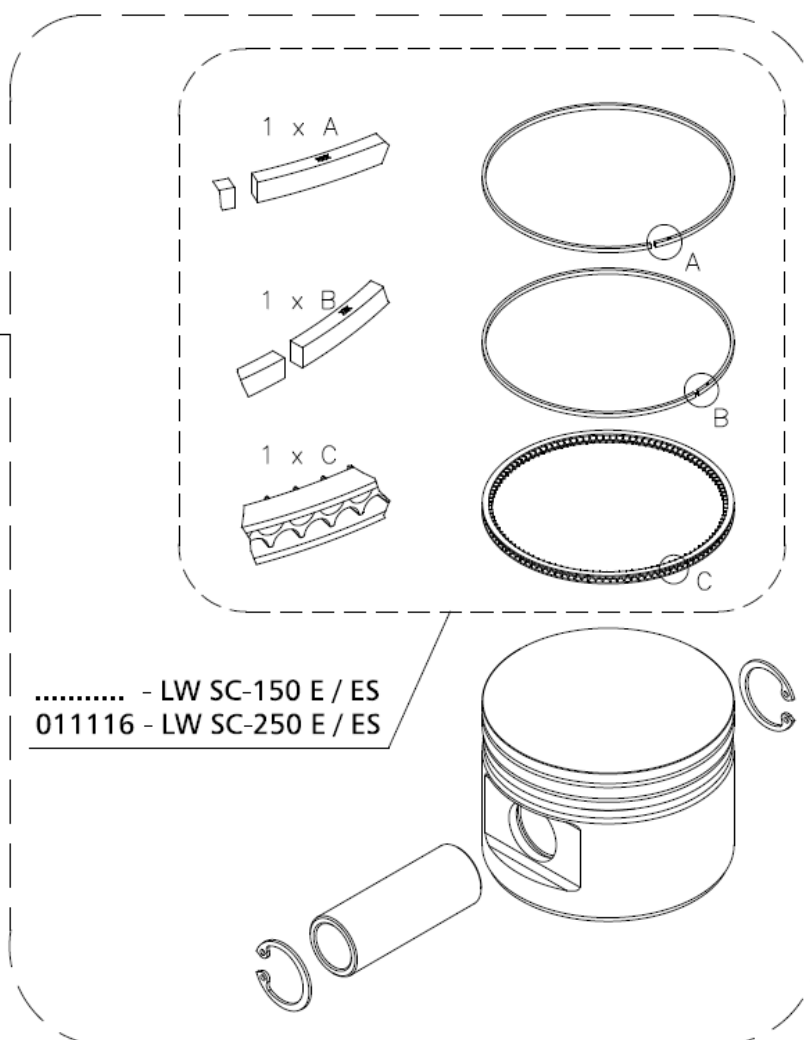


## ERSATZTEILLISTE / SPARE PART LIST

### Kolben 2. Stufe ø32mm / Piston 2nd Stage ø32mm

Best.-Nr. / Order No.	Benennung	Description
010816	Kolben 2.Stufe Ø32mm komplett	Piston 2nd Stage, complete
011117	Satz Kolbenringe 2. Stufe / 7Stk.	Set of Piston Rings, 2nd Stage

010816

011117

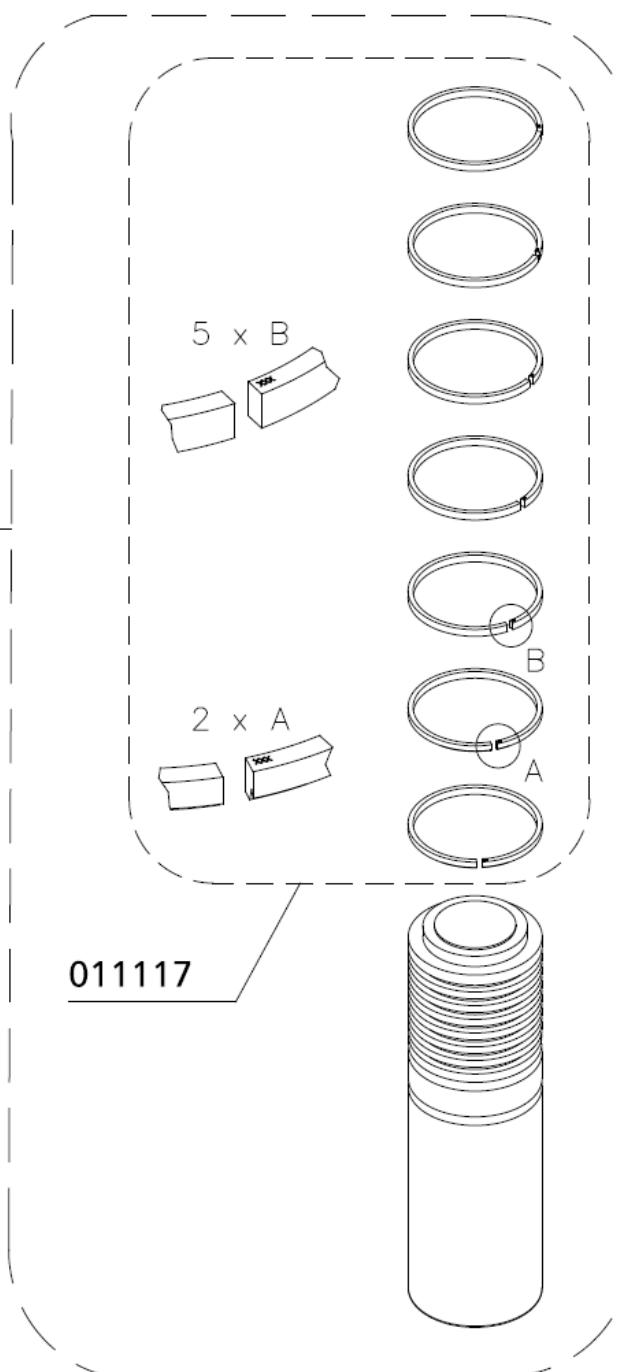

C


## ERSATZTEILLISTE / SPARE PART LIST

### Kolben 3. Stufe ø14mm / Piston 3rd Stage ø14mm

Best.-Nr. / Order No.	Benennung	Description
010817	Kolben 3.Stufe ø14mm komplett	Piston 3rd Stage
011118	Satz Kolbenringe 3. Stufe / 7Stk.	Set of Piston Rings, 3rd Stage

010817

011118

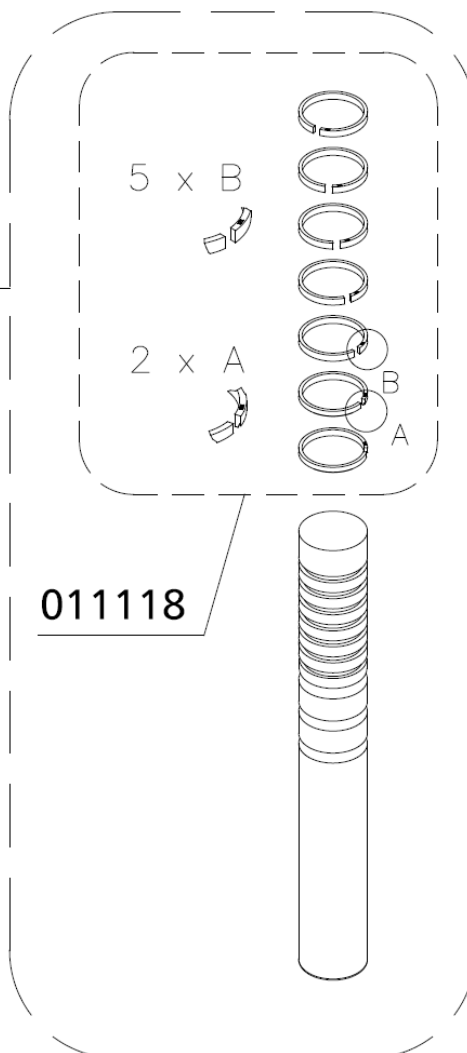

## ERSATZTEILLISTE / SPARE PART LIST



### Saug & Druckventil 2. und 3. Stufe / In & Outlet Valve 2nd Stage and 3rd Stage

Best.-Nr. / Order No.	Benennung	Description
000525	Saug- & Druckventil, ohne Aludichtung 4x ø3,0mm, in Radius	In- & Outlet Valve w/o gaskets
000526	Saug- & Druckventil, ohne Aludichtung 4x ø3,5mm, in Radius	In- & Outlet Valve w/o gaskets
000532	Ventildichtung unten, Saug-& Druckventil	Lower Valve Gasket
000534	Ventildichtung unten , Saug- & Druckventil	Lower Valve Gasket
000541	Dichtring / Dichtung Ventil	Upper Alloy Seal Ring
000551	Saug- & Druckventil 2. Stufe, komplett	In- & Outlet Valve
011123	Saug- & Druckventil 3. Stufe, komplett	In- & Outlet Valve

C

## DETAILANSICHT / DETAILED VIEW

### Saug & Druckventil 2. und 3. Stufe / In & Outlet Valve 2nd Stage and 3rd Stage

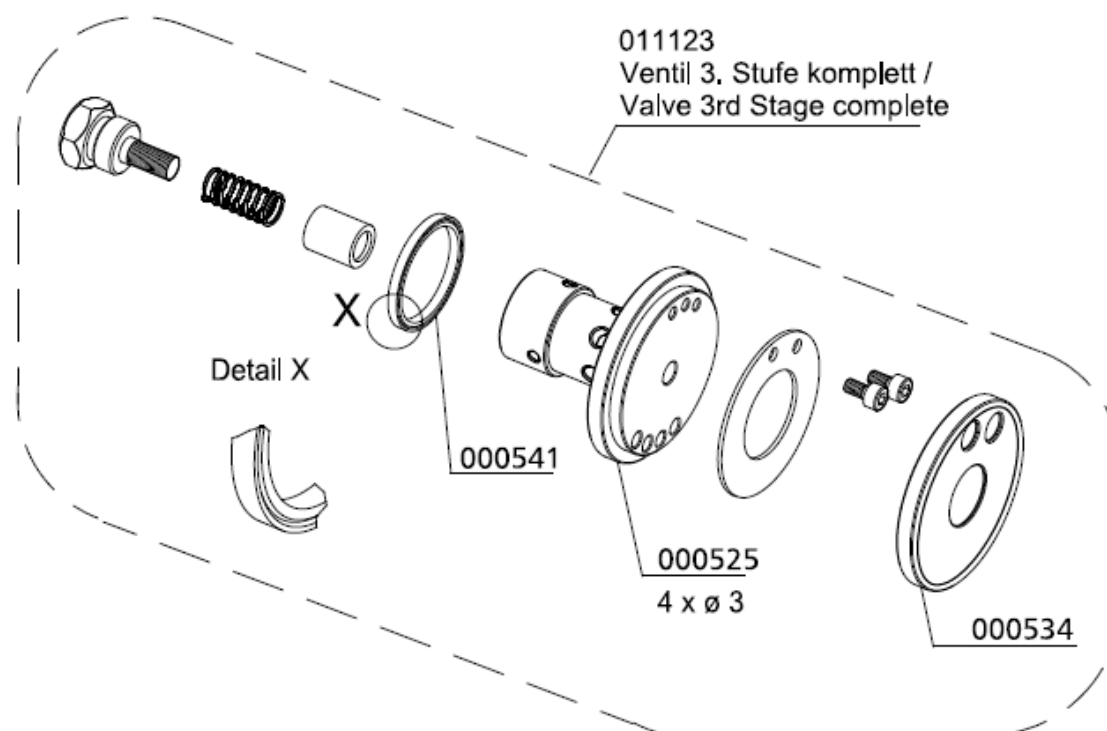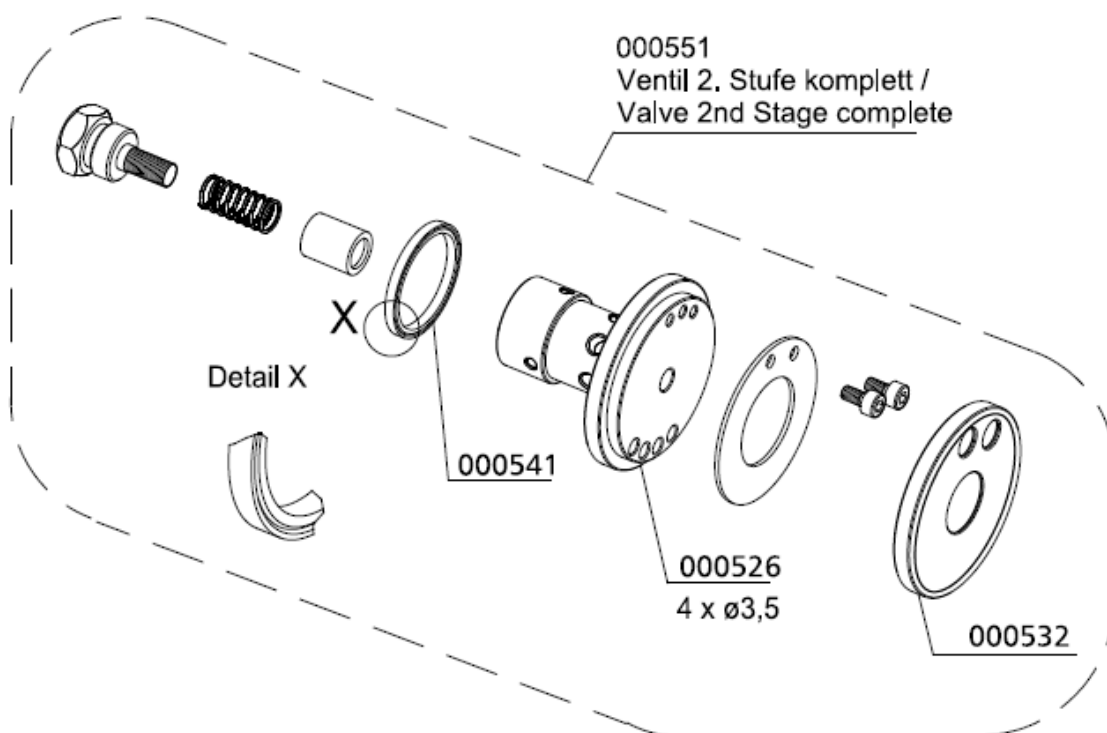

## ERSATZTEILLISTE / SPARE PART LIST


### Öl- Wasserabscheider / Oil- Water Separator

Best.-Nr. / Order No.	Benennung	Description
000227	Sicherheitsventil G3/8" 70bar	Safety Valve G3/8" 70bar
000761	Winkelverschraubung WE08L1/4"	Elbow Connection
000811	Winkelverschraubung WE 12L R3/8	Elbow Connection
000837	Verschlussstopfen G1/8	Plug
000863	Winkelverschraubung WE 18L R1/2	Elbow Connection
001042	Zylinderschraube M8x30mm DIN912	Allen Screw
001159	Stopfmutter M8 DIN985 ZN	Lock Nut M8
001181	U-Scheibe A8 DIN125	Washer A8
001255	O-Ring Ø26x2mm	O-Ring
002123	Sinterfilter G3/8 AG	Sinter Filter
002128	Wasserabscheider, 1. und 2. Stufe	Water separa. 1st + 2nd Stage
002130	Halter für Sinterfilter G3/8	Holder for Sinterfilter G3/8
003766	Aludichtring für G3/8 Gewinde	Alloy Seal Ring
008482	Haltebügel für Wasserabweiser	U-Clamp Water Separator
011112	Halteblech Wasserabscheider	Holder Oil- Water Separator

C

## DETAILANSICHT / DETAILED VIEW

### Öl- Wasserabscheider / Oil- Water Separator

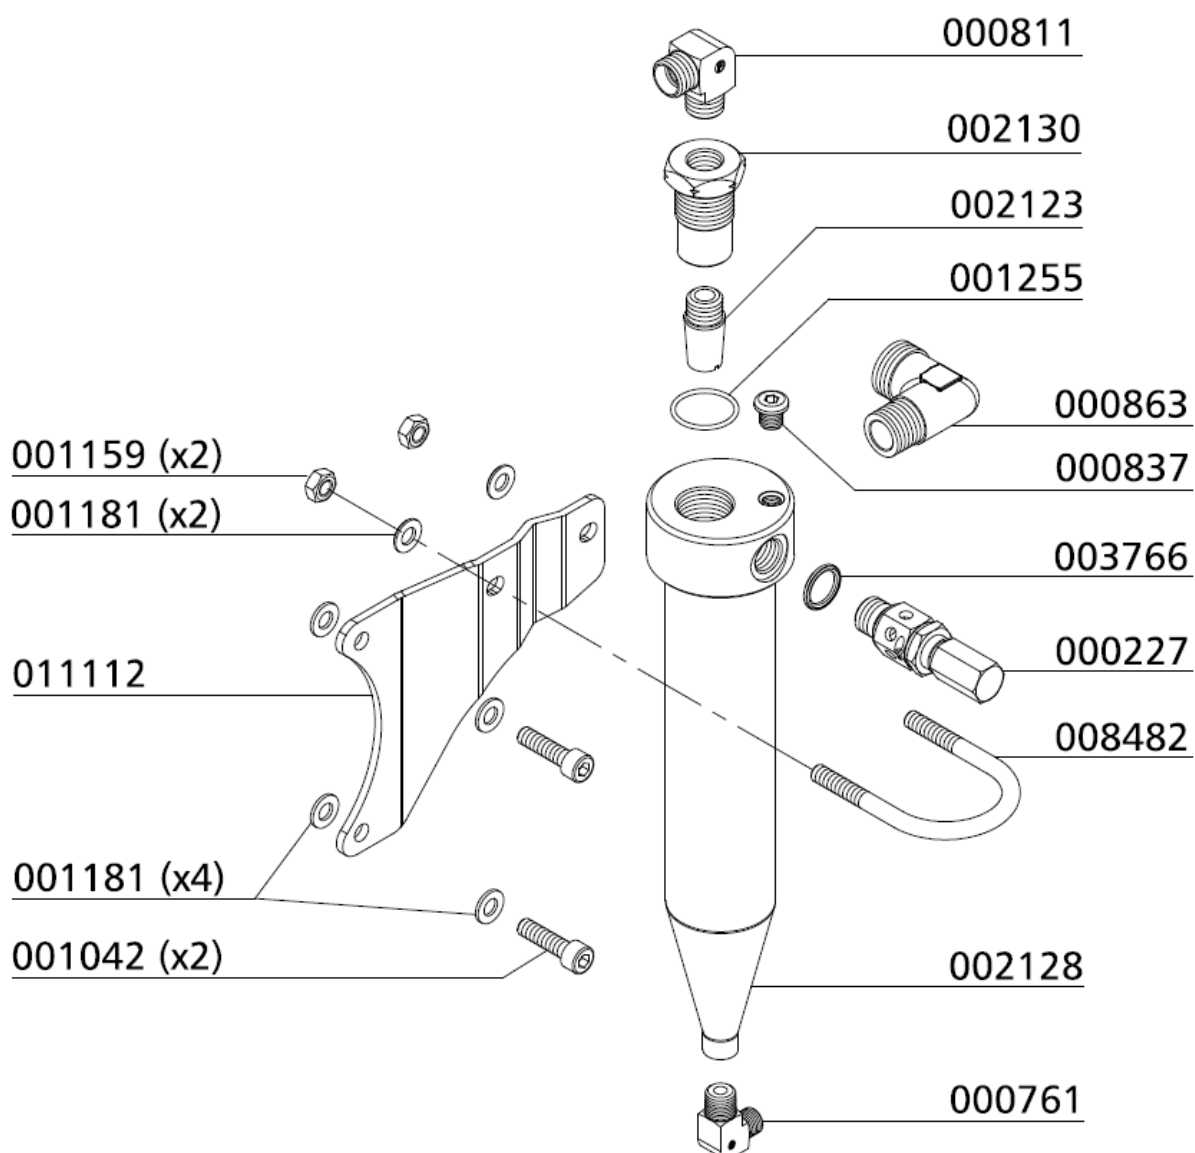



## ERSATZTEILLISTE / SPARE PART LIST

### Filtergehäuse 0,69 l / 0,98 l / Filter housing 0,69 ltr / 0,98 ltr

Best.-Nr. / Order No.	Benennung	Description
000002	Filterpatrone 1,7 Liter	Filter Cartridge 1.7 ltr BA
000506	Druckfeder 3,5x15,5x25	Spring
000508	USIT Ring für G1/4" AG	Gasket Ring U-Sit
000516	Nutring, DHRV	Seal Ring PMV
000517	Druckfeder, DHRV	Coil Spring PMV
000518	U-Scheibe 10x5x1,0 mm	Washer, M5, brass
000519	Dichtkappe, DHRV	Plastic Seal Piston PMV
000738	Gerade Verschraubung GE08LRCFX	Straight Connection GE08LRCFX
000761	Winkelverschraubung WE08L/1/4"	Elbow Connection
000837	Verschlussstopfen VSTI 1/8" ED	Plug
000941	Madenschraube M4x5mm DIN553	Worm Screw
001039	Zylinderschraube M8x16mm DIN912	Allen Bolt
001159	Stopfmutter M8 DIN985 ZN	Lock Nut M8
001181	U-Scheibe A8	Washer A8
001742	Druckstift, DHRV	Pressure Pin
001743	Einlassverschraubung, DHRV	Inlet Connection
001744	Einstellschraube, DHRV	Adjusting Bolt
001769	O-Ring, Filtergehäuse 59,92 x 3,53 NBR90	O-Ring Filter Housing LW 100
001788	Federdruckstück	Spring Adapter
001819	O-Ring, Filterpatrone-Nippel 7,3x2,4 NBR70	O-Ring, Filter cartrid. nipple
001825	O-Ring, Filterpatrone 9,19 x 2,62 NBR70	O-Ring, filter cartridge
002147	Haltebügel für Filtergehäuse ( ES )	U-Clamp for filter housing ES
003006	O-Ring, DHV 7 x 1,5, NBR90	O-Ring, PMV
008347	Schraubadapter	Screw Adapter
008348	Düsenrohr Hochdruckfilter	Nozzle Tube

## ERSATZTEILLISTE / SPARE PART LIST

### Filtergehäuse 0,69 l / 0,98 l / Filter housing 0,69 ltr / 0,98 ltr


Best.-Nr. / Order No.	Benennung	Description
009657	Filterschlüssel	Filter key
010572	Drallscheibe	Swirl Disk
010573	Umlenkung Einlassluftstrom	Deflection Inlet Airflow
010576	O-Ring 63,5x2 NBR 70	O-ring 63,5 x 2
010706	Filtergehäuse kompl. mit DHRV, 0,98 Ltr	Filter housing c/w PMNRV 0.98L
010759	Zylinderschrauben M4x12mm	Allen Bolt M4x12mm
011174	Atemluft Filterpatrone 0,69 Liter	Filter Cartridge 0.69 ltr.
011183	Aufkleber Typenschild Endfiltergehäuse	End filter housing type plate sticker
011281	Filtergehäuse 0,69 Liter kompl. mit DHRV	Filter housing c/w PMV 0.69 L
012457	Halteschale Endfiltergehäuse 350/420 bar	Spacer Bracket Filter Housing

### Nicht einzeln lieferbar / not available separatly

Best.-Nr. / Order No.	Benennung	Description
001716	Obere Verschlusschraube Filtergehäuse	Plug Filter Housing
001717	Filtersockel, ( Filtergehäuse )	Base Filter Housing
010575	Druckbehälterrohr, Ø95x470mm	Tube Filter Housing Ø95x470mm
011173	Druckbehälterrohr, Ø95x325mm	Tube Filter Housing Ø95x325mm

## DETAILANSICHT / DETAILED VIEW


### Filtergehäuse LW SC-180 ES (0,69 l) / Filter housing LW SC-180 ES (0,69 ltr)

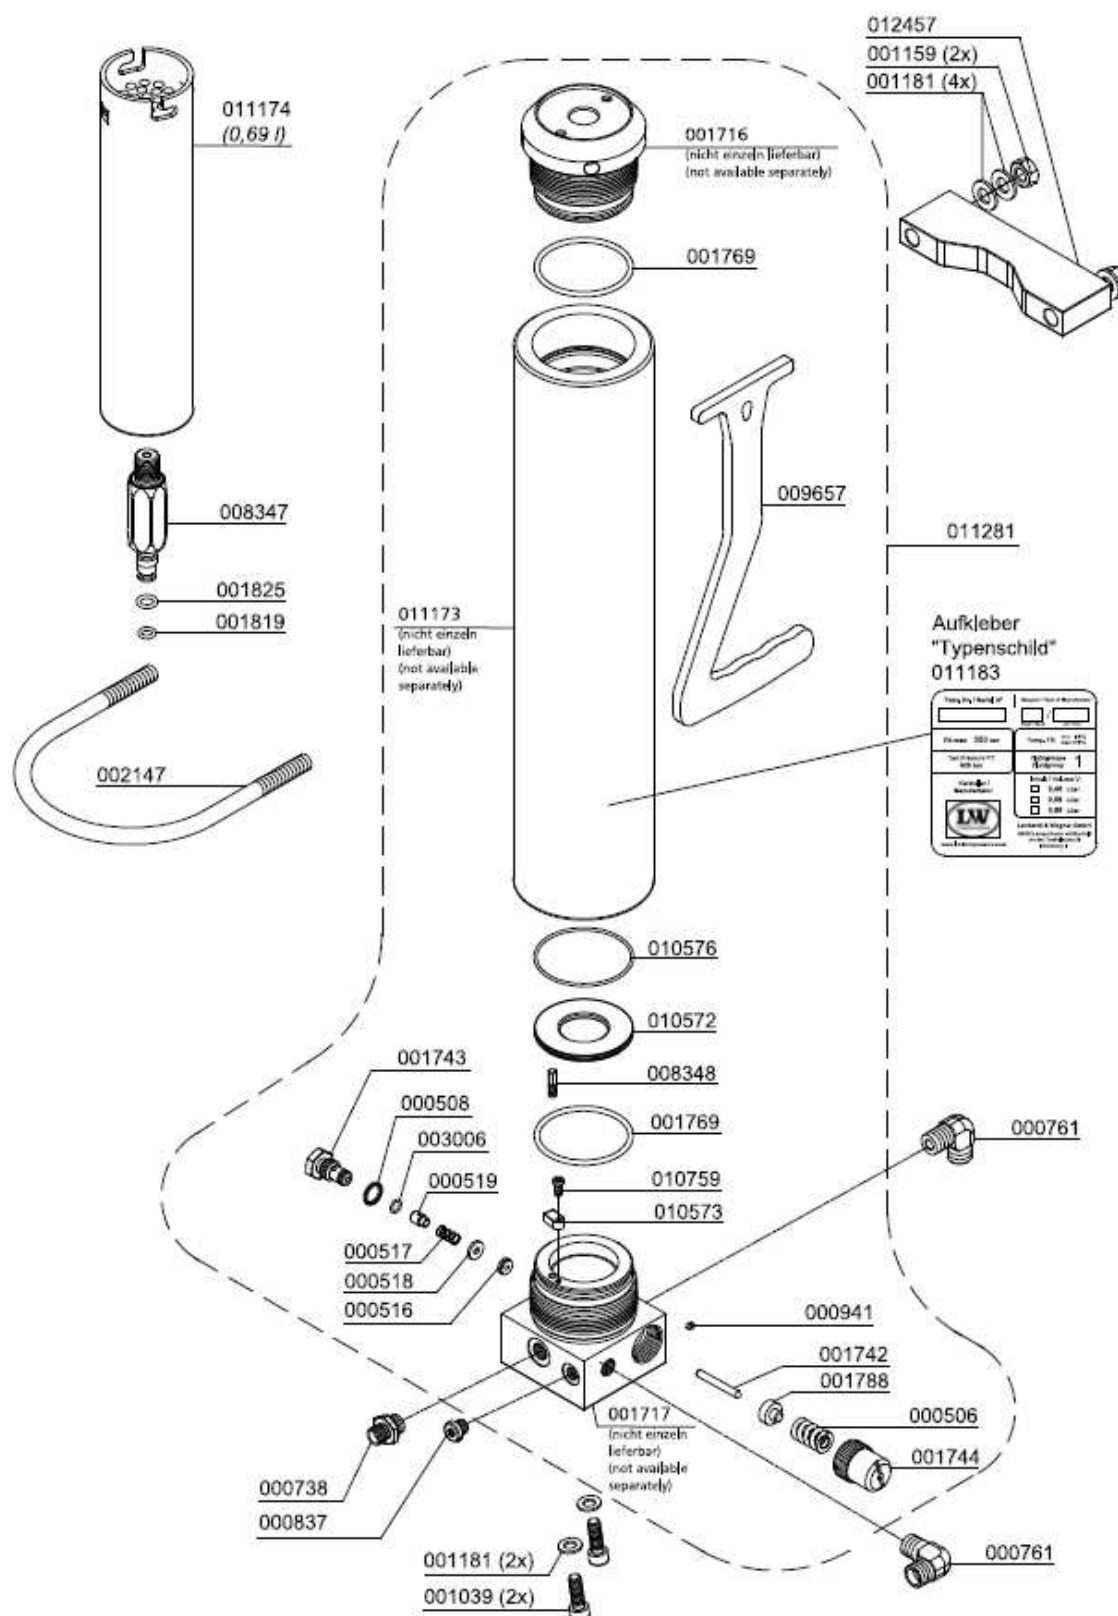

## DETAILANSICHT / DETAILED VIEW

### Filtergehäuse LW SC-250 ES (0,98 l) / Filter housing LW SC-250 ES (0,98 ltr)


#### Option

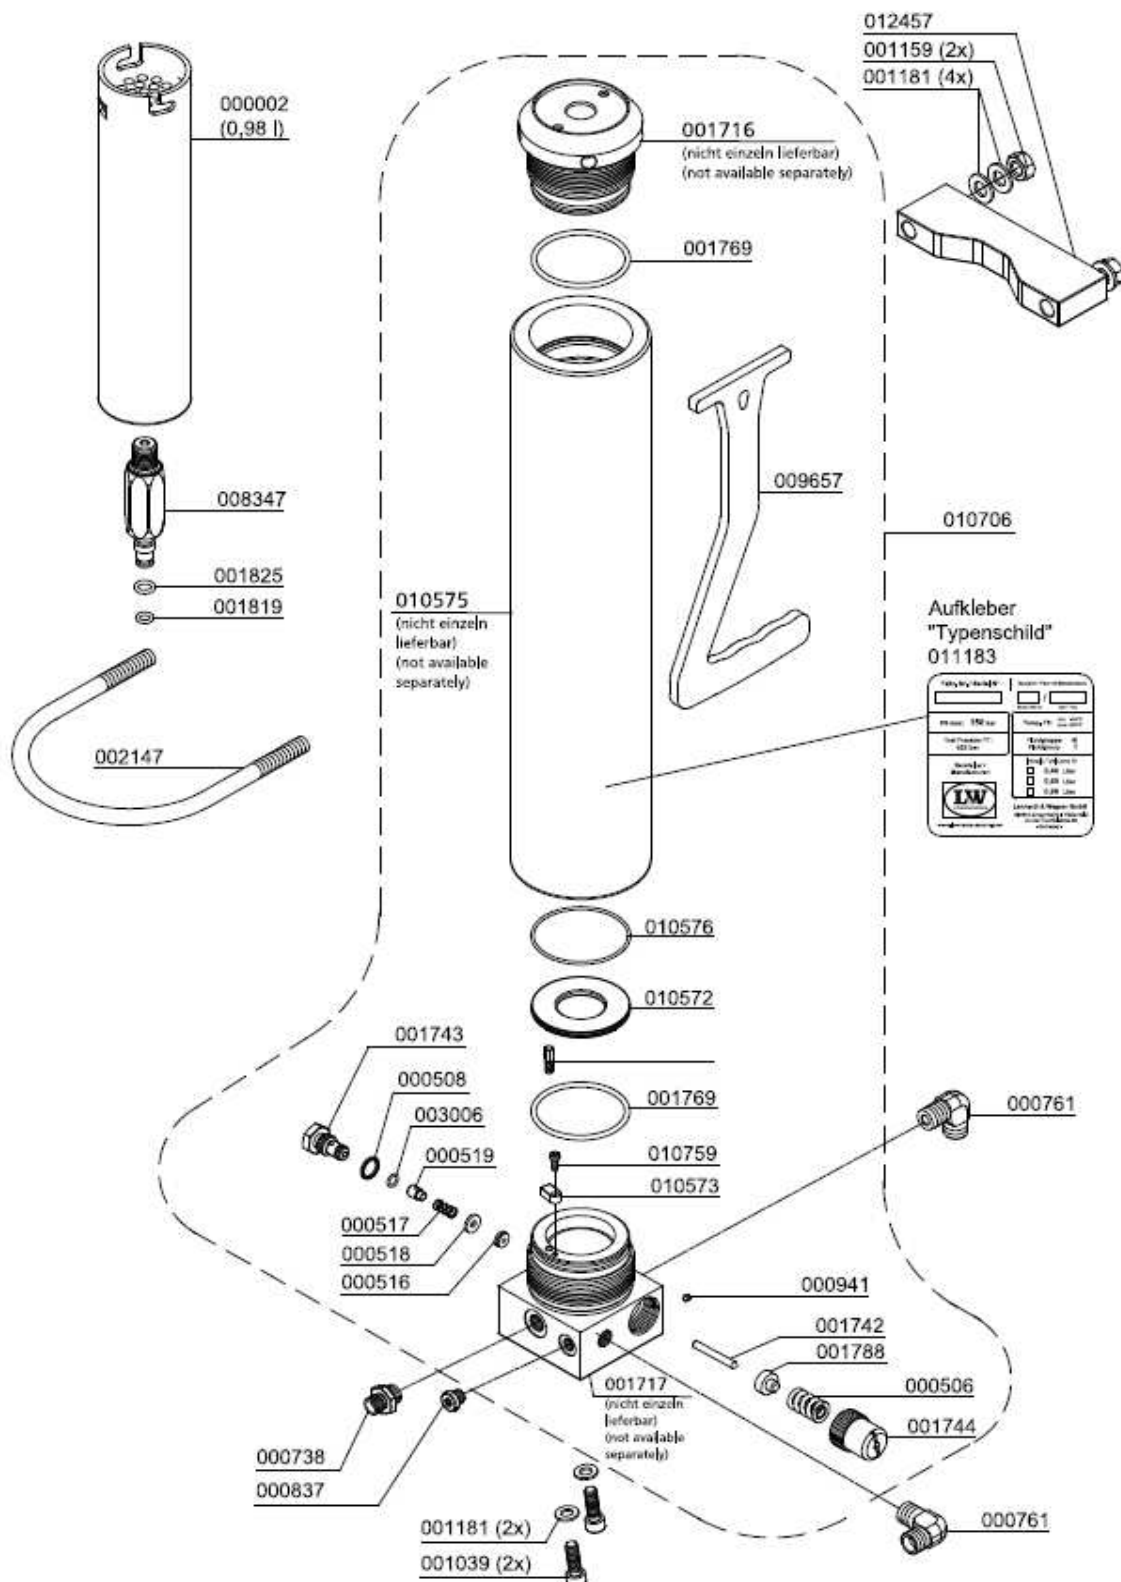

## ERSATZTEILLISTE / SPARE PART LIST

### Abscheider Kondensatautomatik / Automatic condensate separator

Best.-Nr. / Order No.	Benennung	Description
000497	Mutter DIN 934 M6	Nut M6, zinc plated
000498	U-Scheibe A6	Washer A6
000737	Verschraubung GE08LR1/8CFX	Connection
000763	Verschraubung WE08LR3/8CFX	Elbow Connection
001006	Zylinderschraube M5x20mm DIN912	Allen Screw
001030	Zylinderschraube M6x16mm DIN912	Allen Bolt
001176	U-Scheibe A5	Washer A5
007368	Abscheider G3/8" m. Metallsammelbehält.	Filter G3/8" c/w metal bowl
010411	Schalldämpfer G3/8"	Silencer G3/8"
011336	Halteblech Endabscheider G3/8"	Bracket Oil- Water Separator

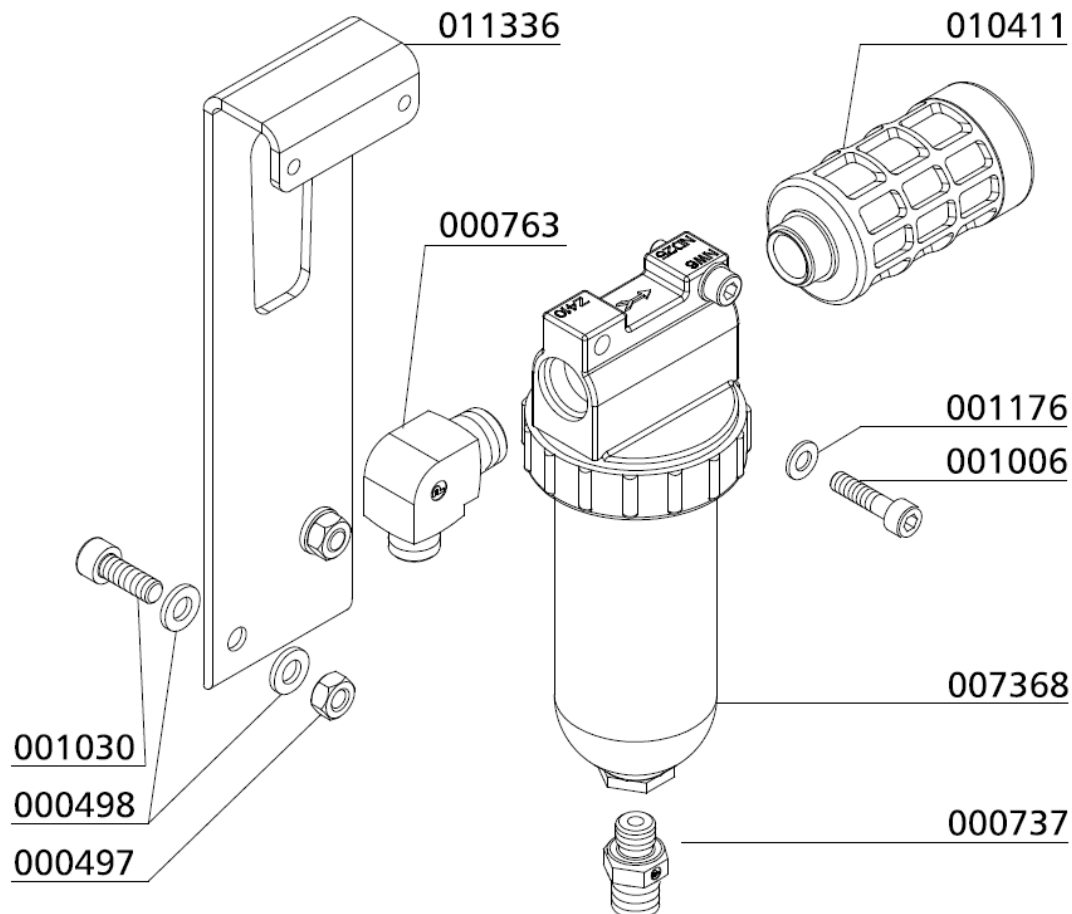

## ERSATZTEILLISTE / SPARE PART LIST


### Kühler / Cooler

Best.-Nr. / Order No.	Benennung	Description
000498	U-Scheibe A6	Washer
000735	Gerade Verschraubung G08L	Connection
001030	Zylinderschraube M6x16mm	Allen Bolt
001045	Zylinderschraube M8x45mm DIN912	Allen Bolt
001047	Zylinderschraube M6x12mm	Allen Bolt
001181	U-Scheibe A8	Washer A8
001848	Rohrschelle (Ø15-18mm)	Pipe Clamp, 8mm Finned Pipe
009564	Rohrschelle Ø21, 12 breit	Pipe Clamp
010396	Kühler 1. Stufe, mit Muttern & Schneidr.	Cooler 1st Stage LW 200
010397	Kühler 2. Stufe, mit Muttern & Schneidr.	Cooler 2nd Stage LW 200
010425	Kühler 3. Stufe, mit Muttern & Schneidr.	Cooler 3rd Stage LW 200
011113	Halteblech Kühler	Holder Cooler

C

## DETAILANSICHT / DETAILED VIEW

### Kühler / Cooler

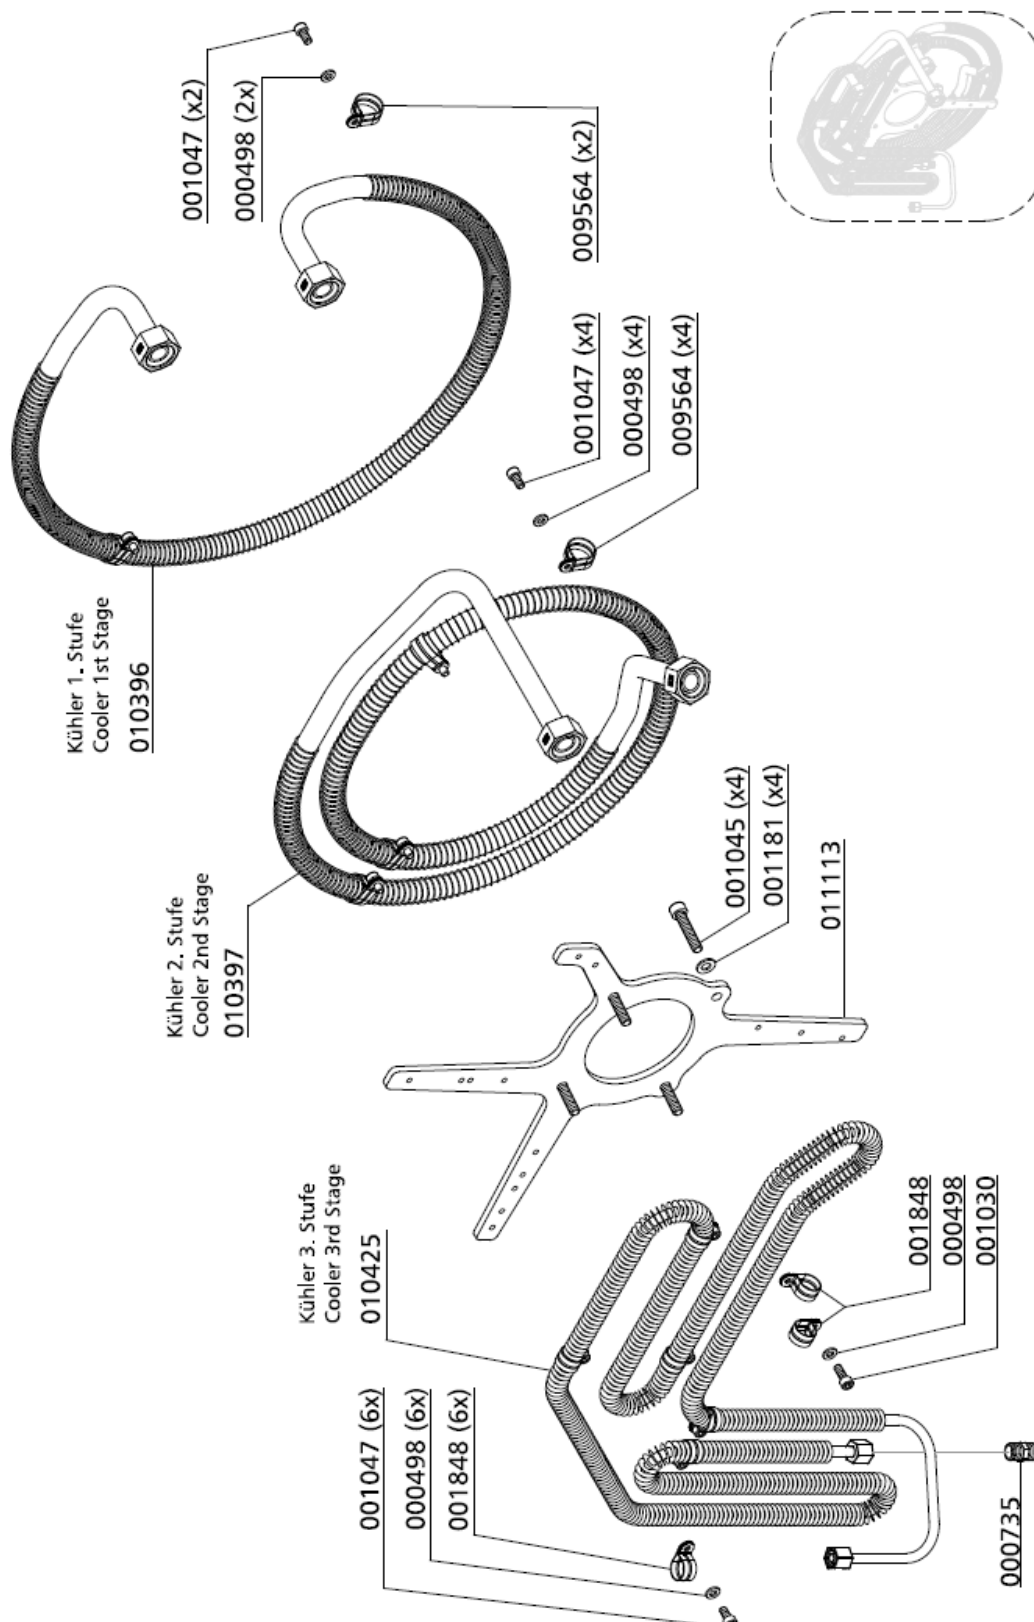

## ERSATZTEILLISTE / SPARE PART LIST


### Pneum. Kondensat-Ventil / Pneumatic Condensate Valve

Best.-Nr. / Order No.	Benennung	Description
000188	Sinterfilter, pneum. Kondensatventil	Sintered Filter
000190	O-Ring 10 x 2,5 NBR90	O-Ring 10 x 2,5 NBR90
000191	Steuerkolben, pneum. Kondensatventil	Piston
000498	U-Scheibe A6	Washer A6
000616	Magnetventil NC 80bar, 2xG1/4", 230V, 16Watt	Solenoid NC 80bar , 2xG1/4", 230V, 16Watt
000721	Verschraubung WE06LRCFX	Connection WE06LRCFX
000737	Verschraubung GE08LR1/8CFX	Connection GE08LR1/8CFX
000892	Doppelnippel G1/8"-1/4"	Double Nipple G1/8"-1/4"
001011	Zylinderschraube M6x60mm DIN912	Allen Bolt
001546	Aludichtring für Magnetventile G1/4", Ø19 x 12,3 x 5mm	Alloy Seal Ring for G1/4" male, Ø19 x 12,3 x 5mm
005325	Verschraubung GE 08L R1/4" .71	Connection GE 08L R1/4" .71
005855	Winkeleinschraubverschraubung, G1/4" - 8 mm	Elbow Hose Connection, G1/4" - 8 mm
006614	O-Ring 20x2 NBR90	O-Ring 20x2 NBR90
011064	Pneum. Kondensatablassventil, PN 420 bar, Einlass Ø3,0 mm	Pneumatic Condensate Valve, PN 420 bar, intake Ø3,0 mm
011065	Gehäuse, pneum. Kondensatventil	Housing PCV
011066	Düsenschraube, pneum. Kondensatventil, Standard Bohrung Ø3,0mm	Inlet Jet Screw, type "30"
011072	Verschlussstopfen, pneum. Kondensatventil	Plug PCV
011559	Reparatursatz pneum. Kondensatventil	Repair Kit PCV



## DETAILANSICHT / DETAILED VIEW

### Pneum. Kondensat-Ventil / Pneumatic Condensate Valve

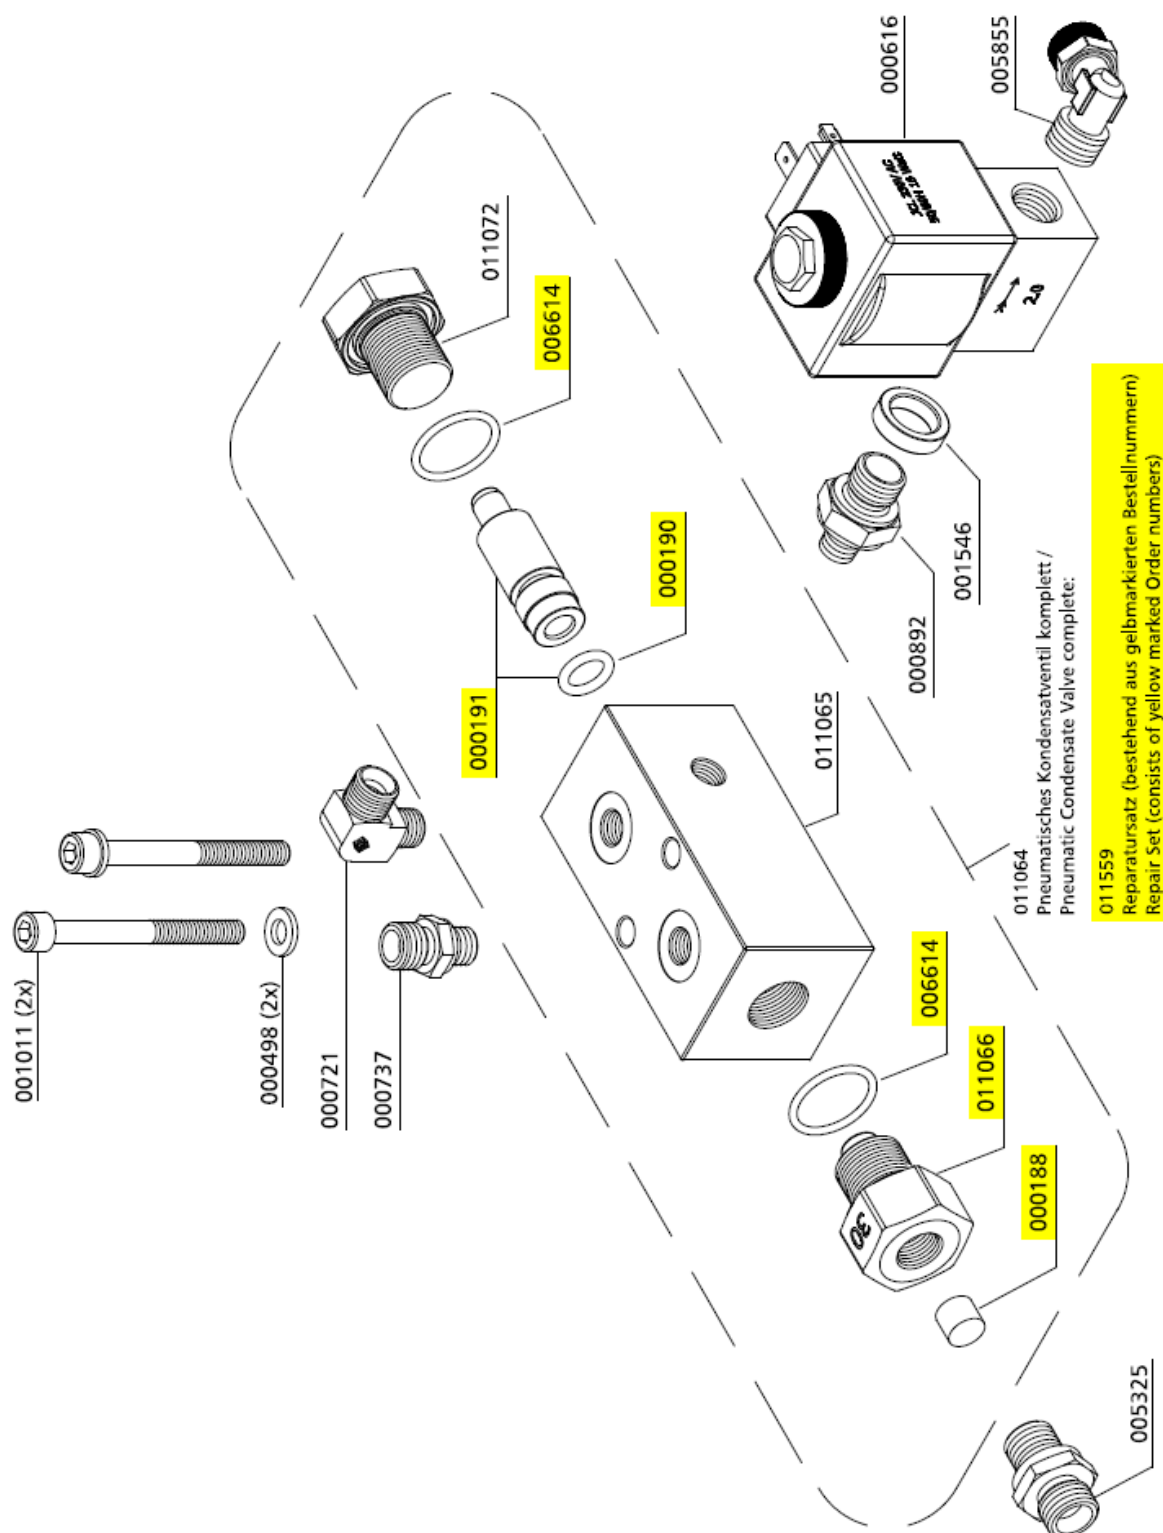


## ERSATZTEILLISTE / SPARE PART LIST

### Druckschalter / Pressure Switch

Best.-Nr. / Order No.	Benennung	Description
000203	Druckschalter 50-350 bar	Pressure Switch 50-350 bar
000757	T-Verschraubung mit fester Mutter seitl. EL 08 L	T-Connection with fixed nut EL 08 L
009683	Verschraubung, mit fester Mutter	Connection with fixed nut

C

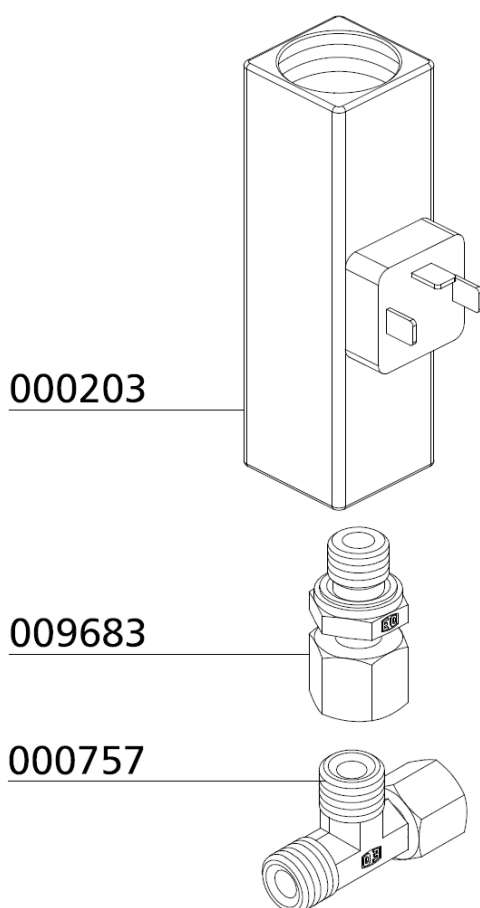


## ERSATZTEILLISTE / SPARE PART LIST

### Sicherheitsventil / Safety Valve

Best.-Nr. / Order No.	Benennung	Description
000553	Sicherheitsventil - Bauteilgeprüft	Safety Valve TÜV 225 bar
000554	Sicherheitsventil - Bauteilgeprüft	Safety Valve TÜV 250 bar
000555	Sicherheitsventil - Bauteilgeprüft	Safety Valve TÜV 300 bar
000556	Sicherheitsventil - Bauteilgeprüft	Safety Valve TÜV 330 bar
000557	Sicherheitsventil - Bauteilgeprüft	Safety Valve TÜV 350 bar
001058	Zylinderschraube M8x70mm DIN912	Allen Bolt
001814	Sicherheitsventil - Bauteilgeprüft	Safety Valve
001815	Sicherheitsventil - Bauteilgeprüft	Safety Valve
001816	Sicherheitsventil - Bauteilgeprüft	Safety Valve
001817	Sicherheitsventil - Bauteilgeprüft	Safety Valve
007548	O-Ring 16 x 2.0 NBR90	O-Ring, flange safety valve


Sonder-Einstelldrücke auf Anfrage!  
Special relieve pressures are available on request!

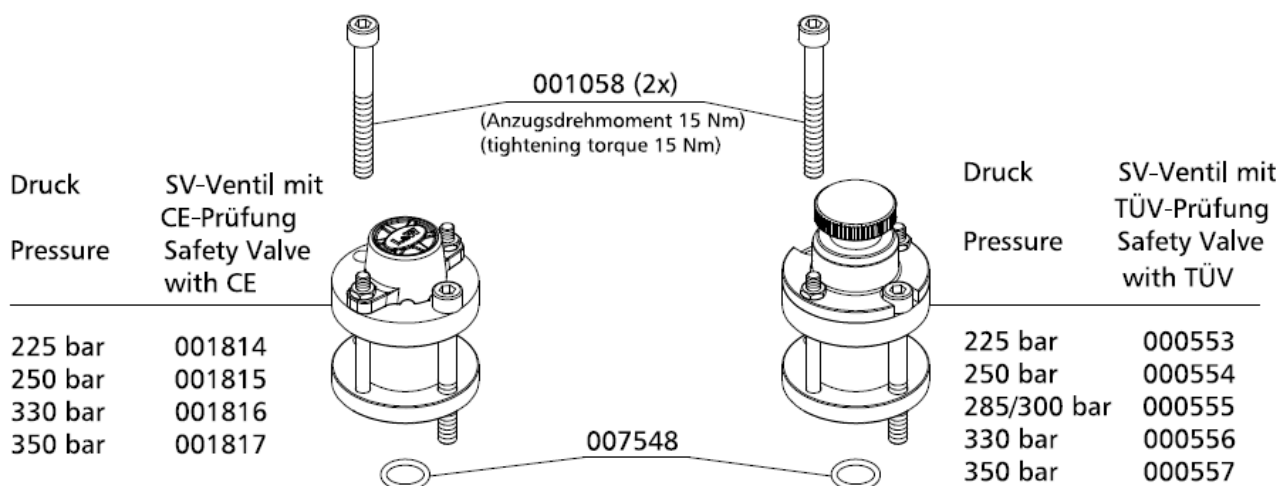

## ERSATZTEILLISTE / SPARE PART LIST

### Ansaugfilter / Intake Filter

Best.-Nr. / Order No.	Benennung	Description
001707	Ansaugfiltergehäuse	Air Intake Filter Housing
001708	Ansaugfilterpatrone	Air Intake Filter Cartridge
001772	Flügelmutter PVC-schwarz	Winged Nut, PVC black
001778	O-Ring Ø22x2mm	O-Ring
001782	O-Ring Ø80x2mm	O-Ring
001829	Deckel Ansaugfiltergehäuse	Cover Air Intake Housing
012904	Adapter Ansaugsschlauch 26/32 mm	Adapter Intake Hose 26-32 mm

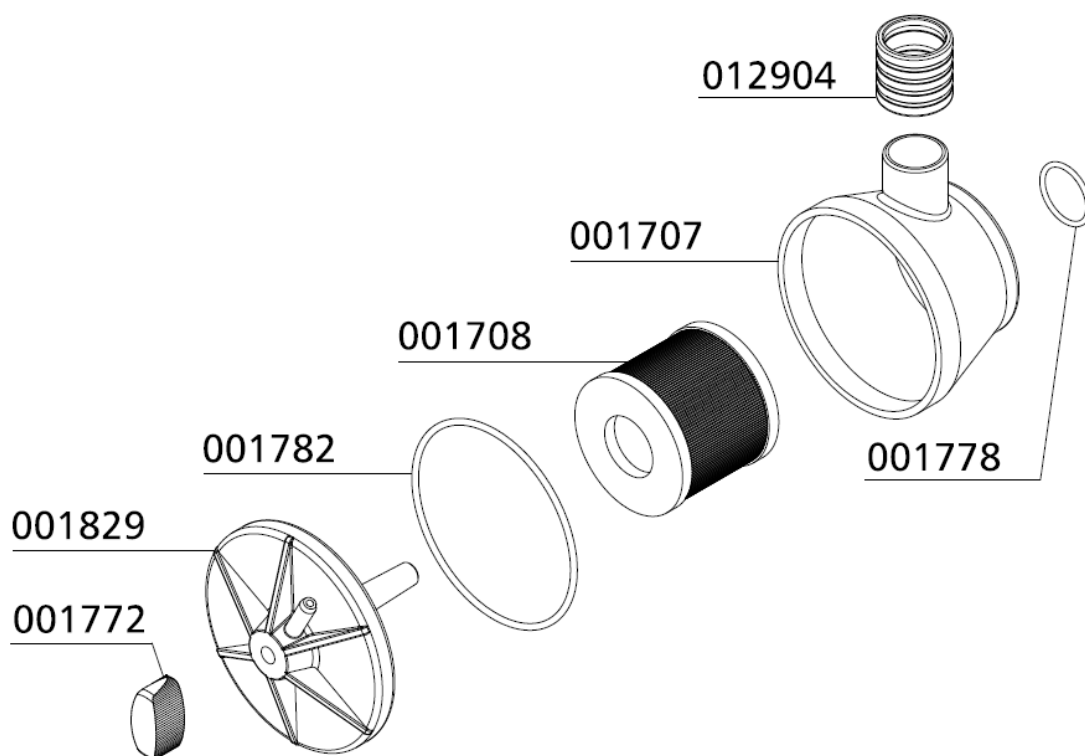

## ERSATZTEILLISTE / SPARE PART LIST


### Motor / Engine

Best.-Nr. / Order No.	Benennung	Description
000115	Augenschraube M10x110mm	V-Belt Tensioning Bolt
001117	Schlossschraube M10x35mm DIN603	Carriage Screw
001121	Schlossschraube M10x55mm DIN603	Carriage Bolt
001163	Mutter M10 DIN934	Nut M10
001164	Stopfmutter M10 DIN985	Lock Nut M10
001186	U-Scheibe A10	Washer A10
001684	Keilriemen SPA 160-1	V-Belt
001828	U-Scheibe A10,5	Washer
008364	Keilriemenscheibe SPA 1457	Pulley c/w lock bush
008644	Spannbuchse für Riemenscheibe	Clamp sleeve for pulley

C

## DETAILANSICHT / DETAILED VIEW

### Motor / Engine

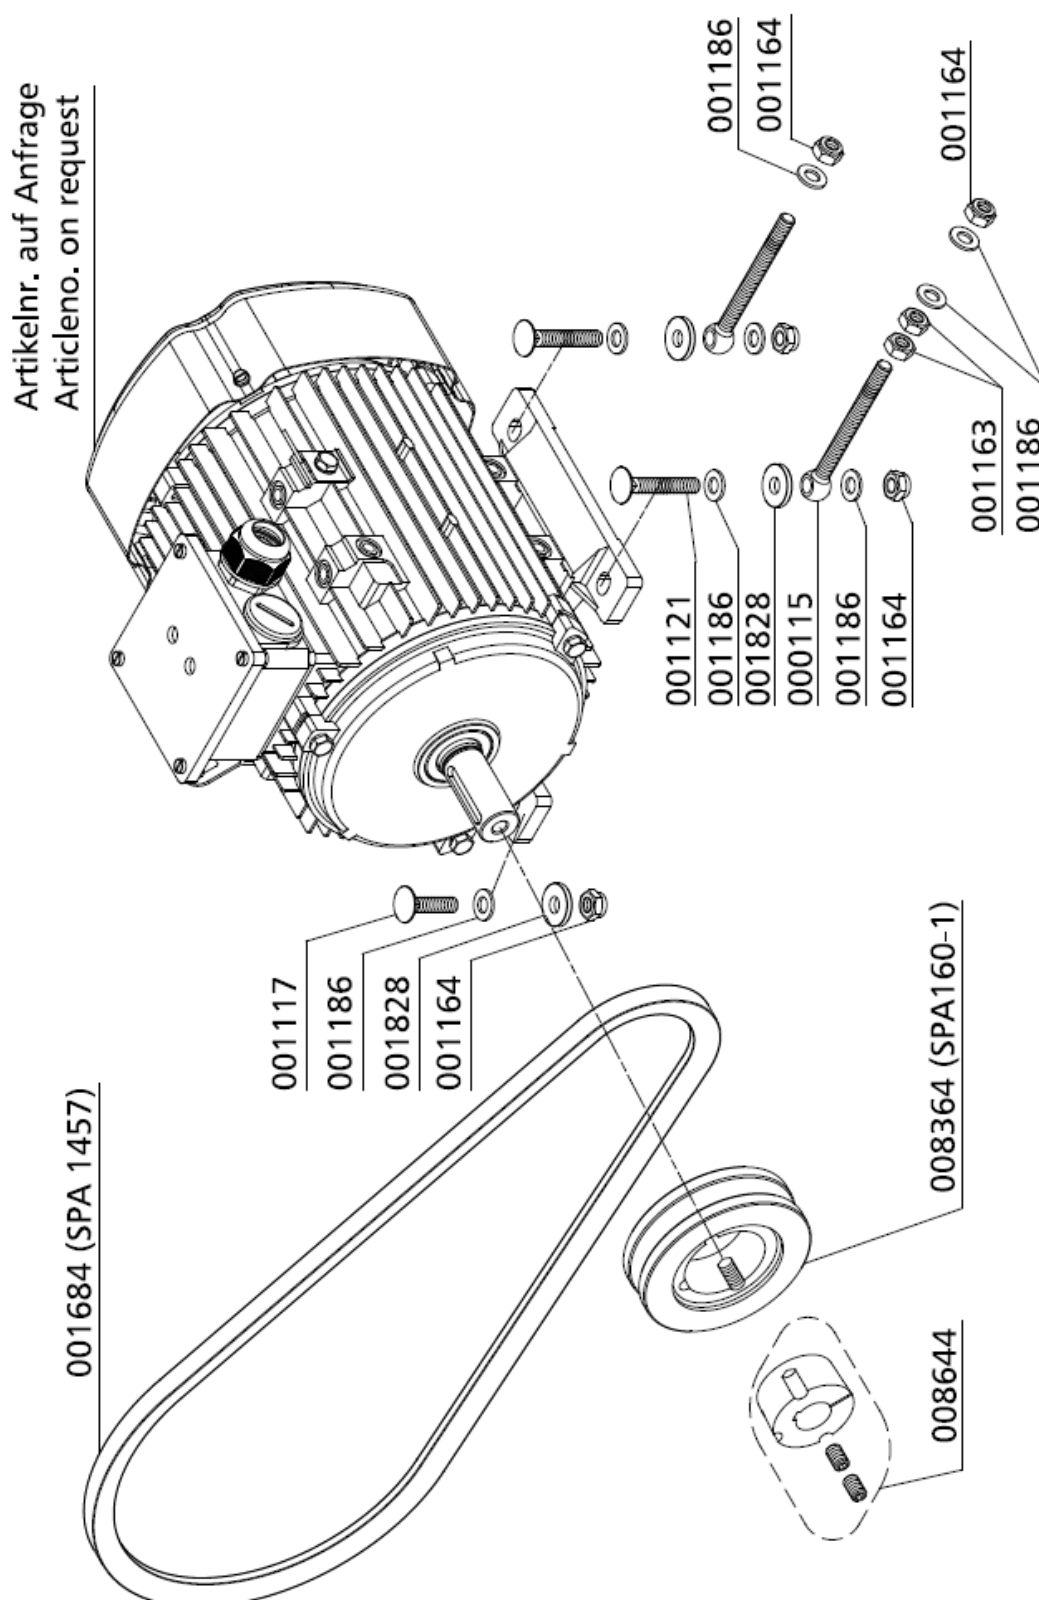


## ERSATZTEILLISTE / SPARE PART LIST

### Lüfterrad / Flywheel

Best.-Nr. / Order No.	Benennung	Description
001043	Zylinderschraube M8x35	Allen Bolt
001184	Schnorr-Scheibe S8	Clamp Washer
003983	Scheibe Schwungrad	Washer, Flywheel
010898	Lüfterrad Ø460mm	Fan Wheel Ø460mm
011328	Anlegescheibe 3mm	Washer 3mm

C

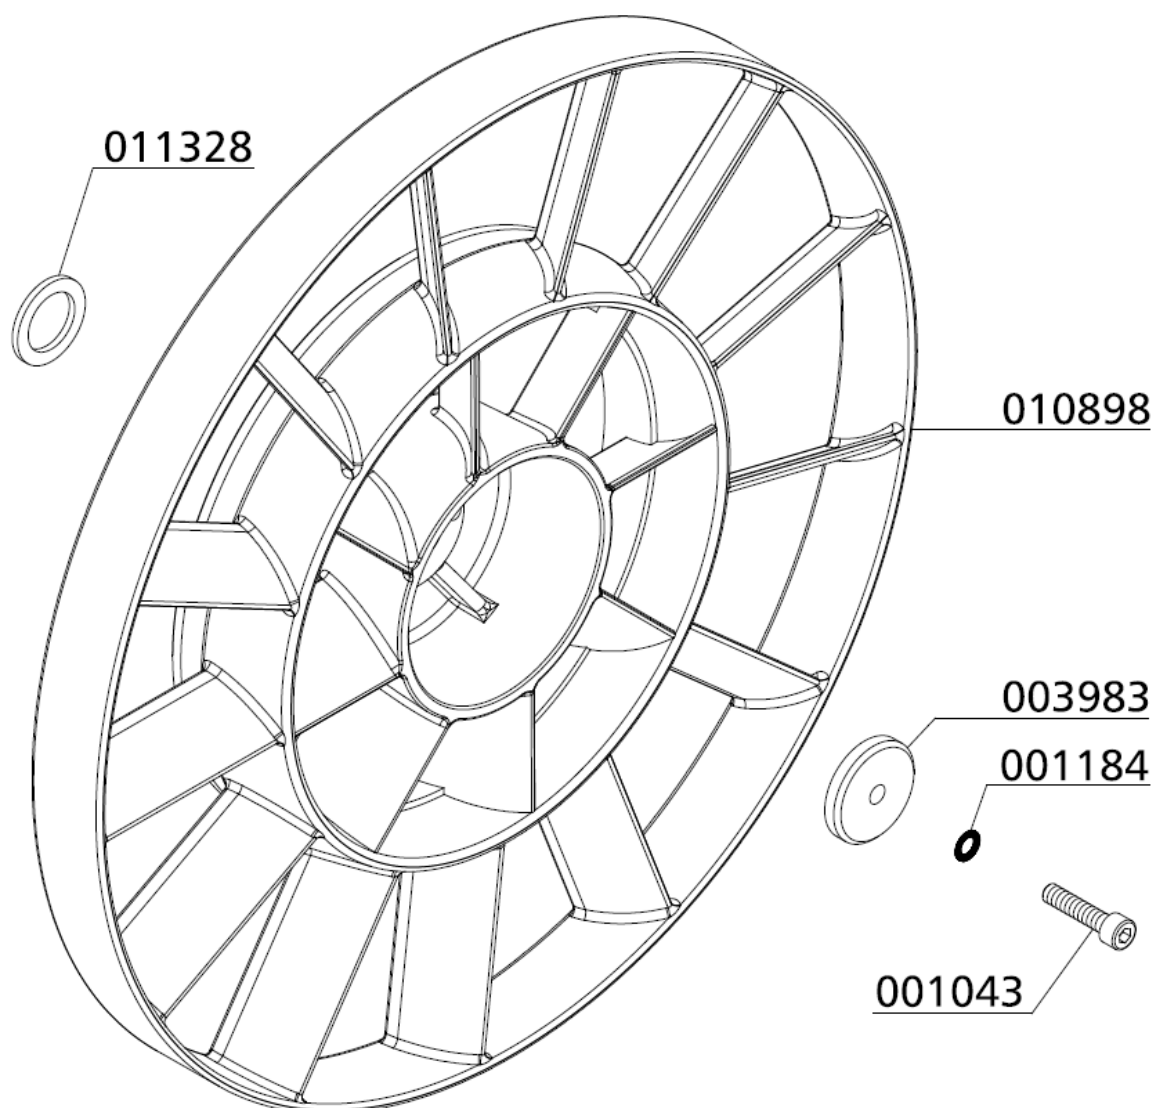

## ERSATZTEILLISTE / SPARE PART LIST

### Fülleinrichtung und Füllventil / Filling Device and Filling valve

Best.-Nr. / Order No.	Benennung	Description
000213	Handrad, schwarz DIN 477, 200/232 bar	Hand Wheel, black
000215	Handrad, rot DIN 477, 300 bar	Hand Wheel, red
000386	Gleitscheibe, Kreuzventil	Slide Washer
000387	Feder ( Kreuzventil )	Coil Spring, cross d. valve
000498	U-Scheibe A6	Washer A6
000663	Einbaumanometer mit Befestigungsbügel	Press. Gauge c/w fixing strap
000696	Füllanschluss o. Handrad 200bar	Filling Connect. w/o handwheel 200bar
000698	Füllanschluss o. Handrad 300bar	Filling Connec. w/o handwheel 300bar
000709	Füllventil Kreuzbauweise, kompl. ohne Anschlüsse	Filling Valve cross design, complete
000779	Verschlussstopfen 1/4" , Edelstahl	Plug 1/4"
000783	Verschraubung GE10L - R1/4"	Straight Connection
001048	Zylinderschraube M6x10mm DIN912	Allen Screw
001237	O-Ring DIN Flaschenanschluss 11,91 x 2,62 NBR90	O-Ring DIN filling connector
001322	CU-Ring Füllstutzen Kreuzventil Ø8 X 13 X 1,5mm	Copper Seal Ring
001391	O-Ring, 7,8 x 2,5 NBR70	O-Ring
001392	Füllhandrad Kreuzventil	Hand Wheel Filling Valve cross
001393	Entlüftungsspindel	Vent Spindle
001394	Entlüftungshandrad	Vent Hand Wheel
001395	Gleitscheibe, schwarz, Kreuzventil	Slide Washer, plastic black
001398	Madenschraube M3x8mm	Worm Screw
001399	Oberspindel	Adapter Shaft
001400	Dichtspindel, Kreuzventil	Seal Spindle Filling Valve
001401	Schlitzmuttern (Satz - 2 Stück)	Slotted Nuts, Filling Valve (2 pieces)
001402	Gehäuseverschraubung kompl. m. O-Ringen	Filling Spindle Body
001445	Manometerschlauch, Minimeßschlauch	Pressure Gauge Hose
001683	Schlauchanschlussstück, Alu	Alloy Hose Connector G1/4"





## ERSATZTEILLISTE / SPARE PART LIST


### Fülleinrichtung und Füllventil / Filling Device and Filling valve

Best.-Nr. / Order No.	Benennung	Description
002294	Reparatursatz Füllventil	Repair Kit Filling valve
002506	Einbaumanometer 0-250bar	Pressure Gauge 0-250bar
002812	Verschraubung, Edelstahl G1/4" kegelig / M16x1,5 (8S)	Connection, S/S
003684	Füllventil Kreuzbauweise , DIN 200 bar ohne Manometer	Filling Valve cross
003685	Füllventil Kreuzbauweise , DIN 300 bar ohne Manometer	Filling Valve cross
004864	Hochdruckschlauch	HP-Hose 650mm

C

## DETAILANSICHT / DETAILED VIEW


### Fülleinrichtung / Filling Device

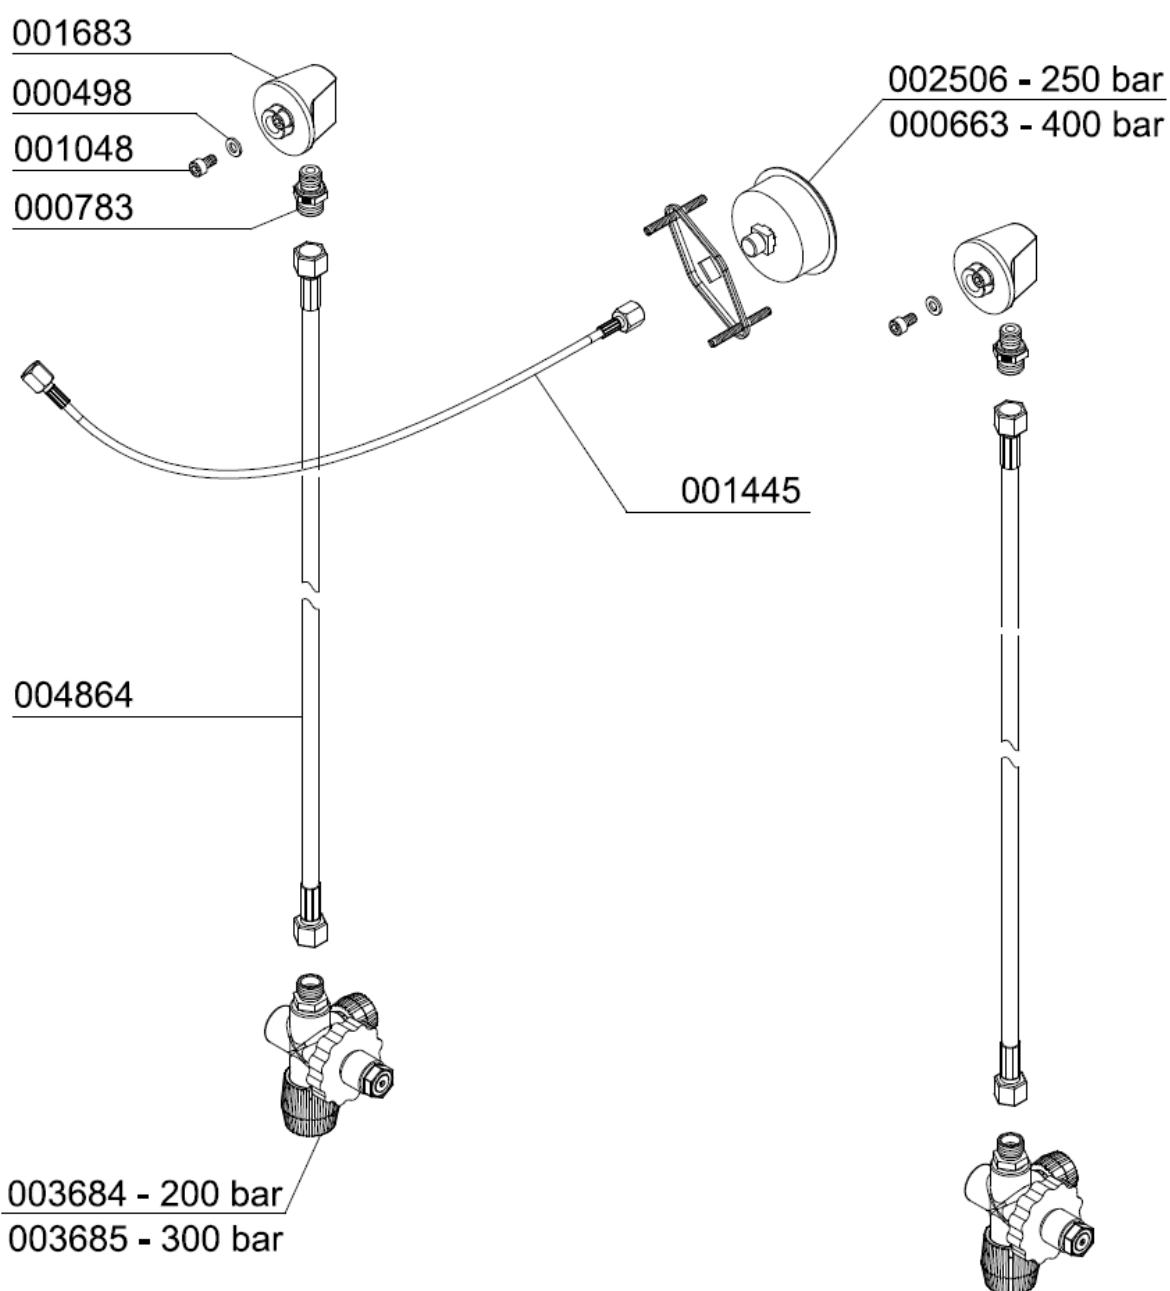

C


## DETAILANSICHT / DETAILED VIEW

### Füllventil / Filling valve

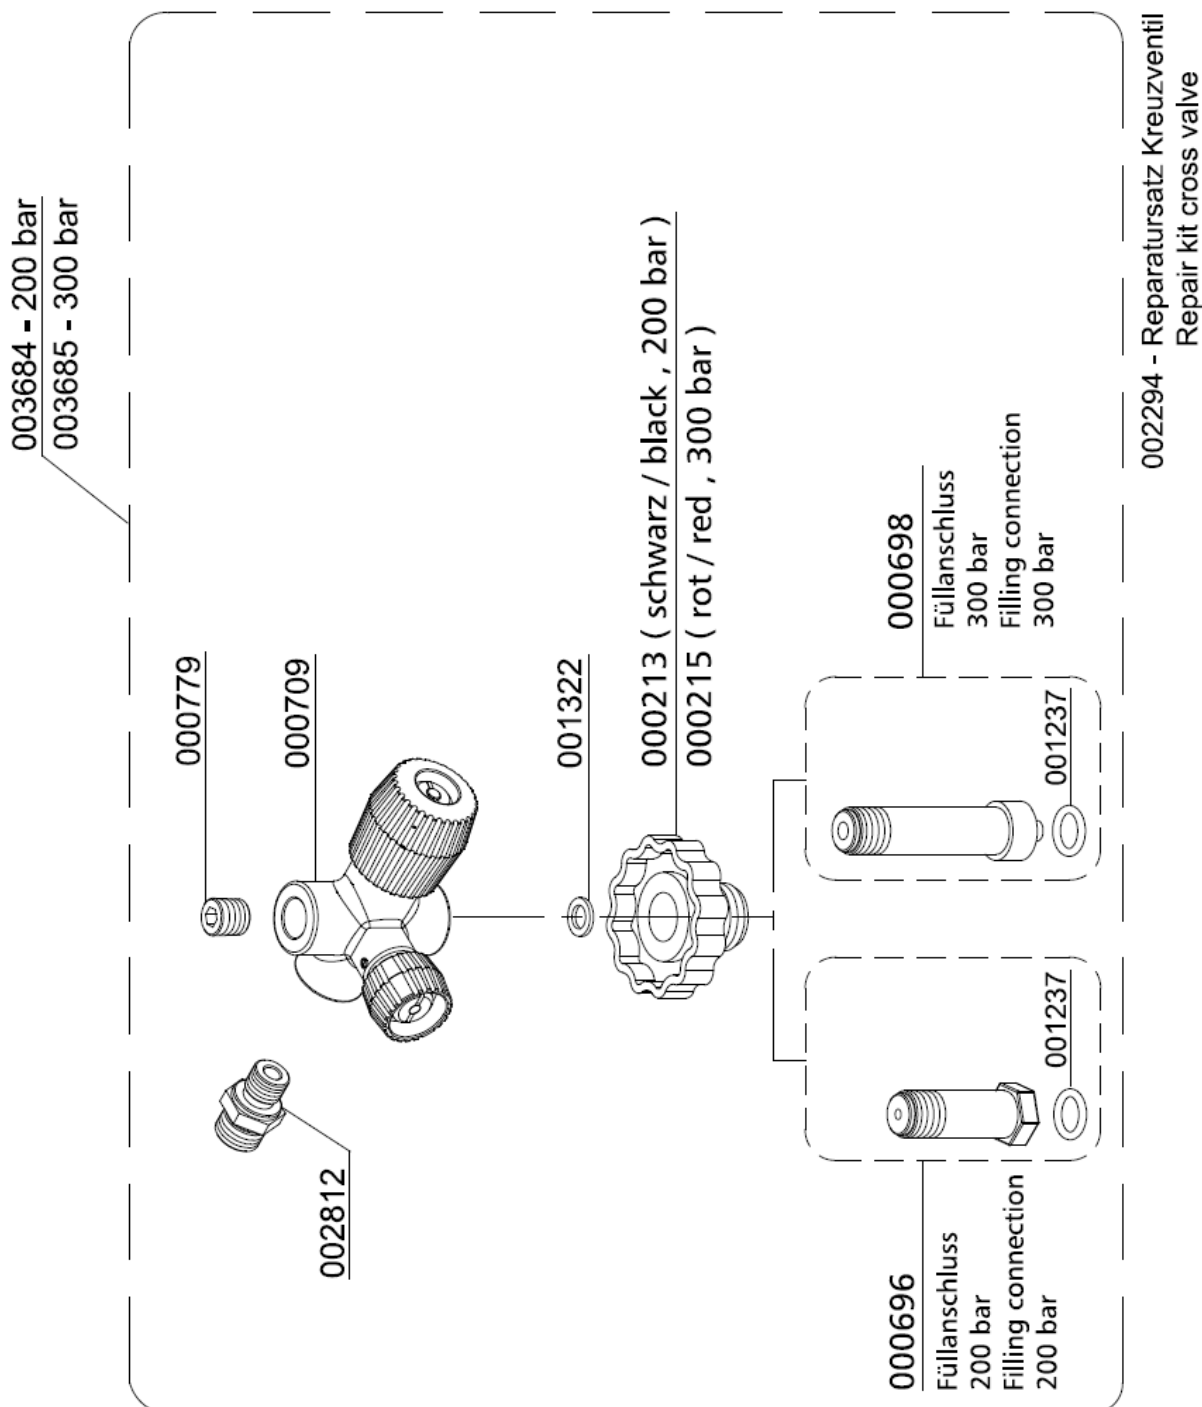

## DETAILANSICHT / DETAILED VIEW

### Füllventil - Kreuzventil / Filling valve - Cross valve

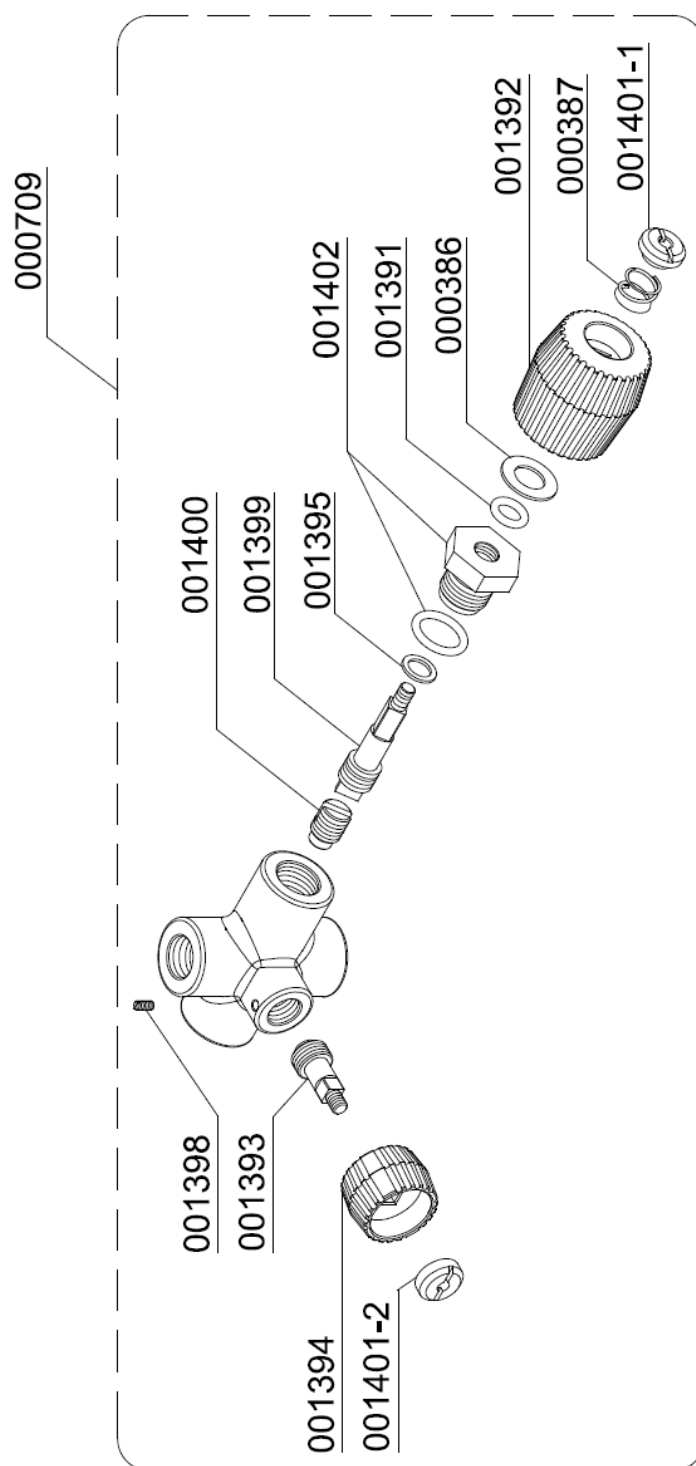

C



# ATTACHMENT

E

**Lenhardt & Wagner GmbH**

**An der Tuchbleiche 39  
D-68623 Lampertheim – Hüttenfeld**

[www.lw-compressors.com](http://www.lw-compressors.com)



## Operating Instruction

---

### Safety valve

**Typ:**

**SiV2 BKZ TÜV.SV.24-1140.5.G.V.P CE 0091 AlMgSi1 F31 1100\* Lenhardt & Wagner**

<b>Set pressure:</b>	see mark (hand wheel on top of valve)
<b>Maximum outflow:</b>	Set pressure 100-159 bar: 750 l / min Set pressure 160-380 bar: 1.100 l / min
<b>Suitable media:</b>	Media-resistant, non-corrosive gases

The safety valve is used for protection of pressurized components, eg pipelines, pressure vessels, or the compressor itself.

The hand wheel on the top of the safety valve is marked with the adjusted set pressure.



Safety valve with socket

- 1) Identification of set pressure
- 2) Seal
- 3) Fixing screws<sup>1</sup>
- 4) Venting screw (hand wheel)
- 5) Identification serial number
- 6) Socket for safety valve

---

<sup>1</sup> The fixing screws M8 must be strength class 8.8 and meet the requirements of Merkblatt AD 2000 leaflet W7. Shaft length 70mm.

In order to prevent manipulation of the set pressure, all safety valves are factory fitted with a seal.

A safety valve on which the seal has been removed, must be returned to the manufacturer for repair / adjustment before further use.

In addition, the safety valve has a venting device (hand wheel).

When rotated clockwise, the safety valve and the filter housing of the final stage are completely vented.

During normal operation, the screw is unscrewed to the upper stop anticlockwise; an integrated safety ring prevents the screw from being removed.

---

If a safety valve blows off, the system must be switched off immediately and the cause of the error, investigated.

There are two possible reasons:

1. The safety valve is defective and blows off before the set pressure.

In this case the safety valve should be submitted immediately to the manufacturer for repair or replaced with a new one.

2. The safety valve opens properly, the problem is on the system.

A constant blowing of the safety valve is not permitted, the sealing seat of the valve can be damaged. The error on the system must be detected and repaired before further filling operations.

The safety valve may only be used if it is ensured that the maximum flowrate of the system does not exceed the blow-off rate of the safety valve.

The safety valve may only be used with the approved media.

Repair work on compressors must only be performed by trained personnel.

### **Dismantling of the safety valve**

Ensure that on the safety valve is no pressure.

Loosen and remove the two M8 fixing bolts with a 6 mm Allen key.

The safety valve can now be removed by turning and simultaneously pulling out of the socket.

### **Mounting**

1. Clean the safety valve socket.

2. Oil the insert pin of the safety valve including the O-ring with 1 to 2 drops of oil.

3. Press the safety valve pin complete into the socket.

4. Fasten the safety valve with the two 8 mm allen screws into the socket  
(Tightening torque: 15 Nm)

5. Screw the venting screw (hand wheel) anticlockwise to its upper limit.

6. Start the System (Compressor), check installation for leaks and proper function.

**Manufacturer:** Lenhardt & Wagner GmbH  
An der Tuchbleiche 39  
D-68623 Lampertheim – Hüttenfeld

**Contact:** E-Mail: [service@lw-compressors.com](mailto:service@lw-compressors.com)  
Web: [www.lw-compressors.com](http://www.lw-compressors.com)  
Tel.: +49 (0) 6256 – 85880 0  
Fax: +49 (0) 6256 – 85880 14

---

**Note:**

*Only use safety valves which are in a technically perfect condition, for its intended purpose, safety and danger awareness, in compliance with the operating instructions!*

*Faults which could affect safety must be rectified immediately!*

**Notes:**

- The safety valve must be installed directly on the protected pressure vessel and / or the plant.
  - The safety valve must be installed in an upright position.
  - The flow area of the port must be greater than the valve opening.
  - Protect valve against splashes
- 

**Maintenance:**

- In accordance with current Pressure Equipment Directives, the safety valve must be periodically checked for operation and reliability.
- Refill annually lubricating oil:  
Oil filling position:  
Hole on the spacer (see arrow, Figure 1)
- Oil quantity: 5-10 drops



Figure 1: Position for oil refill

*To be used lubricating oil for the safety valve: L&W Article N°. 008500*

---





## INFORMATION ON THE SERVICE LIFE OF L&W HIGH PRESSURE HOSES





## CONTENTS

---

### Testing hose lines

Testing hose lines .....	3
Testing after assembly and before commissioning.....	3
Recurring test .....	4
Procedure for hose lines found to be "defective" .....	4
Test intervals.....	4
Persons qualified to test hose lines .....	5

### Maintenance

Replacing hose lines .....	6
Immediate replacement of hose lines .....	6

### Service life

Service life of L&W high pressure hoses .....	7
---	---

### Storage

Storing hose lines .....	8
--------------------------	---

### Annex

Scope of testing, test criteria .....	10 - 11
---------------------------------------	---------

E

## TESTING HOSE LINES

---

### Testing hose lines

Ein An essential factor in ensuring operational safety when handling L&W compressors is the proper testing of the hose lines used.

Tests are necessary:

- After assembly and before commissioning the hose line
- After accidents, changes (modifications) to the compressor system, longer periods of non-use and damage due to, for example, collisions or natural phenomena (extraordinary test).
- After carrying out repair work on the compressor system that could compromise safety.
- Recurrently at fixed, regular intervals

The proprietor must determine the type, scope and deadlines for the tests according to his or her individual operating conditions and on the basis of a risk assessment. **The specifications and recommendations of the manufacturer must be observed.** The specifications made regarding type, scope and deadlines (as well as the replacement intervals) must be documented in writing as occupational health and safety measures.

The results of the tests must also be recorded, e.g. together with the test report of the machine, and kept at least until the next test.

The above-mentioned tests may only be carried out by persons who are qualified to do so and who are authorized by the company (employer).

### Testing after assembly and before commissioning

In the test after assembly and before commissioning, factors relating to assembly or factors that can only be evaluated on the fully assembled machine must be assessed.

The assembled hose lines must also be assessed.

Some test points can already be assessed during a visual inspection when the machine is switched off.

An overview of the recommended scope of testing for a visual inspection of hose lines is given in the appendix. Further test points included in the test of hose lines before commissioning, require a functional test with the machine running.

A recommendation for the scope of testing is given in the appendix.

## TESTING HOSE LINES

### Recurring test

Since hose lines are subject to influences that cause damage during operation and can lead to dangerous situations, they must be tested recurrently at fixed intervals. The aim of recurring tests is to detect and repair damage in good time.

The objective is to ensure that the system remains in a safe condition.

### Procedure for hose lines found to be "defective"

If defects are found during the testing of the hose line that impair the safe condition of the work equipment, these must be rectified immediately. If this is not possible, suitable measures must be taken to ensure that the machine cannot be used further before it is repaired. Defective hose lines must be replaced before the machine can be used further.

It is not permitted to repair or reassemble damaged hose lines with old, previously used parts!

If several hose lines are replaced at the same time, precautions must be taken to prevent mix-ups of the connections or the installation points

### Test intervals

for the recurring tests of the hose lines should already be set before commissioning. Otherwise, there is a risk that work equipment will continue to be used or operated for too long without being tested.

The intervals between the recurring tests must be selected in such a way that deviations from the safe operating condition of work equipment can be detected and eliminated in good time.

The intervals for recurring tests specified here are guidelines and based on experience. Shorter test intervals may have to be specified on the basis of the risk assessment; special operating conditions; or according to the manufacturer's specific instructions in the machine operating manual. Longer test intervals may also be specified, provided that this is justifiable and tenable from a safety point of view.

The determination of the test intervals should be documented.

Type of test	Recommended test intervals
Visual inspection	Before commissioning the system
Functional test	Annually with previous visual inspection

## TESTING HOSE LINES

---

### Persons qualified to test hose lines

A qualified person is a person who, through his or her professional training, professional experience and recent professional activity, has the necessary specialist knowledge required for testing work equipment - in this case for testing hose lines.

These requirements are defined in the Technical Rules for Industrial Safety TRBS 1203

"Qualified persons - general requirements" fulfilled if:

- the qualified person has completed a professional training that enables his or her professional knowledge to be determined in a comprehensible manner, i.e. based on professional qualifications or comparable evidence. For the testing of hose lines, the person concerned must have completed a technical professional training or another technical qualification sufficient for the intended testing tasks. The object is to guarantee that the tests will be carried out properly.
- proof of practical use at work of the equipment to be tested as well as the associated professional experience is provided. The qualified person must be sufficiently familiar with the conditions that demand the performance of tests, such as the result of the risk assessment or observations during the working day
- there is proof of recent professional activity in the area of the upcoming tests and appropriate further training. The qualified person must also have gained experience with regard to the tests to be performed or comparable tests. He or she must also have knowledge of the state of the art with regard to the work equipment or components to be tested as well as the hazards to be considered. This also includes knowledge of the relevant technical regulations and the updating of this knowledge, e.g. through participation in training courses/instruction.

The qualified person is not subject to any technical instruction during the course of his or her testing activity and must not be disadvantaged because of this.

Experts who have carried out tests on the hose lines up to now and who meet the three criteria mentioned above and who have familiarized themselves with the contents of the German Ordinance on Industrial Safety and Health and the changes associated with it are also considered qualified persons to whom the tests can continue to be assigned.

See also:

- ⇒ § 2 para. 7 of the German Ordinance on Industrial Safety and Health,
- ⇒ Technical Rules for Operational Safety TRBS 1203.

## MAINTENANCE

---

### **Replacing hose lines**

As a general rule, even when stored properly and subjected to permissible stress during use, all hose lines are subject to natural aging, which changes the material and composite properties and reduces the performance of the hose lines.

This limits the service life of a hose line and the operator must ensure that hose lines are replaced at appropriate intervals

### **Immediate replacement of hose lines**

Hose lines must be replaced immediately in the event of the following defects:

- External visible damage to the hose line or fittings.
- Internal damage to the tube or the reinforcement.
- Leakage from the hose line or the fittings.
- Deformation of the hose line or the fittings.

E

## SERVICE LIFE

### Service life of L&W high pressure hoses

When determining the service life or the replacement interval of the individual hose lines, the concrete specifications and recommendations of the hose line or machine manufacturer must be observed. Furthermore, empirical values resulting from previous tests done under the prevailing operating conditions on site are also relevant.

Guideline values for recommended replacement intervals of hose lines which have proven themselves in practice are summarized below.

line requirements	replacement intervals
Standard requirements	6 years (Service life including a maximum of 2 years storage time)
Increased requirements, e.g. due to - increased operating time, e.g. multi-shift operation, or short machine or pressure pulse cycle times - strong external and internal influences (due to the medium), which greatly reduce the service life of the hose line	2 years (service life)

The guideline given above for a replacement interval of six years for hose lines meeting normal requirements includes a maximum storage period of two years. The guideline value of two years for hose lines meeting increased requirements represents the maximum permissible service life.

A prolongation of the guideline values given above for replacement intervals is possible if

- appropriate test values and empirical values are available from the operator of the machine which permit safe continued use beyond the recommended maximum service period,
- a hazard or risk assessment, documented in writing, has been carried out by the operator, which also takes into account protective measures in the event of failure of hose lines, and
- tests for safe working conditions are carried out by qualified persons at appropriately set, if necessary reduced, intervals.

It must be ensured that the prolongation of the replacement intervals does not result in a dangerous situation that could injure employees or other persons.

If hose lines fail during operation or if damage or defects are frequently detected during the recurring tests, then, in addition to investigating the causes, the test and replacement intervals must be shortened.

## STORAGE

---

### Storing hose lines

When storing hose lines, storage conditions must be aimed at minimizing the natural aging that occurs over time and the associated change in material and composite properties.

For this purpose, the following information must be provided:

- Store in a cool, dry and low-dust place.
- Low-dust storage can be achieved, for example, by wrapping the hoses in plastic film.
- Avoid direct sun or UV radiation.
- Shield from nearby heat sources.
- Avoid storage temperatures below -10 °C for elastomers.
- Do not use ozone-generating light fittings or electrical devices that may produce sparks in the immediate vicinity.
- (Ozone-generating light fittings are, for example, fluorescent light sources, mercury vapor lamps).

The most favorable storage conditions are temperatures between +15 °C and +25 °C, as well a relative humidity below 65 %.

During storage, hose lines must not come into contact with substances that could cause damage, e.g. acids, alkalis, solvents. Penetration of ozone or other harmful air constituents can be prevented by sealing the ends or by wrapping the hoses in plastic film. They must be stored flat and free of tension.

The storage period for hose lines should not exceed two years.





## ANNEX

## **ANNEX: SCOPE OF TESTING, TEST CRITERIA**

### **Recommended scope of testing "visual inspection" (before initial commissioning or recommissioning)**

- Is all user information required for safe operation of the system available (e.g. flow chart, operating instructions)?
- Do the hose lines comply with the flow chart or parts list?
- Are there protective measures in place, such as pressure relief valves, for cases of unusually high pressure pulses or pressure amplifications?
- Are the hose lines marked with the name or abbreviation of the manufacturer, maximum permissible operating pressure, nominal diameter, quarter/year of manufacture?
- Are the hose lines installed in such a way that, in accordance with DIN 20 066
  - - the natural position does not hinder movement?
  - turning or twisting of the hose is prevented, likewise tensile load caused by a line that is too short and a bending radii that is too small?
  - the hose is routed via a kink protector (if necessary on the connecting element)?
  - sufficient clearance prevents external mechanical influences or abrasion on the edges?
  - hose bridges prevent damage being caused by driving over the hose line?
  - hose guides (such as hose saddles and sufficiently wide hose brackets) protect loosely laid hose lines and
  - a heat shield protects against high temperature exposure?
- Are suitable protective measures, such as fixtures, safety gear or shielding provided for hose lines that, in the event of failure, pose a risk of whipping?
- A risk is to be assumed if persons are generally present in the immediate vicinity of the hose lines, for example.
- Do the hose lines of newly commissioned or re-commissioned machines already show signs of damage?
- Are the installed hose lines still within the storage/use period recommended by the relevant manufacturer?
- Are the hose lines free of paint?
- Are the hose lines free of chafe marks?
- Does the operating manual contain information on test intervals? If so, what?

#### **Note:**

The installed hose lines should not be made from used hoses or used press fittings that have already been in use as part of a hose assembly!



## **ANNEX: SCOPE OF TESTING, TEST CRITERIA**

---

### **Recommended scope of testing "Functional test"** **(before initial or recommissioning)**

Note:

Visual inspection must be carried out before the functional test

- All parts of the system must be tested at least at the maximum working pressure that could be achieved taking into account all intended applications:
  - Are the hose lines and connecting elements free of leakage?
  - Have all hose lines withstood the pressure?

Note:

The installed hose lines should not be made from used hoses or used press fittings which have already been in use as part of a hose assembly!

E